

GE
Security

NetworX™ Series

NX-8E Control Panel

Installation manual



imagination at work

CONTENTS

CONTENTS	3
GENERAL INFORMATION.....	5
ORDERING INFORMATION	5
FEATURE DEFINITIONS	6
PROGRAMMING THE NX-8E KEYPADS.....	13
PROGRAMMING THE NX-8E LED KEYPADS	13
PROGRAMMING THE NX-148 LCD KEYPADS.....	17
KEYPAD FUNCTIONS FOR THE NX-148 LCD KEYPAD	20
PROGRAMMING THE NX-8E CONTROL PANEL.....	25
PROGRAMMING THE NX-8E CONTROL PANEL VIA THE LED KEYPAD.....	25
<i>ENTERING THE PROGRAM MODE.....</i>	25
<i>SELECTING THE MODULE TO PROGRAM.....</i>	25
<i>PROGRAMMING A LOCATION.....</i>	25
<i>EXITING A LOCATION.....</i>	25
<i>EXITING THE PROGRAM MODE.....</i>	26
<i>PROGRAMMING DATA.....</i>	26
<i>LOADING FACTORY DEFAULTS.....</i>	27
<i>ENROLLING MODULES AND KEYPADS.....</i>	27
PROGRAMMING THE NX-8E CONTROL PANEL VIA LCD KEYPAD.....	29
<i>ENTERING THE PROGRAM MODE.....</i>	29
<i>SELECTING THE MODULE TO PROGRAM.....</i>	29
<i>PROGRAMMING A LOCATION.....</i>	29
<i>EXITING THE PROGRAM MODE.....</i>	31
<i>LOADING FACTORY DEFAULTS.....</i>	31
<i>ENROLLING MODULES AND KEYPADS.....</i>	31
IMPORTANT REMARKS.....	32
TAMPER MEMORIZATION	32
DISABLING TAMPER ALARMS IN PROGRAM MODE	32
KEYPAD TAMPER LOCKOUT.....	32
CONTROL PANEL PROGRAMMING LOCATIONS.....	33
TELEPHONE NUMBER 1.....	33
FORMAT SELECTIONS	34
REPORTING EVENTS TO PHONE NUMBER 1.....	35
TELEPHONE NUMBER 2.....	36
REPORTING EVENTS TO PHONE NUMBER 2.....	37
REPORTING EVENTS TO PHONE NUMBER 3.....	39
SPECIAL FORMATS	41
DOWNLOAD PARAMETERS.....	42
FEATURE AND REPORT SELECTIONS (FOR PARTITION 1)	43
ENTRY/EXIT TIMERS.....	44
ZONE CONFIGURATIONS AND PARTITION SELECTION	45
GENERAL OPTIONS	51
PROGRAMMING THE OUTPUTS	55
SETUP FOR AUTO-TEST, AUTO-ARM AND OPENING/CLOSING TIMES	58
COMMUNICATOR CODES FOR SLOW SPEED FORMATS ONLY	60
PROGRAMMING PARTITION PARAMETERS	68



PROGRAMMING ZONE CONFIGURATION GROUPS	73
NX-8E PROGRAMMING WORKSHEETS	94
BOARD INSTALLATION	115
NX-8E WIRING DIAGRAM	116
TERMINAL DESCRIPTION.....	117
TECHNICAL SPECIFICATIONS.....	118
TECHNICAL SPECIFICATIONS NX-8E.....	118
TECHNICAL SPECIFICATIONS NX-108, NX-116, NX-124.....	118
TECHNICAL SPECIFICATIONS NX-1308, NX-1316, NX-1324.....	119
TECHNICAL SPECIFICATIONS NX-148.....	119
APPENDIX 1: REPORTING FIXED CODES IN CONTACT-ID AND SIA.....	120
APPENDIX 2: REPORTING ZONE CODES IN SIA OR CONTACT ID	121
APPENDIX 3: EXPANDER NUMBERS FOR REPORTING EXPANDER TROUBLE	123
KEYPADS.....	123
REMOTE POWER SUPPLY NX-320E	123
WIRELESS RECEIVER NX-448E.....	123
OUTPUT MODULE NX-507E OR NX-508E.....	124
HARDWIRED EXPANDER NX-216E	124
CE DECLARATION	125

GENERAL INFORMATION

The NX-8E NetworX from Caddx represents a new approach to the design of security systems. The NX-8E is probably the most flexible, durable, and user-friendly control panel ever seen in our industry. Its features include sophisticated software enabling as many as 240 users to interface up to 192 zones, 8 partitions, with access, audio verification, and input/output modules, all reported with SIA and Contact ID formats which are extremely fast and very comprehensive. Thanks to the NetworX design, a fully loaded system can be housed in one single metal enclosure, establishing for the first time, a logical solution and design response to modular systems. Up to 32 modules can be added to expand the capabilities of the NX-8E.

ORDERING INFORMATION

For detailed ordering information and part numbers, please refer to the EMEA Distribution price list of the Caddx product range.

FEATURE DEFINITIONS

Abort

If this option is enabled, the NX-8E will wait the programmed number of seconds (0-255) in location 40 prior to sending an alarm. During this delay time, the "Cancel" LED will flash. To abort the report, type in a code and press the [Cancel] key. The LED will go out. If the report is not aborted within the allotted time, the LED will go out when the report is sent. The dialler delay is programmed at **location 40, segment 8**. Each zone can be defined as a "dialler delay zone" by defining the relevant option in **segment 3** of the appropriate zone configuration group (see locations 110-169).

AC fail / low battery report/warning

The NX-8E can be programmed to report an AC failure and/or low battery conditions to the central station. It can also be programmed to sound the keypad immediately when the condition is detected. The AC failure report/warning can be delayed (see locations 37, 39 and 40).

AC power / low battery sounder alert

If this option is enabled, the NX-8E will beep the keypad sounder upon arming or disarming, if the AC power is not present or if a low battery has been detected (see location 23, segment 2).

Arm / disarm codes

The NX-8E may have 240 four-digit codes or 160 six-digit codes to arm/disarm the control panel. All the codes must have the same number of digits. The factory default for user 1 is **[1]-[2]-[3]-[4]** when using a 4-digit code, or **[1]-[2]-[3]-[4]-[5]-[6]** for a 6-digit code. This code can then be used to enter the new arm/disarm codes (see location 41).

Automatic arming

If this option is programmed, the NX-8E will auto arm at a specified time. At that time, the keypad will beep for 50 seconds before the panel arms. If the arming process is stopped by typing a code on the keypad, the NX-8E will attempt to arm 45 minutes later. This time will be extended if there is any activity in the building which causes the "Ready" LED to be turned off and on. The auto arming of a partition can be programmed so that it is silent. If closing reports are sent, the user code will be 97 (see locations 23 segment 2, and 52-55).

Automatic bypass / instant arming

When this option is enabled, the control panel can automatically bypass interior follower zones if no exit is detected during the exit delay time. Entry delay zones can also be made instant (see location 23, segments 1 and 2).

Auto-test

This feature will cause the panel to call the central station, in order to report a communicator test at a specified interval (see location 51). Also, the auto-test report may be enabled ONLY when the control panel is armed see location 37 segment 4).

Auxiliary outputs

The NX-8E has two programmable relay outputs and four open collectors which can be used to activate LED's, sirens, flashes, etc. (see the terminal description and locations 47-50).

Auxiliary power overcurrent

The NX-8E will light up the "Service" LED on the keypad whenever too much current is being drawn from any device powered by the system. This condition can be reported to the central station (see location 37 segment 3).

Box tamper

The NX-8E has an input for a normally closed tamper switch (see wiring diagram). The box tamper can be programmed to report, and/or sound the siren and/or the keypad. These terminals can be enabled or disabled by programming (see locations 37 segment 2 and 3, and location 39).

Built In siren driver

The NX-8E has a built-in 112 dB siren driver. If desired, this built-in driver can easily be converted to a 1 amp voltage output by programming (see location 37 segment 2).

Bypass toggle

This feature will enable the end user to toggle (turn on or off) the bypass of an interior zone while the system is armed. This is done by pressing the [Bypass] key (see location 23 segment 2).

Call back

When this feature is enabled, the control panel will use the call back phone number to call the download computer before it begins a download (see locations 21 and 22).

Cancel

If this feature is enabled, the NX-8E will send a "Cancel" report when the system is disarmed and the [Cancel] button is pressed within 5 minutes of an alarm. Once the [Cancel] key has been pressed, the "Cancel" LED will light up until the central station acknowledges the "Cancel" report (see location 23 segment 3).

Chime

This feature can be turned on and off using the "chime" key. When the system is in the disarmed state, a trip on selected zones will generate either a DING-DONG or a single tone through the keypad sounder (depending on the keypad programming). This lowest level of security can be enabled by zone; this is done by programming the appropriate zone configuration for it, or by customizing its zone configuration (see locations 111-169).

Code required options

The NX-8E can be programmed to require a code in order to bypass zones and/or to initiate a download using the [*]-[9]-[8] or [*]-[9]-[9] function (see locations 23 segment 2 and 41).

Communication formats

The NX-8E can report in multiple formats. You are recommended to use Contact ID or SIA formats if possible. If you wish to report to a pager or to a central station in a 4+2 format, you must program each code that is to be reported (see locations 56-83 and 111-169).

Configuration groups

The NX-8E has 30 configuration groups that determine how each zone will function and report. The default configuration groups are listed on pages 44-46. All configuration groups are fully programmable via downloading and via the keypad (see locations 111-169).

Cross zoning

This feature requires two or more trips within a specified time on one or more zones that are programmed as “cross zones” before it will report an alarm. During the time between trips, the NX-8E can be programmed to sound the keypad and/or the siren. The NX-8E can also be programmed to report an alarm after two or more trips on the same zone. **The first trip on a cross-zone is also logged** (see locations 37 segment 1, 39, 40 and 110-169).

Daylight savings time

The NX-8E has the possibility to switch automatically from summer to wintertime and vice versa. This option will move the clock backward on the last Sunday of October (3 a.m. becomes 2 a.m.) and will move the clock forward on the last Sunday of March (2 a.m. becomes 3 a.m.) (see location 37, segment 5, option 8).

Dual / split / multiple reports

The NX-8E can send communication reports to three different phone numbers for dual, split or multiple reports: these can be selected by event or by partition (see locations 4, 10, and 16).

Duress code

If a duress code is programmed, the NX-8E will send a duress signal whenever the panel is armed or disarmed with this code. If open/close reports are sent, the user code will be 254 (see location 44).

Dynamic battery test

The NX-8E can be programmed to perform a dynamic battery test for a selected duration when the panel is armed or disarmed for the first time each day. The NX-8E can also be programmed to perform a ‘missing battery’ test every 12 seconds (see locations 37 segments 2 and 3 and location 40). A low battery si

End of line resistor defeat

The NX-8E can be programmed to make zones 1-8 for normally closed operation only, eliminating the need of the end of line resistors on these zones. When a zone is programmed for normally closed operation, a short on that zone will not change the loop condition, and an open on that zone will produce a faulted condition. This feature will be ignored by any priority zone (see locations 110-169).

Entry-guard

This unique low level arming mode has been developed to reduce the most common source of false alarms. When armed in the “Stay Instant” mode, opening any zone designated as an “Entry Guard Zone” will initiate the keypad sounder and start the entry delay before generating an alarm. All the other zones will function as normal. This arming mode will encourage system owners to use their systems more frequently when the premises are occupied (see locations 111-169).

Exit error

If this option is enabled, the NX-8E will send an “Exit Error Report” when an entry/exit zone is faulted, at the instant the exit delay expires. This report will be sent together with the user number that was used to arm the system, provided that the panel is not disarmed before the entry delay expires. The alarm report will also be sent. Even if this feature is not enabled, the siren will sound if any entry/exit zone is faulted, as soon as the exit delay expires (see location 23 segment 3).

Expander trouble

The NX-8E will report expander trouble to the central station if this option is enabled. This condition will light up the "Service" LED on the keypad, even if it is not reported.

NOTE: The keypads are considered to be expanders. The number of expansion devices that are reported can be found in appendix 3 (see location 37 segment 3).

Early to Open/ Late to Close

If an opening occurs before the opening and closing times, the NX-8E will send an "Early Open" report. If it fails to close on or before the designated closing time, the NX-8E will send a "Late to Close" report. (see location 23 segment 4)

Fail to communicate

The NX-8E will light up the "Service" LED if a report fails to reach the central station. If this option is enabled, a fail to communicate code will be reported when the next report is successfully communicated. **A fail to communicate is always logged as "data lost"** (see location 37 segment 4).

Final set door

If this feature is enabled, it will only be applicable for secondary entry/exit zones (f.e. configuration group 9 or 19). If the final set door option is enabled, the exit time will immediately expire as soon as the secondary entry/exit zone (type 9 or 19) becomes ready again. This feature can only be used in combination with magnetic contracts (see location 23, segment 2, option 8).

Fire alarm verification

When this feature is enabled, the NX-8E will verify a fire alarm by requiring more than one trip on a smoke detector (the same or another one) within a specified time (120-255 seconds) before it generates an alarm (see location 40 segment 9).

First opening/last closing report for multiple partitions

If this feature is enabled, the NX-8E will only transmit a closing report after ALL partitions have been armed. An opening report will be sent as soon as one partition has been disarmed (see location 37).

Force arming

If this option is enabled, the NX-8E can be "Force Armed" when zones have been violated. In this condition, the "Ready" LED will flash if a "Force Armable" zone is not secure. At the end of the exit delay, these zones will become bypassed. If these zones become secured at any time during the arming cycle, they will be unbypassed and will become active in the system. If "Bypass Report" is enabled, the force arming zones can be programmed to report bypass when they are force armed (default), or not to report bypass even if "Bypass Report" is enabled (see locations 37 segment 5, and 111-169 segment 2).

Group bypass

A designated group of zones can be programmed to bypass by pressing [Bypass]-[0]-[0]-[Bypass] prior to arming (see locations 111-169 segment 2).

Immediate restore by zone

The NX-8E can be programmed to send alarm and restore reports as soon as they occur, or to wait until the siren time has expired or the system has been disarmed. (see location 37 segment 2).

Internal event log

Up to 512 events can be stored in memory together with the date and time of the event. These events can be viewed later on via the LCD keypad, or by downloading. All reportable events are reported to the log.

Keypad activated panics

The NX-8E has three keypad activated panics that will send reports to the central station, auxiliary 1 (Fire), auxiliary 2 (Medical) and keypad panic. Auxiliary 1 will activate the steady (Fire) siren, auxiliary 2 will sound the keypad, and the keypad panic can be programmed to be silent or audible (see location 23 segment 1).

Keypad shutdown mode

This feature will extinguish all the LED's on the keypad, except the "Power" LED, after 60 seconds have elapsed without a keypress. Pressing a valid user code (not an installer code) will light up all the LED's (see location 41, segment 1, option 5). This option requires bilingual LCD keypads. This option is an alternative for LED-extinguish.

Keypad sounder control

The NX-8E can be programmed to sound the keypad sounder for certain events (see location 39).

Keypad tamper

If this option is enabled, the NX-8E will disable the keypad for 60 seconds, and will communicate a tamper signal to the central station whenever 30 keypresses are entered without producing a valid code (see location 23 segment 1).

Keyswitch arm/disarm

Any zone on the NX-8E can be programmed as a momentary or maintained keyswitch zone. If a zone has been programmed as a momentary keyswitch, momentary shorts on this zone will arm/disarm the control. A zone can be also being programmed as a maintained keyswitch. The control panel will be armed as long as such a zone is shorted. If opening/closing reports are sent, the user code will be 99 (see "default zone configurations")

LED extinguish

This feature will extinguish all the LED's on the keypad, except the "Power" LED, after 60 seconds (Norway / Sweden: 30 seconds) have elapsed without a keypress. Pressing any numeric key will light up all the LED's (see location 23 segment 2).

Local programming lockout

This feature will disable programming of all locations, or for specified locations, from the keypad (see location 21).

Log full report

A report can be sent to the central station when the event log is full (see location 37 segment 4).

Lost clock service light

The NX-8E can be programmed to light up the "Service" LED on a LED keypad or give a "Service" message on a LCD keypad when the internal clock time is invalid due to power loss. On LCD keypads, if programmed to show the system time, a "Set Clock, *97" message will always be displayed (see location 37 segment 5).

Manual test

The NX-8E can be programmed to perform a bell and/or communicator test; to do this, enter [*]-[4]-[4] while the system is in the disarmed state. Each time that [*]-[4]-[4] is entered, a dynamic battery test will also be performed (see location 37 segment 2).

Night Mode

Applies to NX-1208E / NX-1248E keypads. In this mode, the control panel will bypass all zones that have the Entry Guard feature enabled. (See location 23 and 111-169)

On board zone disable

The eight zones on the NX-8E panel can be disabled, in order to obtain a completely wireless alarm system. A mix of hardwired and wireless zones for zones 1-8 is also possible (see location 37 segment 5).

Partitions

The NX-8E can be partitioned into a maximum of eight separate systems with distinct reporting codes, user codes, and operating features for each system (see locations 26- 36 and locations 171-205).

Program code

The factory default for the "Go To Program" code is [9]-[7]-[1]-[3] when using a 4-digit code; or, if the 6-digit option is used, the default is [9]-[7]-[1]-[3]-[0]-[0]. The program code can also be used as an arm/disarm code. If it is used as an arm/disarm code, and if open/close reports are sent, the user code will be 255 (see location 43).

Quick arm feature

The NX-8E has a single-button "Quick Arm" feature which can be used to arm the system by pressing the [Exit] key or the [Stay] key on the keypad. If closing reports are sent, the user code will be 98 (see location 23 segment 1).

Recent closing

If this option is enabled, the NX-8E will send a "Recent Closing Report" to the central station if an alarm occurs within 5 minutes after the panel is armed. The user number that was used to arm the system will also be sent (see location 23 segment 3).

Re-exit

The NX-8E can restart the exit delay for a quick exit without the need to disarm the system; this is done by pressing the [Exit] key while the system is still armed (= after exit delay has expired). The re-exit is also logged (see location 23 segment 1).

Shutdown

This mode will cause the keypads to extinguish all LED's, except the "Power" LED, and to refuse keypresses (see location 21).

Siren blast for arming

The NX-8E can be programmed to give a one-second siren blast when the panel is armed, at the end of the exit delay, or when the central station receiver acknowledges the closing report. It can also give one blast for remote (keyswitch) arming, and two blasts for remote disarming (see location 37 segment 1).

Siren supervision

The NX-8E has a "Siren Supervision" circuit that will constantly monitor the siren on the NX-8E; it can also be programmed to report if the wires are cut (see location 37 segment 3).

Silent exit option

The exit delay can be silenced by pressing [*]-[Exit] before arming the control panel, or when using the re-exit feature. The exit delay can also be silenced permanently in all partitions (see location 37 segment 5).

Start/end programming and end downloading

A report can be sent when local programming is started and ended. A report can also be sent when a download session ends (see location 37 segment 4).

Swinger shutdown

This feature allows one or more zones to be bypassed automatically after a specified number of alarms. If immediate restore is enabled in location 37, the alarms (and restores, if this option is enabled) will be sent as they occur. If immediate restore is not enabled, a second or subsequent alarm will not be sent until the siren times out (see location 37 segment 2 and location 38).

Telephone line monitor

The NX-8E has a telephone line monitor which monitors the voltage and current of the telephone line, in order to detect a faulty phone line. This condition can also be reported to the central station. If the report is enabled, only the telephone line restore will be reported. **A telephone line cut is always logged** (see locations 37 segment 3, location 39 and location 40 segment 5).

Two call answering machine defeat

If this option is enabled, two telephone calls must be made to the premises in order to defeat an answering machine. On the first call, let the phone ring one or two times. The control panel will detect these rings and start a 45-second timer; during this time, the control panel will answer the next call on the first ring. This is not recommended for commercial applications (see location 21).

User authorization to enter program mode

Entering program mode via the installer code is only possible within 60 seconds following a user code entry (for Norway/Sweden: 30 seconds) (see location 41, segment 1, option 6).

Walktest mode

Walktest mode is used to test your system without activating the siren and/or communicator. The walktest mode is activated by pressing [*]-[chime] followed by the master code.

Walktest mode is not possible if any partition is armed or if the communicator is active.

Wireless sensor absent/low battery

The NX-8E will send a report to the central station when a wireless sensor has detected a low battery, or has not reported to the receiver. The "Service" LED will light up when either of these conditions exists (see location 37 segment 4).

Zone activity monitor

This feature will send a report to the central station when a particular zone does not change conditions within the specified number of hours/days programmed (see location 37, location 40 and locations 110-169).

Zone bypassed sounder alert

With this feature enabled, if a zone is bypassed, the NX-8E will beep the keypad sounder when the zone is armed (see location 23 segment 2).

PROGRAMMING THE NX-8E KEYPADS

Programming the NX-8E LED keypads

This section describes how to program the address and partition for each keypad, and it also explains the options that are available. The address of the keypad is important because the panel uses it to supervise the keypads.

The factory default for the master code is **[1]-[2]-[3]-[4]** when using a 4-digit code, or **[1]-[2]-[3]-[4]-[5]-[6]** for a 6-digit code. The factory default for the "Go To Program" code is **[9]-[7]-[1]-[3]** for a 4-digit code, or **[9]-[7]-[1]-[3]-[0]-[0]** for a 6-digit code.

[*]-[9]-[3] SET KEYPAD OPTIONS

1. Enter **[*]-[9]-[3]** [program code]- the "Service" LED will flash.
2. LED's 1-8 can now be toggled on/off to enable/disable the following functions:
3. After enabling/disabling the desired functions press [*]

LED	Keypad feature enabled
1	Box tamper on
2	Enable silent keypad option (no entry/exit delay sounder, no chime)
3	Enable Ding Dong sound for chime - If this is off, the chime will be a single tone (see location 40).
4	Enable keypress silence option (Silences the pulsing keypad sounder for 5 seconds when a key is pressed).
5	Enable armed status suppression (Will not allow the keypad to display faulted or bypassed zones when the system is armed).
6	Enable panic, fire, medical beep tone (Will sound a short beep to verify that the keypress has been accepted).
7	Suppresses the "Service" LED (Will not allow the "Service" LED to light up for any reason. If there is a system malfunction (trouble), pressing [*]-[2] will still display the service menu.)
8	Enable multi-partition viewing (Enables temporary viewing of all partitions, by pressing [*]-[1]-[partition number]).

[*]-[9]-[4] SET KEYPAD NUMBER AND PARTITION

1. Enter [*]-[9]-[4]-[program code]- the "Service" LED and the "Instant" LED will flash.
2. Enter the keypad number (1-8).
3. Press [*]- the "Instant" LED will illuminate steadily, and the "Service" LED will carry on flashing.
4. Enter the partition number for the keypad. The keypad will automatically exit this mode now).

[*]-[9]-[5] SET ELAPSED INCREMENTS (HOURS/DAYS) SINCE LAST AUTOTEST

1. Enter [*]-[9]-[5]-[program code]- the "Service" LED will flash.
2. Enter [100's digit] -[10's digit]-[1's digit]-[#].

[*]-[9]-[6] SET SYSTEM DATE

1. Enter [*]-[9]-[6]- the "Service" LED will flash.
2. Enter [master code]-[day of week (1=Sun)]-[month 10's digit]-[month 1's digit]-[day 10's digit].
3. [day 1's digit]-[year 10's digit]-[year 1's digit].

[*]-[9]-[7] SET SYSTEM CLOCK

1. Enter [*]-[9]-[7]- the "Service" LED will flash.
2. Enter [master code]-[hour 10's digit]-[hour 1's digit]-[minutes 10's digit]-[minutes 1's digit].

Note: the clock is a 24-hour clock.

[*]-[9]-[8] INITIATE CALLBACK

Pressing [*]-[9]-[8] while the system is disarmed will cause the control panel to perform a callback for a download.

NOTE: A VALID USER CODE MAY BE REQUIRED AFTER [*]-[9]-[8], IF ENABLED IN LOCATION 41.

[*]-[9]-[9] ANSWER DOWNLOAD

Pressing [*]-[9]-[9] while the system is disarmed will cause the control panel to seize the phone line for a download.

NOTE: A VALID USER CODE MAY BE REQUIRED AFTER [*]-[9]-[9], IF ENABLED IN LOCATION 41.

[*]-[5]

CHANGING USER CODES

1. Enter [*]-[5]-[master code]- the "Ready" LED will flash.
2. Enter the 3 digit user number (always 3 digits, such as "003" for user 3)- the "Ready" LED will illuminate steadily.
3. Enter the new user code designated for the person in question - the "Ready" LED will flash, indicating that the code has been accepted. If the code is rejected, the sounder will beep 3 times.
4. If another user code needs to be programmed, return to step 2.
5. Press [#] while the "Ready" LED is flashing in order to exit the user code programming mode.
6. Pressing four times (for 4-digit code) can erase a user code or six times (for 6-digit code) the "Cancel" key.

[*]-[6]

ASSIGNING AUTHORITY LEVEL

1. Enter [*]-[6]-[master code]- the "Ready" LED will flash.
2. Enter [3 digit user number] (always 3 digits, such as 003 for user 3)- the "Ready" LED will illuminate steadily and the "Instant" LED will flash. Refer to the chart below for the description of each LED. Turn on the LED for the features that you want.

LED	ATTRIBUTES IF LED 8 IS OFF	LED	ATTRIBUTES IF LED 8 IS ON
1	Reserved	1	Activate output 1
2	Arm only	2	Activate output 2
3	Arm only after closing window	3	Activate output 3
4	Master arm/disarm (can program other codes)	4	Activate output 4
5	Arm/disarm code	5	Arm/disarm code
6	Allowed to bypass zones (see location 23)	6	Allowed to bypass zones (see location 23)
7	Code will send open / close reports	7	Code will send open / close reports
8	If this LED is on, LED's 1-7 will use the chart too the right	8	If this LED is off, LED's 1-7 will use the chart on the left

1. Enter [*]: The "Instant" LED will illuminate steadily.
 This moves you to the 'partition enable'. (This tells the system which partition this user can arm/disarm.) LED's 1-8 will light up for each partition that the user is authorised to arm/disarm. To change any of these numbers, press 1-8 to permit or deny access to the user. (Example: If LED 2 is lit, then the user has been assigned access to that partition. By pressing the [2] key, the LED will go out, indicating the user has been denied access to that partition.)
2. Enter [*]:
 This brings you back to step 2 above. At this point, you may enter another user number to which you can assign attributes. You may continue this procedure until you have assigned authority levels to all user numbers; otherwise, you may press the [#] key to exit the assigning authority level program.

NOTE:

ANY MASTER ARM/DISARM CODE CAN ADD OR CHANGE A USER CODE IF THE MASTER CODE HAS ACCESS TO THE SAME PARTITIONS AS THE CODE BEING ADDED/CHANGED. CONSEQUENTLY, WHEN PROGRAMMING THE USER CODES FOR A PARTITIONED SYSTEM, LEAVE AT LEAST ONE CODE WITH ACCESS TO ALL PARTITIONS. UNLESS YOU DO THIS, YOU WILL NOT BE ABLE TO ADD NEW USERS. (THE CODE CAN BE THE "GO TO PROGRAM CODE", IF ENABLED IN LOCATION 43). IF YOU WANT TO LET THE END USER ADD NEW CODES, YOU MUST REMOVE THE PARTITION AUTHORITY FROM ALL BLANK CODES.

[*]-[CHIME] ACTIVATING WALKTEST:

1. Enter [*]-[CHIME].
2. Enter [Master code].
3. Activate all sensors to test. Each activation of a sensor is confirmed with a "ding dong" sound with a corresponding flashing zone-indicator.
4. Enter [Master code]. Herewith the walktest-mode is left.

Remark: Walktest mode is not possible if any partition is armed or if the communicator is active.

Additional keypad functions are described in the appropriate user manual
--

Programming the NX-148 LCD keypads

This section describes how to program the address and partition for each keypad, and it also explains the options that are available. The address of the keypad is important because the panel uses it to supervise the keypads.

The factory default for the Master code is **[1]-[2]-[3]-[4]** when using a 4-digit code, or **[1]-[2]-[3]-[4]-[5]-[6]** for a 6-digit code. The factory default for the "Go To Program" code is **[9]-[7]-[1]-[3]** when using a 4-digit code, or **[9]-[7]-[1]-[3]-[0]-[0]** for a 6-digit code.

[*]-[9]-[1] ADJUSTING THE VIEW / BRIGHTNESS OF THE LCD

- | | |
|---|---|
| 1. Enter [*]-[9]-[1] | The LCD screen will prompt for a "master" code. |
| 2. Enter [master code] | The LCD will now prompt you to increase or reduce the viewing angle. By using the scroll keys to the right of the LCD, you can increase or reduce the text-viewing angle. |
| 3. To advance to the brightness option, press [*] | The LCD will prompt you to brighten or dim the LCD lighting. Use the scroll keys again to set the desired brightness. When completed, exit by pressing [*]. |

[*]-[9]-[2] PROGRAMMING CUSTOM MESSAGES IN THE KEYPAD

- | | |
|---|--|
| 1. Enter [*]-[9]-[2] | The LCD screen will prompt for the "Go To Program" code. |
| 2. Enter [program code] | The LCD will now prompt you to enter the message number followed by [#]. Zones 1 through 192 custom messages are message numbers 1-192 respectively.
Message 193 - Custom message top line.
Message 194 - Custom message bottom line.
Message 195 - Shutdown message top line.
Message 196 - Shutdown message bottom line. |
| 3. Enter message number to edit, followed by [#] | The LCD will display the zone number on the top line. The zone description will be displayed on the bottom line. Use the instructions on page 29-30 to edit character data. |
| 4. When finished, exit by pressing [EXIT] while the LCD screen is prompting for a zone message #. Any changes will automatically be copied to all other LCD keypads in the system. NOTE: If you want a LCD keypad to have a different custom message, you must enable custom message lock under the [*]-[9]-[3] function. | |

[*]-[9]-[3]

SET KEYPAD OPTIONS

1. Enter [*]-[9]-[3]
2. Enter [program code]

The LCD screen will prompt for a code.

The LCD will now prompt you through the options listed in the following chart. The current state of the option will be shown in the lower right corner of the display. Press [*] to exit the current state without any changes. Otherwise, follow the directions on the bottom line to select the desired option. When finished, press [*] to move to the next option.

OPT	KEYPAD FEATURES
1	CASE TAMPER ON? Tamper switch of keypad housing active
2	SILENT KEYPAD? Enable silent keypad option. If this is on, silent keypad is enabled for entry/exit delay and chime.
3	DING-DONG CHIME? Enable ding-dong sound for chime. If this is off, the chime will be a single tone.
4	5 SEC. SILENCE? Enable keypress silence option. Silences the pulsing keypad sounder for 5 seconds when a key is pressed.
5	ARMED ZONE INFO? Enable armed status suppression. If this is on, the keypad will not display faulted or bypassed zones when the system is armed.
6	BEEP ON PANICS? Enable panic, fire, medical beep tone. Will sound a short beep to verify that the keypress has been accepted.
7	DISABLE SERVICE? Suppresses the "Service" Message. This will not allow the "Service" message to be displayed for any reason. If there is a system malfunction (trouble), pressing [*]-[2] will still display the "Service" menu.
8	MASTER KEYPAD? Enable multi-partition mode.
9	CUSTOM MESSAGE? Enable custom message display.
10	CLOCK? Enable clock display.
11	CUSTOM MSG. LOCK? Enable custom message lock. Prevents the custom message from being overwritten during keypad copy.
12	SELECT AN OPTION 1234 - - - -

- Remark :** In the menu "Select an option" 8 additional options can be selected. The options 5 until 8 are not used for the moment and may therefore not be selected. The options 1 and 4 are described below:
- Option 1 : On the LCD screen "press * for help". By this the status of the system and the message "press * for help" are alternately displayed on the LCD screen. This is only to inform the user of the user's menu.
- Option 2 : Light continuously on. By this the lights of the LCD display and the keys will continue to light up, independently of the programming of the control panel. (Adr 23, Segm. 2, option 1 = turn off the lights after one minute of inactivity).
- Option 3 : ON if PIN should be hidden when programming user codes.
- Option 4 : ON suppresses beeps when an RF transmission is lost.
- Option 5 : Reserved **(Do not program)**.
- Option 6 : Disable ARM and BYPASS led for Norway/Sweden (NX-148E v3.47)
- Option 7 : Any zone Alarm has priority over the Pre-Alarm message "Type code to disarm" on the LCD screen (NX-148E v3.49)
- Option 8 : Reserved **(Do not program)**.

[*]-[9]-[4]

SET KEYPAD NUMBER AND PARTITION

1. Enter [*]-[9]-[4] The LCD screen will prompt for a code.
2. Enter [program code] The LCD will now prompt you for the keypad number followed by [*]. The current keypad number will be displayed in the lower right hand corner.
3. Enter the keypad number followed by [*] The LCD will now prompt you for the partition number. The current partition will be displayed in the lower right hand corner.
4. Enter the partition number for the keypad The keypad will automatically exit this mode now.

Keypad functions for the NX-148 LCD keypad

The LCD keypads have a bilingual user's interface. As a result, you can simply select a user's function on the menu. You can consult the menu by entering the [*] key.

The user of the system can easily switch from one user's interface to another and the other way around.

To select a user's function, following steps have to be performed.

Step 1 Enter the [*] key until the function you want, appears on the LCD display / screen.

Ex.

Select an option 90 = Log Review

Step 2 To select the option, you must press the appropriate option number next to the option (ex. Consulting Log Review = option 90)

To exit the user's menu, press the [#] key.

If you already know the option (ex. Log Review = 90) you can immediately select the wanted option by pressing the [*]-[9]-[0] keys. By doing this you don't have to browse through the user's menu.


In the following table you will find all functions that can be executed by the user.

USER'S MENU		
Option	Description English (1)	Description English (2)
▲ ▼	Zone Review	Zone Review
0	Set Tone	Set Tone
1	Master Mode	Master Mode
2	Service Check	Service Check
3	Alarm Memory	Alarm Memory
41	Telephone # 1	Telephone # 1
42	Telephone # 2	Telephone # 2
43	Telephone # 3	Telephone # 3
44	Test	Test
45	Display test	Display test
46	Light Control	Light Control
49	English (2)	English (1)
5	User PIN	User PIN
6	User Authority	User Authority
7	Detector Reset	Detector Reset
90	Log Review	Log Review
91	View Settings	View Settings
97	Set Date/Time	Set Date/Time
CHIME	Walktest	Walktest
EXIT	Silent Exit	Silent Exit

[*]-[9]-[0] READING THE EVENT LOG

The NX-8E has a 512-event log which can be retrieved using a master code. This log contains a listing of the last 512 events along with the date, time, and partition where each event occurred.

1. Press [*]-[9]-[0] The LCD screen will prompt you for a code.
2. Enter [master code] The LCD screen will now show the most recent event.
3. To view the events from the latest to the oldest, press the 'down' scroll key.
4. To view the events from the oldest to the latest, press the 'up' scroll key.
5. The display contains the following information.

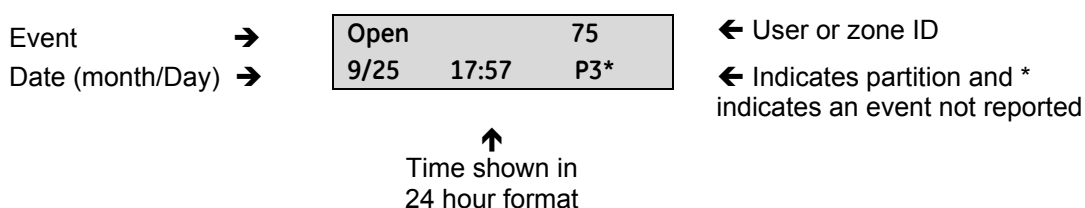

This screen shows an opening of partition 3 on September 25th at 5:27 p.m. by user 75. The [*] shows that this event is not programmed for reporting to the central monitoring station.

[*]-[9]-[5] SET INCREMENTS (HOURS/DAYS) ELAPSED SINCE LAST AUTOTEST

1. Enter [*]-[9]-[5] The LCD screen will prompt for a code.
2. Enter [program code] The LCD will now display the elapsed time screen.
3. Enter [100's digit] -[10's digit]-[1's digit]-[#]

[*]-[9]-[7] SET SYSTEM TIME AND DATE

1. Enter [*]-[9]-[7] The LCD screen will prompt for a code.
2. Enter [master code] The date and time will be displayed, with the current hour flashing.
3. Use the 'up' and 'down' scroll keys to select the proper hour.
4. Enter the [*] key to move to the minutes.
5. Repeat until you have set the entire date.

[*]-[9]-[8]

Pressing [*]-[9]-[8] while the system is disarmed will cause the control panel to perform a callback for a download. NOTE: A VALID USER CODE MAY BE REQUIRED AFTER [*]-[9]-[8], IF ENABLED IN LOCATION 41 OF THE NX-8E CONTROL PANEL.

[*]-[9]-[9]

Pressing [*]-[9]-[9] while the system is disarmed will cause the control panel to seize the phone line for a download. NOTE: A VALID USER CODE MAY BE REQUIRED AFTER [*]-[9]-[9], IF ENABLED IN LOCATION 41 OF THE NX-8E CONTROL PANEL.

[*]-[▲]

VIEW ZONE STATUS

1. Enter [*]-[▲] The LCD screen will display the zone status.
2. Use the 'up' and 'down' scroll keys to browse through the descriptions. The LCD screen will display the list of ALL zones, in sequential order by zone number.
3. Press [#] to exit this function.

[*]-[3]

VIEW ALARM MEMORY

1. Enter [*]-[3] The LCD screen will display the zone description for the zones.
2. Use the 'up' and 'down' scroll keys to browse through the alarm memory. The LCD screen will display the list, in sequential order by zone number.
3. Press [#] to exit this function.

[*]-[4]-[5]

DISPLAY TEST

The keyboard also provides a test function by the means of which the LCD display and all LED's are tested.

- Step 1 Press [*] [4] [5]. The display and the LED's will blink.
Step 2 Press the [*] key to leave the display test.

[*]-[4]-[9]

MODIFYING LANGUAGE

The possibility exists to modify the language on the LCD display from one language to another and the other way around.

- Step 1 Press [*] [4] [9]. The LCD display switches to the other language.
Step 2 To switch back to the other language, only step 1 has to be repeated.

[*]-[5]

CHANGING USER CODES:

Note: For partitioned systems, someone changing the code of another person must have access to all partitions, or to more partitions than the user being changed.

1. Enter [*]-[5] The LCD screen will prompt for a code.
2. Enter [master code] The LCD screen will prompt for a user number.
3. Enter the 3 digit user number (always 3 digits, i.e. "003" for user 3) The LCD screen will prompt for a new code.
4. Enter the new user code designated for the person in question. If the code is rejected, the sounder will beep three (3) times.
5. If another user code needs to be programmed, return to step 3.
6. To exit code programming, press [#] while the LCD screen is prompting for a new user number.
7. **REMARK: Pressing four times (for 4-digit code) can erase a user code or six times (for 6-digit code) the "Cancel" key.**

[*]-[6]

ASSIGNING AUTHORITY LEVEL

Note: You must be authorized to access the partition that you wish to add to, or remove from, another person's authority.

- | | |
|---|---|
| 1. Enter [*]-[6] | The LCD screen will prompt for a code. |
| 2. Enter [master code] | The LCD screen will prompt for a user number. |
| 3. Enter the 3 digit user number (always 3 digits, i.e. "003" for user 3) | The LCD screen will prompt for a new code. The LCD will now prompt you for the first in the following list of attributes. |

PROMPTS	If prompt 1 ("Outputs used?") is answered NO, the LCD will display the four messages below	If prompt 1 ("Outputs used?") is answered YES, the LCD will display the four messages below
Outputs used?		
Open / close report?		
Bypass enable?		
Arm / disarm?		
	Master code?	Output 4 enable?
	Sched. arm only?	Output 3 enable?
	Arm only?	Output 2 enable?
	Reserved	Output 1 enable?

- | | |
|------------------------------|--|
| 4. Enter a partition number. | The LCD screen will prompt you for the next user code. |
|------------------------------|--|

Note: The default allows access to all partitions. The first keypress will remove access to the partition. To re-establish access, press the partition number again. When completed, press [*].

5. If another user code needs to be programmed, return to step 3.
6. To exit this feature, press [#].

NOTE:

WHEN PROGRAMMING THE USER CODES FOR A PARTITIONED SYSTEM, LEAVE AT LEAST ONE CODE WITH ACCESS TO ALL PARTITIONS. UNLESS YOU DO THIS, YOU WILL NOT BE ABLE TO ADD NEW USERS. (THE CODE CAN BE THE "GO TO PROGRAM CODE", IF ENABLED IN LOCATION 43 OF THE NX-8E CONTROL PANEL). IF YOU WANT TO LET THE END USER ADD NEW CODES, YOU MUST REMOVE THE PARTITION AUTHORITY FROM ALL BLANK CODES.

[*]-[CHIME]

ACTIVATING WALKTEST

- | | |
|---------------------------------|--|
| 1. Enter [*]-[CHIME] | The LCD screen will prompt you for a "master code". |
| 2. Enter [mastercode] | The LCD screen will display the "walktest mode" |
| 3. Activate all sensors to test | Each activation of a sensor is confirmed with a "ding dong" sound. The zone texts of the sensors who have reacted, are displayed one by one on the screen. |
| 4. Enter [mastercode] | The walktest mode is left. |

- Remark:**
1. All activations and restore conditions occurred during the walk test, can be verified by consulting the memory file (see function [*]-[9]-[0])
 2. A walk test mode is not possible if any partition is armed or if the communicator is active.

PROGRAMMING THE NX-8E CONTROL PANEL

Programming the NX-8E control panel via the LED keypad

ENTERING THE PROGRAM MODE

To enter the program mode, press [*]-[8]. When you do this, the five function LED's (Stay, Chime, Exit, Bypass, and Cancel) will begin to flash. Next, enter the "Go To Program Code" (FACTORY DEFAULT IS [9]-[7]-[1]-[3]). If the "Go To Program Code" is valid, the "Service" LED will flash and the five function LED's will illuminate steadily. You are now in the program mode, ready to select the module to be programmed.

Note: it is impossible to enter program mode if any partition - or the system - is armed.

SELECTING THE MODULE TO PROGRAM

Since all the modules connected to the NX-8E are programmed through the keypad, the module you are programming should be the first entry. To program the NX-8E control panel, enter [0]-[#]. The [0] is the module number of the control panel and the [#] is the entry key. Other module entry numbers can be found in the corresponding manuals.

PROGRAMMING A LOCATION

Once you have entered the number of the module to be programmed, the "Armed" LED will light up, to show that it is waiting for a programming location to be entered. Any location can be accessed by directly entering the desired programming location, followed by the crosshatch (pound) [#] key. If the location you enter is valid, the "Armed" LED will go out, the "Ready" LED will light up, and the binary data for the first segment of this location will be shown by the zone LED's. While entering new data, the "Ready" LED will begin flashing to indicate that a data change is in process. The flashing will continue until the new data are stored, by pressing the [*] key. When you press the [*] key, the keypad will advance to the next segment and will display its data. Repeat this procedure until the last segment is reached. Press the [#] key to exit from this location, and the "Armed" LED will light up again - this means that it is waiting for a new programming location to be entered. If you want the next location in the sequence, press the [POLICE] key. If you want the previous location, press the [FIRE] key. If you want the same location, press the [MEDIC] key. To review the data in a location, repeat the above procedure, pressing the [*] key without any numeric data entry. Each time you press the [*] key, the programming data of the next segment will be displayed for review.

EXITING A LOCATION

After the last segment of a location has been programmed, press the [*] key to exit that location; this turns the "Ready" LED off and the "Armed" LED on. As before, you are now ready to enter another programming location. If you try to program an invalid entry for a particular segment, the keypad sounder will emit a triple error beep (beep, beep, beep), and it will remain in that segment awaiting a valid entry.

EXITING THE PROGRAM MODE

When all the desired changes in programming have been made, it is time to exit the program mode. Press the [Exit] key to exit this programming level, and go to the "Select a Module To Program" level. If no additional modules are to be programmed, press the [Exit] key again to exit the program mode. If there is a module to be programmed, you can select it by entering its address, followed by the [#] key (see "Selecting the Module To Program" above). The procedure for programming these devices is the same as for the control panel, except that the locations will be for the module selected.

Note: the timeout for the program mode is 15 minutes.

PROGRAMMING DATA

There are only two possible types of programming data. One type of data is numerical: data of this type can assume values from 0 -15 or 0 -255, depending on the location's segment. The other type is feature selection data: this data is used to turn features on or off. Use the following procedures when working with these two data types:

Numerical data: entering a number from 0-255 on the numeric keys of the system keypad programs numerical data. To view the data in a location, a binary process is used. With this process, the LED's for zones 1 through 8 are utilized, and the numeric equivalents of their illuminated LED's are added together to determine the data in a programming location. The numeric equivalents of these LED's are as follows:

Zone 1 LED = 1	Zone 2 LED = 2	Zone 3 LED = 4	Zone 4 LED = 8
Zone 5 LED = 16	Zone 6 LED = 32	Zone 7 LED = 64	Zone 8 LED = 128

Example: If the numerical data to be programmed in a location is "66", press [6]-[6] on the keypad. The LED's for zone 2 and zone 7 will light up, showing that 66 is in this location (2 + 64 = 66). See the example p. 26.

Once the data has been programmed, press the [*] key to enter the data, and advance to the next segment of that location. After the last segment of a location has been programmed, press the [*] key to exit from that location - this turns the "Ready" LED off and the "Armed" LED on. As before, you are now ready to enter another programming location. If you try to program a number that is too large for a particular segment, the keypad sounder will emit a triple beep to indicate an error, and will remain in that segment awaiting a valid entry. Remark: On the LCD keypad, the number in the location will be displayed. For locations with a maximum of 15, the hexadecimal equivalent will be displayed in parenthesis. Example: 11 (B) or 14 (E).

Feature selection data: feature selection data will display the current condition (on or off) of eight features associated with the selected programming location and segment. If you press a button on the keypad (1 to 8) that corresponds to the "feature number" within a segment, this will toggle the feature (on/off). By pressing any numeric key between [1] and [8] to select a feature, you will make the corresponding LED light up (feature ON). Press the number again, and the LED will go out (feature OFF). You will see that numerous features can be selected from within one segment. For instance, if you want all eight features of a segment, pressing [1]-[2]-[3]-[4]-[5]-[6]-[7]-[8] will turn on LED's 1 to 8 as you press the keys, indicating that those features are enabled. After you have selected the setting of the features for this segment, press the [*] key. This will enter the data and advance automatically to the next segment of the location. When you are in the last segment of a location and you press the [*] key to enter the data, you will exit from that location as well. This will turn off the "Ready" LED, and will turn on the "Armed" LED. As before, you are now ready to enter another programming location.

LOADING FACTORY DEFAULTS

To load the factory defaults, enter the program mode using the procedure on page 24, then type **[9]-[1]-[0]-[#]**. The keypad will beep 3 times to indicate that loading is in progress. The loading takes about 6 seconds.

ENROLLING MODULES AND KEYPADS

For supervision purposes, the presence of all keypads, zone expanders, wireless receivers, and any other modules connected to the data terminal can automatically be found and stored in the NX-8E's memory. This allows the control panel to supervise these modules. To enroll the modules, enter the program mode for the NX-8E control panel as described above. If necessary, go on to program the rest of the control panel and the devices. When you exit from program mode, the control panel will automatically enroll the devices. The enrolling process takes about 12 seconds, during which time the "Service" LED will light up. If a module has been enrolled but it is not detected by the control, the "Service" LED will light up.

PROGRAMMING EXAMPLE (Numerical data)




Zone 1 LED = 1
Zone 4 LED = 8
Data = 9



Zone 2 LED = 2
Zone 7 LED = 64
Data = 66

To change data in a segment, enter the data followed by [*]

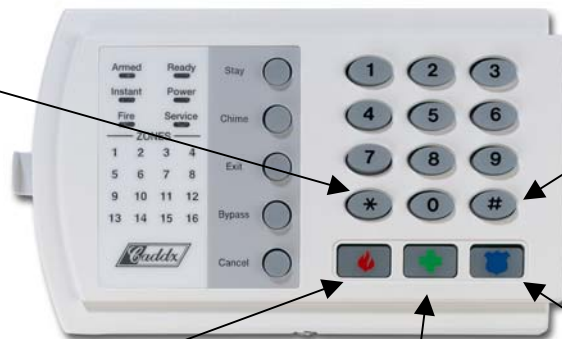

Enters the previous programming "location"

Returns to the "location" just programmed

Advances to the next programming "location"

PROGRAMMING EXAMPLE (Feature selection data)



Location 23, segment 1

- 1 = Quick arm
- 2 = Re-exit
- 3 = Auto bypass
- 4 = Silent keypad panic
- 5 = Audible keypad panic
- 6 = Keypad auxiliary 1
- 7 = Keypad auxiliary 2
- 8 = Multi-keypad tamper

Press the key on the numeric keypad that corresponds to the feature you wish to enable/disable. When a LED is "ON", a feature is enabled, when "OFF" the feature is disabled. For example, with the 1, 5 & 7 LED's "ON", quick arm, audible keypad panic and keypad auxiliary 2 are enabled.

Programming the NX-8E control panel via LCD keypad

ENTERING THE PROGRAM MODE

To enter the program mode, press [*]-[8]. The LCD screen will now prompt you for the programming code. Next, enter the "Go To Program Code" (FACTORY DEFAULT IS 9713). If the "Go To Program Code" is valid, the LCD screen will prompt you for the device address you wish to program. You are now in the program mode, ready to select the module to be programmed.

Note: it is impossible to enter program mode if any partition - or the system - is armed.

SELECTING THE MODULE TO PROGRAM

Since all the modules connected to the NX-8E are programmed through the keypad, the module you are programming should be the first entry. To program the NX-8E Control Panel, enter [0]-[#]. The [0] is the module number of the control panel and the [#] is the entry key. Other module entry numbers can be found in the corresponding manuals.

PROGRAMMING A LOCATION

Once you have entered the number of the module to be programmed, the LCD screen will prompt you for a location number. Any location can be accessed by directly entering the desired programming location, followed by the crosshatch (pound) [#] key. If the location you enter is valid, the top line of the LCD screen will display the location number on the left and the segment number on the right. The bottom line of the display will show the current data. This data will be displayed and entered according to the type of data used (numerical, binary, or character data). Follow the instructions below for each type of data.

NUMERICAL DATA: The top line of the display will show the current location number on the left and the segment number on the right. The data will be displayed on the bottom line. The hex equivalent will be shown in parenthesis. To change the data in the current location, enter the number followed by [*]. The data will be entered and the segment will be incremented by 1. The data for this segment will now be displayed. Continue this process until the last segment is programmed. When you reach the last segment, the keypad will prompt you for the next location. If you wish to exit this location before the last segment is reached, press the [#] key. This keypress will not save the changes made to current segment, but it will exit the location. To proceed to the next location, press the [Police] key. To return to the previous location, press the [Fire] key. To re-enter the last location, press the [Medic] key.

BINARY DATA: The top line of the display will show the current location number on the left and the segment number on the right. The data will be displayed on the bottom line with the numbers 1-8 in the first 8 characters. If the number appears, this binary switch is on. If minuses sign (-) appears where the number should be, this switch is off. Toggle the numbers on or off, using the corresponding number digit (1 to toggle 1, 8 to toggle 8). When the numbers are in the desired state, press the [*] key. The data will be entered and the segment will be incremented by 1. The data for this segment will now be displayed. Continue this process until the last segment is programmed. When you reach the last segment, the keypad will prompt you for the next location. If you wish to exit this location before the last segment is reached, press the [#] key. This keypress will not save the changes made to current segment, but will exit the location. To proceed to the next location, press the [Police] key. To return to the previous location, press the [Fire] key. To re-enter the last location, press the [Medic] key.

CHARACTER DATA: Character data is used to enter LCD text when programming (see [*]-[9]-[2] feature for custom messages). Custom zone descriptions and messages are stored using character or ASCII data types. This information is programmed using the bottom line of the display as a text editor. Once a character location has been entered, the current data will be displayed on the bottom line. As always, the top line will display the current location and segment number. The five (5) function keys, as well as the 'up' and 'down' arrows to the right of the display, are now used to edit the message before saving it back to the location storage. An underscore (_) in the display indicates the current cursor location. To move the cursor to the right, press the [*] key. To move the cursor to the left, press the **[Cancel] key**. To change the character at the current cursor location, press the **Up or Down Arrow** until the desired character is displayed. To accept this character, press the [*] key. The character will remain, and the cursor will advance one space to the right.

You can also immediately select a character from the underlying table. By doing this you can quickly form a word without having to scroll down all characters in the list

Follow the procedure below to select a character:

- Step 1 Enter the double figured number of the wanted character of the table below.
- Step 2 Confirm the character by pressing the [*] key.
- Step 3 Repeat steps 1 and 2 until the complete word is formed.
- Step 4 Confirm the word by pressing the [#] key.

Key	Function
[Stay]	Inserting spaces
[Chime]	Deleting characters
[Exit]	Access the library
[Bypass]	Make a character or entire word flashing
[Cancel]	Backspace
[*]	Confirm the word or character being displayed
[#]	Finished editing the line

NX-148 LIBRARY

ALARM	DURESS	INSTANT	PIR	STORAGE
AREA	EAST	INTERIOR	PORCH	STUDY
AUDIO	EMERGENCY	JUNK	ROOM	TAMPER
BACK	EXIT	KITCHEN	RUMPUS	TELEVISION
BATHROOM	EXTERIOR	LIBRARY	SAFE	TROUBLE
BEAM	FIRE	LIGHT	SENSOR	TV
BEDROOM	FRONT	LIVING	SHOCK	UP
BUTTON	GAME	MASTER	SHOP	UTILITY
CEILING	GARAGE	MICROWAVE	SIDE	VAULT
CLOSET	GLASSBREAK	MOTION	SKYLIGHT	WAREHOUSE
DELAY	GUEST	NORTH	SLIDING	WEST
DEN	HALL	NURSERY	SMALL	WINDOW
DETECTOR	HEAT	OFFICE	SMOKE	WING
DINING	HOLDUP	PANIC	SOUND	WIRELESS
DOOR	HOUSE	PANTRY	SOUTH	YARD
DOWN	INFRARED	PHONE	STAIRS	ZONE

ALPHANUMERIC CHARACTER TABEL

1	A	20	T	39	ä	58	n	77	#
2	B	21	U	40	ä	59	o	78	\$
3	C	22	V	41	b	60	ô	79	&
4	D	23	W	42	c	61	ö	80	'
5	E	24	X	43	ç	62	p	81	(
6	F	25	Y	44	d	63	q	82)
7	G	26	Z	45	e	64	r	83	*
8	H	27	0	46	é	65	s	84	+
9	I	28	1	47	è	66	t	85	,
10	J	29	2	48	ê	67	u	86	-
11	K	30	3	49	f	68	û	87	.
12	L	31	4	50	g	69	ü	88	/
13	M	32	5	51	h	70	v	89	:
14	N	33	6	52	i	71	w	90	;
15	O	34	7	53	î	72	x	91	<
16	P	35	8	54	j	73	y	92	=
17	Q	36	9	55	k	74	z	93	>
18	R	37	a	56	l	75	!	94	□
19	S	38	à	57	m	76	"	95	°

EXITING THE PROGRAM MODE

When you have made all the desired changes in programming, it is time to exit the program mode. Press the [Exit] key to exit this programming level, and go to the "Select a Module To Program" level. If no additional modules are to be programmed, press the [Exit] key again to exit the program mode. If there is a module to be programmed, you can select it by entering its address, followed by the [#] key (see "Selecting the Module To Program" above). The procedure for programming these devices is the same as for the control panel, except that the locations will be for the module selected.

Note: the timeout for the program mode is 15 minutes.
--

LOADING FACTORY DEFAULTS

To load the factory defaults, enter the program mode using the above procedure, then type [9]-[1]-[0]-[#]. The keypad will beep 3 times to show that loading is in progress. The loading takes about 6 seconds.

ENROLLING MODULES AND KEYPADS

For supervision purposes, the presence of all keypads, zone expanders, wireless receivers, and any other modules connected to the data terminal can automatically be found and stored in the NX-8E's memory. This allows the control panel to supervise these modules. Note: All modules should be connected and set to unique addresses before modules are enrolled. To enroll the modules, enter the program mode of the NX-8E control panel as described above. If necessary, go on to program the rest of the control panel and devices. When you exit from program mode, the control panel will automatically enroll the devices. The enrolling process takes about 12 seconds, during this time the "Service Screen" will be displayed. If a module has been enrolled but it is not detected by the control, the "Service Screen" will be displayed.

IMPORTANT REMARKS

Tamper memorization

Tamper alarm indications (zone tampers and box tampers) can only be erased by entering the program mode. This means that tamper alarm indications can only be reset by the installer.

Disabling tamper alarms in program mode

Tamper alarms (originating from zones and boxes) will be disabled during program mode. This allows the installer to service the system without generating unwanted tamper alarms.

Keypad tamper lockout

When this option is enabled (see location 23, segment 1), the NX-8E will disable the keypad for 60 seconds, and will communicate a tamper signal to the central station if 30 keypresses are entered without producing a valid code.

CONTROL PANEL PROGRAMMING LOCATIONS

☞ For most routine installations, the "Quick Start" option will allow for enabling a majority of the options available with the NX-8E, when communicating in Contact ID or SIA formats and without partitioning. The "Quick Start" locations can be identified by the ☞ symbol.

Telephone number 1

☞ LOCATION 0 - PHONE N° 1 (20 segments, numerical data)

The first telephone number is programmed in location 0. A "14" indicates the end of the phone number. Delays of four seconds can be programmed at any point in the phone number by programming a "13" in the appropriate segment. The system will always wait for a dial tone, unless the first digit of the phone number is a "13"; in this case, it will only delay. Tone (DTMF) dialling is default. If you want pulse tone dialling, program a "15" in the segment where pulse dialling should begin. If the entire number should be pulse dialling, program a "15" in the first segment. Program an "11" for a "*", and a "12" for a "#".

Note: a zero is programmed as a "0".

☞ LOCATION 1 - ACCOUNT CODE FOR PHONE N° 1 (6 segments, numerical data)

Location 1 is used to program the account code that is sent when phone N°1 is dialled. A zero in the account code is programmed as a "0". A "10" indicates the end of the account code, so program a "10" in the segment immediately after the last digit of the account code. If the account code is 6 digits long, program all 6 segments.

☞ LOCATION 2 - COMMUNICATOR FORMAT FOR PHONE N° 1 (1 segment, numerical data)

Location 2 contains the communicator format used to transmit to the receiver that is connected to phone N°1. Consult the instructions for your central station receiver to determine which format is compatible. Select a format from the list on the following page. If you require a format other than those listed, review the override options described in location 18 in order to create the appropriate format. In order to create a special format, a "15" must be programmed in location 2 in addition to the entries in location 18. If this location contains a "0", the built-in communicator will be disabled, and the NX-8E will function as a 'local only' control.

☞ LOCATION 3 - DIAL ATTEMPTS/BACKUP CONTROL FOR PHONE N° 1 (2 segm., numerical data)

Segment 1- Dial attempts: Location 3, segment 1 is used to enter the number of dial attempts (1 to 15) which the communicator will make to phone N°1 before it ends the notification process. Factory default is "8" and the communicator will make 8 attempts to the first number.

There will be a waiting time of 12 seconds between the first two dial attempts, and a waiting time of 60 seconds between each subsequent dial attempt.

Segment 2- Phone N° 1 backup control: Programming a “0” in segment 2 of this location will cause the NX-8E to make the designated number of attempts to phone N°2 before setting the “Fail To Communicate” condition and stop reporting. Programming a “1” in this segment will cause the NX-8E to stop trying to communicate after the designated number of attempts have been made to phone N°1. If a “2” is programmed in this segment, it will cause the NX-8E to make the dial attempts in increments of two. The first two attempts will be made to phone N°1, the next two attempts to phone N°2, then repeating until the total number of attempts designated in Segment 1 is completed.

Format selections

DATA	FORMAT	DESCRIPTION
0	Local	Communicator is disabled
1	Ademco Contact ID	DTMF format (see appendix 1-2)
2	Ademco 4/2 Express	DTMF format
3	Semadigit pager format	Pager format (Not possible for Sweden and Norway)
4	Reserved	
5	Siren Tone Format	Siren sound, for domestic dialling *
6	Reserved	
7	SIA (level 1, supporting level 2 area modifier and level 3 listen-in block) or Robofon format	FSK format (see appendix 1-2). Robofon format: only for Sweden and Norway.
8	Buzzer mode pager	Pager format (for Holland)
9	Radionics extended fast with parity	Extended event code 1800hz transmit 2300hz handshake single round w/parity 40 PPS extended hex capability
10	Reserved	
11	Ademco/ Silent Knight Slow	1900hz transmit 1400hz handshake 10 PPS double round parity
12	Silent Knight 4+2 fast	Two-digit event code 1900hz transmit 1400hz handshake 20 PPS double round parity
13	Sescoa/Franklin Fast	1800hz transmit 2300hz handshake 20 PPS hex double round
14	SIA (level 1, supporting level 3 listen-in block)	FSK format (see appendix 1-2)
15	Custom format	(See location 18)
16	Vocal format	Only working with NX-535 voice module

Remark (*):

The siren tone format (format 5) can be kissed off by pressing the “*” key on the telephone set (persistent tone of 250 msec. is required).

If you want to trigger a “kiss-off” signal via a GSM, you have to take into account that this function is Network provider dependent.

Reporting events to phone number 1

Phone N°1 has two programming locations that are used to select the events which are reported to this phone number.

Location 4 is used to select which events are reported to phone N°1. Location 5 is used to select which partitions are reported to phone N°1. If you do not want dual or split reporting, use location 4 to select all events to phone N°1, and leave location 5 at the factory default of "0". If you want dual or split reporting, and the split is based on the event type (such as alarm, open/close, etc.), you should use location 4 to select only those events that should be reported to phone N°1, and you should leave location 5 at the factory default of "0". If you want dual or split reporting, and the split is based on partition, you should program location 4 as a "0" and use location 5 to select those partitions that are to be reported to phone N°1. If no events are to be reported to phone N°1, both locations should be programmed as "0".

LOCATION 4 - EVENTS REPORTED TO PHONE N° 1 (2 segments, feature selection data)

- | | | |
|------------------|-----|--|
| Segment 1 | 1 = | Alarms |
| | 2 = | Opening and closings |
| | 3 = | Zone bypass and bypass restores |
| | 4 = | Zone trouble and trouble restores |
| | 5 = | Power fail (AC failure), low battery, power restore (AC restore) , and low battery restore |
| | 6 = | Bell cut, bell cut restore, telephone line restore |
| | 7 = | Test reports |
| | 8 = | Start and end programming, download complete and log full |
| Segment 2 | 1 = | Zone and box tamper |
| | 2 = | Auxiliary power over-current, and restore |
| | 3 = | Wireless sensor missing and restore |
| | 4 = | Wireless sensor low battery and restore |
| | 5 = | Expander trouble and restore (keypads are considered as expanders) |
| | 6 = | Fail to communicate |
| | 7 = | Alarm restore |
| | 8 = | Tamper restore |

LOCATION 5 - PARTITIONS REPORTED TO PHONE N° 1 (1 segment, feature selection data)

Location 5 is used when the events to be reported to a phone number are based on the partition, regardless of the event. If you use this location, you should program location 4 as "0".

Segment 1	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

Telephone number 2

LOCATION 6 - PROGRAMMING PHONE N° 2 (20 segments, numerical data)

Phone N°2 is programmed in location 6. A "14" indicates the end of the phone number. Delays of four seconds can be programmed at any point in the phone number by programming a "13" in the appropriate segment. The system will always wait for a dial tone unless the first digit of the phone number is a "13"; in this case, it will only delay. Tone (DTMF) dialling is default. If you want pulse tone dialling, program a "15" in the segment where pulse dialling should begin. If the entire number should be pulse dialling, program a "15" in the first segment. Program an "11" for a "*", and a "12" for a "#".

Note: a zero is programmed as a "0".

LOCATION 7 - ACCOUNT CODE FOR PHONE N° 2 (6 segments of numerical data)

Use location 7 to program the account code that is sent when phone N°2 is dialled. A zero in the account code is programmed as a "0". A "10" indicates the end of the account code, so program a "10" in the segment immediately after the last digit of the account code. If the account code is 6 digits long, program all 6 segments. If this location is left unprogrammed, account code 1 will be used when the second phone number is dialled.

LOCATION 8 - COMMUNICATOR FORMAT FOR PHONE N° 2 (1 segment, numerical data)

Location 8 contains the communicator format used to transmit to the receiver that is connected to phone N°2. Consult the instruction manual for your central station receiver in order to determine which format is compatible, and select from the 15 formats listed on page 33. If you require a format other than those listed, review the override options described in Location 18 to create the appropriate format. In order to create a special format, a "15" must be programmed in location 8, in addition to the entries in location 18. If this location contains a "0", format 1 will be used when phone N°2 is dialled.

LOCATION 9 - DIAL ATTEMPTS/BACKUP CONTROL FOR PHONE N° 2 (2 segments, numerical data)

Segment 1, dial attempts: segment 1 of location 9 is used to enter the number of dial attempts (1 to 15 attempts) that the communicator will make to phone N°2 before it ends the notification process. Factory default is "0", and the communicator will make the same number of attempts as those programmed in location 3.

There will be a waiting time of 12 seconds between the first two dial attempts, and a waiting time of 60 seconds between each subsequent dial attempt (regardless of the number dialled).

Segment 2, phone N° 2 backup control: Programming a "0" in segment 2 of this location will cause the NX-8E to make the designated number of attempts to phone N°1 before setting the "fail to communicate" condition and stop reporting. Programming a "1" in this segment will cause the NX-8E to stop trying to communicate after the designated number of attempts have been made to phone N°2. If a "2" is programmed in this segment, it will cause the NX-8E to make the dial attempts in increments of two. The first two attempts will be made to phone N°2, the next two attempts to phone N°1, then repeating until the total number of attempts designated in segment 1 is completed.

Reporting events to phone number 2

Phone N°2 can be used to back up phone N°1, or as a second receiver to multi-report or split-report events. Phone N°2 has two programming locations that are used to select the events that are reported to this phone number. Location 10 is used to select the events which are reported to phone N°2, and location 11 is used to select which partitions are reported to phone N°2. If you do not want dual or split reporting, location 10 and location 11 should be left at the factory default of "0". If you want multi-reporting or split reporting, and the split is based on the event type (such as alarm, open close etc.), location 10 should be used to select only those events that should be reported to phone N°2, and location 11 should be left at the factory default of "0". If you want dual or split reporting, and the split is based on partition, then location 10 should be programmed as "0", and location 11 should be used to select those partitions that are to be reported to phone N°2. If no events are to be reported to phone N°2, both locations should be at "0".

LOCATION 10 - EVENTS REPORTED TO PHONE N° 2 (2 segments of feature selection data)

- Segment 1**
- 1 = Alarms
 - 2 = Opening and closings
 - 3 = Zone bypass and bypass restores
 - 4 = Zone trouble and trouble restores
 - 5 = Power fail (AC failure), low battery, power restore (AC restore) , and low battery restore
 - 6 = Bell cut, bell cut restore, telephone line restore
 - 7 = Test reports
 - 8 = Start and end programming, download complete and log full

- Segment 2**
- 1 = Zone and box tamper
 - 2 = Auxiliary power overcurrent, and restore
 - 3 = Wireless sensor missing and restore
 - 4 = Wireless sensor low battery and restore
 - 5 = Expander trouble and restore (keypads are considered as expanders)
 - 6 = Fail to communicate
 - 7 = Alarm restore
 - 8 = Tamper restore

LOCATION 11 - PARTITIONS REPORTED TO PHONE N° 2 (1 segment, feature selection data)

Location 11 is used when events to be reported to a phone number are based on the partition, regardless of the event. If this location is used, location 10 should be "0".

- Segment 1**
- 1 = Partition 1
 - 2 = Partition 2
 - 3 = Partition 3
 - 4 = Partition 4
 - 5 = Partition 5
 - 6 = Partition 6
 - 7 = Partition 7
 - 8 = Partition 8

LOCATION 12 - PROGRAMMING PHONE N° 3 (20 segments, numerical data)

Phone N°3 is programmed in location 12. A "14" indicates the end of the phone number. Delays of four seconds can be programmed at any point in the phone number by programming a "13" in the appropriate segment. The system will always wait for a dial tone unless the first digit of the phone number is a "13"; in this case, it will only delay. Tone (DTMF) dialling is default. If you want pulse tone dialling, program a "15" in the segment where pulse dialling should begin. If the entire number should be pulse dialling, program a "15" in the first segment. Program an "11" for a "*", and a "12" for a "#".

Note: a zero is programmed as a "0".

LOCATION 13 - ACCOUNT CODE FOR PHONE N° 3 (6 segments, numerical data)

Use location 13 to program the account code that is sent when phone N°3 is dialled. A zero in the account code is programmed as a "0". A "10" indicates the end of the account code, so program a "10" in the segment immediately after the last digit of the account code. If the account code is 6 digits long, program all 6 segments. If location 6 is left un-programmed, account code 1 will be used when phone N°3 is dialled.

LOCATION 14 - COMMUNICATOR FORMAT FOR PHONE N° 3 (1 segment, numerical data)

Location 14 contains the communicator format used to transmit to the receiver that is connected to phone N°3. Consult the instruction manual for your central station receiver in order to determine which format is compatible, and select from the 15 formats listed on page 33. If you require a format other than those listed, review the override options described in location 18 to create the appropriate format. In order to create a special format, a "15" must be programmed in location 14, in addition to the entries in location 18. If this location contains a "0", format 1 will be used when phone N°3 is dialled.

LOCATION 15 - DIAL ATTEMPTS/BACKUP CONTROL FOR PHONE N° 3 (2 segments, numerical data)

Segment 1, Dial Attempts: Segment 1 of location 15 is used to enter the number of dial attempts (1 to 15) that the communicator will make to phone N°3 before it ends the notification process. Factory default is "0", and the communicator will make the same number of attempts as those programmed in location 3.

There will be a waiting time of 12 seconds between the first two dial attempts, and a waiting time of 60 seconds between each subsequent dial attempt (regardless of the number dialled).

Segment 2, Phone # 3 Backup Control: Programming a "0" in segment 2 of this location will cause the NX-8E to make the designated number of attempts to phone N°2 before setting the "Fail To Communicate" condition and stop reporting. Programming a "1" in this segment will cause the NX-8E to stop trying to communicate after the designated number of attempts have been made to phone N°3. If a "2" is programmed in this segment, it will cause the NX-8E to make the dial attempts in increments of two. The first two attempts will be made to phone N°3, the next two attempts to phone N°2, then repeating until the total number of attempts designated in segment 1 is completed.

Reporting events to phone number 3

Phone N°3 can be used as a third receiver to multi-report or split report events. Phone N°3 has two programming locations that are used to select the events that are reported to this phone number. Location 16 is used to select which events are reported to phone N°3, and location 17 is used to select which partitions are reported to phone N°3. If you do not want dual or split reporting, location 16 and location 17 should be left at the factory default of "0". If you want multi-reporting or split reporting, and the split is based on the event type (such as alarm, open/close, etc.), then location 16 should be used to select only those events that should be reported to phone N°3, and location 17 should be left at the factory default of "0". If you want dual or split reporting, and the split is based on partition, then location 16 should be programmed to "0" and location 17 should be used to select those partitions that are to be reported to phone N°3. If no events are to be reported to phone N°3, both locations should be at "0".

LOCATION 16 - EVENTS REPORTED TO PHONE N° 3 (2 segments, feature selection data)

- Segment 1**
- 1 = Alarms
 - 2 = Opening and closings
 - 3 = Zone bypass and bypass restores
 - 4 = Zone trouble and trouble restores
 - 5 = Power fail (AC failure), low battery, power restore (AC restore), and low battery restore
 - 6 = Bell cut, bell cut restore, telephone line restore
 - 7 = Test reports
 - 8 = Start and end programming, download complete and log full
- Segment 2**
- 1 = Zone and box tamper
 - 2 = Auxiliary power overcurrent, and restore
 - 3 = Wireless sensor missing and restore
 - 4 = Wireless sensor low battery and restore
 - 5 = Expander trouble and restore (keypads are considered as expanders)
 - 6 = Fail to communicate
 - 7 = Alarm restore
 - 8 = Tamper restore

LOCATION 17 - PARTITIONS REPORTED TO PHONE N°3 (1 segment, feature selection data)

Location 17 is used when the events to be reported to a phone number are based on the partition, regardless of the event. If this location is used, location 16 should be "0".

- Segment 1**
- 1 = Partition 1
 - 2 = Partition 2
 - 3 = Partition 3
 - 4 = Partition 4
 - 5 = Partition 5
 - 6 = Partition 6
 - 7 = Partition 7
 - 8 = Partition 8

Special formats

LOCATION 18 - CUSTOM COMMUNICATOR FORMAT (see locations 2, 8, and 14)

- Segment 1**
- 1 = On for 1800hz transmit; Off for 1900hz
 - 2 = On for 2300hz handshake; Off for 1400hz
 - 3 = On for checksum parity; Off for double round parity
 - 4 = On for 2 digit event code; Off for 1 digit event code
 - 5 = On for extended reporting; Off for non-extended reporting
 - 6 = Reserved
 - 7 = On for 20 PPS; Off for 10 or 40 PPS
 - 8 = On for 10 PPS; Off for 20 or 40 PPS

- Segment 2**
- 1 = On for pager format (no handshake required).
 - 2 = On for 1400/2300 handshake
 - 3 = Reserved
 - 4 = Reserved
 - 5 = On for Contact ID
 - 6 = On for SIA
 - 7 = On for 3 digit event code
 - 8 = On for DTMF

Segment 3 Reserved

Segment 4 Inter-digit time for pulse format:
The inter-digit time is the value programmed on this location, divided by the pulse-rate (PPS) of the programmed format. This is programmed in a binary way: in order to program the value "10", options 2 and 4 must be selected, for value "5", options 1 and 3 must be selected.

Ex: when the value 10 is programmed on segment 4 and a pulse format of 20 PPS is used, the inter-digit time is $10/20 = 0.5$ sec.

Download parameters

☞ LOCATION 19 - DOWNLOAD ACCESS CODE (8 segments, numerical data)

Location 19 contains the eight-digit access code that the NX-8E must receive from the downloading software before the panel will allow downloading. The factory default code is 84800000.

☞ LOCATION 20 - NUMBER OF RINGS TO ANSWER (1 segment, numerical data)

Location 20 contains the number of rings to answer for a download. Enter a number from "0" (disabled) to "15". Factory default is "8", so the NX-8E will answer after 8 rings.

LOCATION 21 - DOWNLOAD CONTROL (1 segment, feature selection data)

Location 21 contains the feature selections to control download sessions. The following features can be enabled or disabled using this location (see the feature definitions on pages 5-11).

- | | | |
|------------------|-----|--|
| Segment 1 | 1 = | On: enables two call answering machine defeat |
| | 2 = | Reserved |
| | 3 = | On: requires call-back before download session |
| | 4 = | Shutdown (can only be viewed from the keypad; must be changed by downloading) |
| | 5 = | On: locks all local programming. (can only be viewed from the keypad; must be changed by downloading) |
| | 6 = | On: locks programming of all locations associated with the communicator (can only be viewed from the keypad; must be changed by downloading) |
| | 7 = | On: locks out download section. (If "On", locations 19-22 cannot be viewed from the keypad; can only be viewed from the keypad when "Off".) |
| | 8 = | On: enables call-back at auto test interval |

LOCATION 22 - DOWNLOAD CALL BACK NUMBER (20 segments, numerical data)

If a telephone number is programmed into this location, and "Require Call-back" is enabled in location 21, the control panel will hang up for approximately 36 seconds (ensuring that the calling party has disconnected), and then call back. The system will always wait for a dial tone unless the first digit of the phone number is a "13"; in this case, it will only delay. Tone (DTMF) dialling is default. If you want pulse tone dialling, program a "15" in the segment where pulse dialling should begin. If the entire number should be pulse dialling, program a "15" in the first segment. Four-second delays can be obtained anywhere in the sequence by programming a "13" in the appropriate delay location.

Note: a zero is programmed as a "0".

WARNING: YOU SHOULD ALWAYS CHECK THAT THE CALLBACK PHONE NUMBER IS ACCURATE BEFORE DISCONNECTING.

Feature and report selections (for partition 1)

☞ LOCATION 23 - PARTITION 1, FEATURE AND REPORT SELECTIONS (5 segments, feature selection data)

Location 23 is used to enable certain features that the user can access or see from the keypad of the system. In addition, certain communicator reports are enabled in location 23. Each of these features can be enabled by partition. For additional partition information, see locations 88-109.

If the feature selection location for any partition is left blank, that partition will use this location for the feature selection.

This location contains 5 segments of 8 features each (see the feature definitions).

- | | |
|------------------|---|
| Segment 1 | 1 = On: enables the quick arm feature (for exit and stay mode) |
| | 2 = On: enables the re-exit feature |
| | 3 = On: enables the automatic bypass feature (of interior zones) |
| | 4 = On: enables the silent keypad panic feature (overrides the audible panic selection) |
| | 5 = On: enables the audible keypad panic feature |
| | 6 = On: enables the keypad Aux 1 feature (FIRE) |
| | 7 = On: enables the keypad Aux 2 feature (MEDICAL) |
| | 8 = On: enables the keypad multiple code attempt tamper feature (keypad lockout) |
| Segment 2 | 1 = On: enables the LED extinguish feature |
| | 2 = On: enables the require code for bypassing feature |
| | 3 = On: enables the zone bypassed sounder alert feature |
| | 4 = On: enables the AC power/low battery sounder alert feature |
| | 5 = On: enables bypass toggle |
| | 6 = On: enables silent auto arm |
| | 7 = On: enables the automatic instant feature (of entry/exit zones) |
| | 8 = On: enables final set door |
| Segment 3 | 1 = On: enables opening and closing reports |
| | 2 = On: enables zone bypass reporting |
| | 3 = On: enables zone restore reporting |
| | 4 = On: enables zone trouble reporting |
| | 5 = On: enables zone tamper reporting |
| | 6 = On: enables the cancel reporting |
| | 7 = On: enables the recent closing report |
| | 8 = On: enables the exit error report |
| Segment 4 | 1 = On: enables late to close / early to open reporting |
| | 2 = On: enables auto arm in STAY mode |
| | 3 = On: enables instant NIGHT mode (applies to NX-1208E / NX-1248E: no toggle) |
| | 4 = On: tamper when sensor lost if armed |
| | 5 = On : enables instant STAY mode (toggle) |
| | 6 = Reserved |
| | 7 = Reserved |
| | 8 = Reserved |

- Segment 5**
- 1 = Reserved
 - 2 = Reserved
 - 3 = Reserved
 - 4 = Reserved
 - 5 = Reserved
 - 6 = Reserved
 - 7 = Reserved
 - 8 = Reserved

Entry/Exit timers

LOCATION 24 - ENTRY / EXIT TIMERS (6 segments, numerical data)

Location 24 is used to program the entry/exit times. There are 2 separate entry/exit times.

Segment 1	Entry time 1	This is the entry time that will be used when a delay 1 zone type initiates an entry delay. Valid entries are 10-255 seconds.
Segment 2	Exit time 1	This is the exit time that will be used for all zones designated as delay 1. Valid entries are 10-255 seconds.
Segment 3	Entry time 2	This is the entry time that will be used when a delay 2 zone type initiates an entry delay. Valid entries are 10-255 seconds.
Segment 4	Exit time 2	This is the exit time that will be used for all zones designated as delay 2. Valid entries are 10-255 seconds.
Segment 5	Reserved	
Segment 6	Reserved	

Zone configurations and partition selection

DEFAULT ZONE CONFIGURATIONS

Zones can be programmed to be one of thirty different zone configurations (zone types). The default zone configurations are listed below. Programming locations 110-169 can customise all zone configurations.

DATA	R conf.	DESCRIPTION OF DEFAULT CONFIGURATION
1	1	DAY ZONE Instant when system is armed; trouble zone when system is disarmed. A day zone will only work if programmed for single end-of-line resistor.
2	2	24 HOUR AUDIBLE Creates an instant yelping siren alarm regardless of the arming state of the control panel. This zone type is not abortable. This zone can be bypassed.
3	2	ENTRY/EXIT DELAY 1 A trip will start entry delay 1. Absence of a trip during the exit delay will enable the Automatic Bypass or Instant mode, if so programmed.
4	2	FOLLOWER (WITH AUTO- BYPASS DISABLED) This zone will be instant when the system is armed and no entry or exit delays are being timed. It is delayed during entry and exit delay times. This zone will not bypass automatically, even if enabled in segment 1 of location 23.
5	2	INTERIOR FOLLOWER (WITH AUTO- BYPASS ENABLED) This zone will be instant when the system is armed and no entry or exit delay is being timed. It is delayed during entry and exit delay times. This zone will bypass automatically, if enabled in segment 1 of location 23.
6	2	INSTANT This zone creates an instant alarm whenever it is tripped and the armed LED is on.
7	2	24 HOUR SILENT Creates an instant silent alarm regardless of the arming state of the control panel. It will not display on the keypad. This zone is not abortable, but can be bypassed.
8	1	FIRE This zone will light up the fire LED and sound the steady siren each time the zone is shorted. It will also rapidly flash the fire LED, indicating trouble if the zone is open. This zone cannot be bypassed.
9	2	ENTRY/EXIT DELAY 2 A trip will start entry delay 2. Absence of a trip during the exit delay will enable the automatic bypass or instant mode, if so programmed.
10	1	24 HOUR AUDIBLE SUPERVISED Creates an instant audible alarm, regardless of the arming state of the control panel. It will display on the keypad (e.g. flashing zone LED's, and changed READY LED). This zone is not abortable and cannot be bypassed.
11	2	MOMENTARY KEYSWITCH ZONE This zone type will arm and disarm the partition or partitions of the control panel where it is resident, every time the zone is shorted. Keyswitch arming will report as user 99. This zone type can only belong to 1 partition.

12	2	<p>INTERIOR FOLLOWER WITH "CROSS ZONE" ENABLED</p> <p>This zone will be instant when the system is armed and no entry or exit delay is being timed. It is delayed during entry and exit delay times. If a "Cross Zone" is not being timed, it will start a "Cross Zone" timer. If a "Cross Zone" is being timed, it will create an instant alarm. This zone will bypass automatically, when enabled in segment 1 of location 23.</p>
13	2	<p>INSTANT ENTRY GUARD</p> <p>This zone creates an instant alarm whenever it is tripped and the stay/instant LED is off. It will start an entry delay time 2 if it is tripped, provided that the system is armed and the stay/instant LED is on.</p>
14	2	<p>ENTRY/EXIT DELAY 1 WITH GROUP BYPASS ENABLED</p> <p>A trip will start entry delay 1. This zone will bypass when the "Group Bypass" command is entered at the keypad. Absence of a trip during exit delay will enable the automatic bypass or instant mode, if so programmed.</p>
15	2	<p>INTERIOR FOLLOWER WITH GROUP BYPASS ENABLED</p> <p>This zone will be instant when the system is armed and no entry or exit delays are being timed. It is delayed during entry/exit delay times. This zone will bypass when the "Group Bypass" command is entered at the keypad. This zone will bypass automatically, if enabled in segment 1 of location 23.</p>
16	2	<p>INSTANT WITH GROUP BYPASS ENABLED</p> <p>This zone creates an instant alarm whenever it is tripped and the armed LED is on. This zone will bypass when the "Group Bypass" command is entered at the keypad</p>
17	2	<p>MAINTAINED KEYSWITCH</p> <p>This zone type will arm the partition or partitions of the control panel where it is resident, as long as the zone is shorted. This zone type will disarm the partition or partitions of the control where it is resident, as long as the zone is open. Keyswitch arming will report as user 99.</p>
18	2	<p>ENTRY/EXIT DELAY 1 FORCE ARMABLE</p> <p>A trip will start entry delay 1. Absence of a trip during exit delay will enable the automatic bypass or instant mode, if so programmed. This zone is force armable (see feature definitions pages 5-11).</p>
19	2	<p>ENTRY/EXIT DELAY 2 FORCE ARMABLE</p> <p>A trip will start entry delay 2. Absence of a trip during exit delay will enable the automatic bypass or instant mode, if so programmed. This zone is force armable (see feature definitions, pages 5-11).</p>
20	2	<p>ENTRY/EXIT DELAY 1 WITH CHIME ENABLED</p> <p>A trip will start entry delay 1. Absence of a trip during exit delay will enable the automatic bypass or instant mode, if so programmed. When the control panel is disarmed and the chime mode has been set, this zone will act as a chime zone.</p>
21	2	<p>TECHNICAL ALARM, SUPERVISED, AUDIBLE</p> <p>Any trip on a technical zone creates an audible alarm, regardless of the arming state of the control panel. This zone can be bypassed.</p>
22	2	<p>TECHNICAL ALARM, SUPERVISED, SILENCE</p> <p>Any trip on a silent technical zone creates a silent alarm, regardless of the arming state of the control panel. Only the transmitter will be activated. This zone can be bypassed.</p>
23	2	<p>INTERIOR INSTANT ZONE</p> <p>This zone creates an instant alarm whenever it is tripped during the arming state of the control panel. This zone will bypass automatically, if enabled in segment 1 of location 23, or when this system is armed in the "Stay" mode.</p>

24	2	<p>INSTANT ZONE WITH CHIME ENABLED</p> <p>A trip will create an alarm when the system is armed. When the control panel is disarmed and the chime mode has been set, this zone will act as a chime zone.</p>
25	2	<p>FOLLOWER ZONE WITH CHIME ACTIVATED</p> <p>This zone will be instant when the system is armed and no entry or exit delays are being timed. It is delayed during entry and exit delay times. This zone will not bypass automatically, even if enabled in segment 1 of location 23. When the control panel is disarmed and the chime mode has been set, this zone will act as a chime zone.</p>
26	2	<p>24 HOUR, AUDIBLE, SUPERVISED, LOCAL</p> <p>Creates an instant audible alarm, regardless of the arming state of the control panel. It will display on the keypad (e.g. flashing zone LED's, and changed READY LED). This zonetype will NOT be reported.</p>
27	2	<p>INSTANT ZONE FORCE ARMABLE</p> <p>This zone creates an instant alarm whenever the system is armed. This zone is force armable (see feature definitions, pages 5-11).</p>
28	2	<p>INSTANT ZONE ACTIVITY MONITOR ENABLED</p> <p>This zone creates an instant alarm whenever the system is armed. It will send a report if the zone activity time is reached without a change of state (see location 40, segment 11 and locations 110-169).</p>
29		<p>INSTANT ZONE WITH END OF LINE RESISTOR DEFEAT</p> <p>This zone creates an instant alarm whenever the system is armed. When the loop is closed, the zone is ready. Opening of the loop means a faulted zone (see locations 110-169).</p>
30	2	<p>24 HOUR, MEDICAL, AUDIBLE, SUPERVISED</p> <p>Creates an instant audible alarm, regardless of the arming state of the control panel. It will display on the keypad (e.g. flashing zone LED's, and changed READY LED). A medical report will be sent to the CMS.</p>

Note: all zone configurations are programmed for double end of line resistor configuration, except for DAY ZONE, FIRE, 24H AUDIBLE SUPERVISED and END OF LINE RESISTOR DEFEAT.

☞ **LOCATION 25 - ZONES 1-8 CONFIGURATION GROUP (8 segments, numerical data)**

Location 25 contains the configuration group (zone type) for zones 1-8. Segment 1 is for zone 1, and segment 8 is for zone 8. You will find the default configurations in the table above.

LOCATION 26 - PARTITION SELECT, ZONES 1-8 (8 segments, feature selection data)

Location 26 is used to select the partition(s) in which zones 1 - 8 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 1, and segment 8 corresponds to zone 8.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ **LOCATION 27 - ZONES 9-16 CONFIGURATION GROUP (8 segments, numerical data)**

Location 27 contains the configuration group (zone type) for zones 9 -16. Segment 1 is for zone 9, and segment 8 is for zone 16. You will find the default configurations in the table above.

LOCATION 28 - PARTITION SELECT, ZONES 9-16 (8 segments, feature selection data)

Location 28 is used to select the partition(s) in which zones 9-16 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions are armed. A zone that resides in more than 1 partition will be reported to its lowest partition. Location 28 has 8 segments. Segment 1 corresponds to zone 9 and Segment 8 corresponds to zone 16.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 29 - ZONES 17-24 CONFIGURATION GROUP (8 segments, numerical data)

Location 29 contains the configuration group (zone type) for zones 17-24. Segment 1 is for zone 17, segment 8 is for zone 24. You will find the default configurations in the table above.

LOCATION 30 - PARTITION SELECT, ZONES 17-24 (8 segments, feature selection data)

Location 30 is used to select the partition(s) in which zones 17-24 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions are armed. A zone that resides in more than 1 partition will be reported to its lowest partition. Location 30 has 8 segments. Segment 1 corresponds to zone 17 and segment 8 corresponds to zone 24.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 31 - ZONES 25-32 CONFIGURATION GROUP (8 segments, numerical data)

Location 31 contains the configuration group (zone type) for zones 25-32. Segment 1 is for zone 25, segment 8 is for zone 32. You will find the default configurations in the table above.

LOCATION 32 - PARTITION SELECT, ZONES 25-32 (8 segments, feature selection data)

Location 32 is used to select the partition(s) in which zones 25-32 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions are armed. A zone that resides in more than 1 partition will be reported to its lowest partition. Segment 1 corresponds to zone 25 and segment 8 corresponds to zone 32.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

🔑 LOCATION 33 - ZONES 33-40 CONFIGURATION GROUP (8 segments, numerical data)

Location 33 contains the configuration group (zone type) for zones 33-40. Segment 1 is for zone 33, and segment 8 is for zone 40. You will find the default configurations in the table above.

LOCATION 34 - PARTITION SELECT, ZONES 33-40 (8 segments of feature selection data)

Location 34 is used to select the partition(s) in which zones 33-40 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions are armed. A zone that resides in more than 1 partition will be reported to its lowest partition. Segment 1 corresponds to zone 33 and segment 8 corresponds to zone 40.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

LOCATION 35 - ZONES 41-48 CONFIGURATION GROUP (8 segments of numerical data)

Location 35 contains the configuration group (zone type) for zones 41-48. Segment 1 is for zone 41, and segment 8 is for zone 48. You will find the default configurations in the table above.

LOCATION 36 - PARTITION SELECT, ZONES 41-48 (8 segments, feature selection data)

Location 36 is used to select the partition or partitions in which zones 41-48 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions are armed. A zone that resides in more than 1 partition will be reported to its lowest partition. Location 36 has 8 segments. Segment 1 corresponds to zone 41 and segment 8 corresponds to zone 48.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

General options

LOCATION 37 - SIREN AND SYSTEM SUPERVISION (7 segments, feature selection data)

Location 37 is used to enable various system feature and reporting options.

- | | |
|------------------|---|
| Segment 1 | 1 = On: if siren sounds for "Telephone Line Cut" when armed
2 = On: if siren sounds for "Telephone Line Cut" when disarmed
3 = On: if siren blast at arming (pulse)
4 = On: if siren blast at exit expiration (pulse)
5 = On: if siren blast at closing kiss-off (pulse)
6 = On: if siren sounds during a "Cross Zone" verification time
7 = On: if siren sounds for a zone or box tamper
8 = On: if siren blasts 1 time for keyswitch or wireless arming; 2 times for disarming |
| Segment 2 | 1 = On: if siren driver should be a voltage output. Off: if on-board siren driver is enabled
2 = On: if sirens sound for expander trouble
3 = On: for zones to restore immediately. Off: for zones to restore only when the siren is off or disarmed
4 = On: if dynamic battery test is performed at arming. Off: if dynamic battery test is performed at disarming (See location 40)
5 = On: if battery missing test is performed every 12 seconds
6 = On: if manual bell test is performed during [*]-[4]-[4] test function
7 = On: if manual communicator test is performed during [*]-[4]-[4] test function
8 = On: if Box Tamper terminals on the control panel are enabled |
| Segment 3 | 1 = On: if box tamper report is enabled
2 = On: if AC fail reporting is enabled
3 = On: if low battery reporting is enabled
4 = On: if Aux. power overcurrent report is enabled
5 = On: if siren supervision report is enabled
6 = On: if restore telephone line cut report is enabled
7 = Reserved
8 = On: if expander trouble reporting is enabled |
| Segment 4 | 1 = On: if fail to communicate report is enabled
2 = On: if log full report is enabled
3 = On: if autotest report is enabled
4 = On: if start/end programming report is enabled
5 = On: if end download report is enabled
6 = On: if sensor low battery report is enabled
7 = On: if sensor missing report is enabled
8 = On: if autotest report is enabled ONLY when the system is armed |

- Segment 5**
- 1 = On: enable lost clock service light
 - 2 = On: use of wireless and hardwired zones together on zones 1-8 only
 - 3 = On: disables on-board 8 zones
 - 4 = On: will allow two trips on same cross-zone to activate an alarm
 - 5 = On: will not allow zones that are force armed to report bypass
 - 6 = On: enables silent exit option
 - 7 = On: activate "first disarm reporting" - "last arm reporting" for partitions
 - 8 = On: switch "summer/wintertime" and vice versa
- Segment 6**
- 1 = On: enable 2 wire smoke sensors on zone 8
 - 2 = Reserved
 - 3 = On: zone activity monitor in hours (not in days)
 - 4 = Reserved
 - 5 = Reserved
 - 6 = On: disables Clean Me report
 - 7 = Reserved
 - 8 = Reserved
- Segment 7**
- 1 = On: clock uses internal crystal
 - 2 = On: dial via GSM when phone line trouble (*)
 - 3-8 = Reserved

(*)Note: This feature is only used when the NX-7002 is enrolled by the panel and if the NX-7002 is used as backup (GSM voice channel) for the PSTN dialler of the panel. Also telephone line monitoring needs to be enabled in location 40. Do not use this feature as the only backup feature of the PSTN dialler but use this in addition with the standard backup options as described in the NX-7002 manual.

LOCATION 38 - SWINGER SHUTDOWN COUNT

Location 38 contains the number of trips on a zone before that zone will be automatically bypassed. Refer to the feature definitions.

LOCATION 39 - KEYPAD SOUNDER CONTROL (1 segment, feature selection data)

- Segment 1**
- 1 = On: if keypad sounds for "Telephone Line Cut" when the system is armed
 - 2 = On: if keypad sounds for "Telephone Line Cut" when disarmed
 - 3 = On: if keypad sounds for an AC power failure
 - 4 = On: if keypad sounds when a low battery is detected
 - 5 = On: if keypad sounds during cross zone trip time
 - 6 = On: if keypad sounds for zone and box tampers
 - 7 = Reserved
 - 8 = Expander trouble

LOCATION 40 - SYSTEM TIMERS (14 segments, numerical data)

Location 40 contains the duration of various system timing functions. Example: If you want the duration of the dynamic battery test to be 30 minutes, you should program [3]-[0]-[*] in segment 1 of this location. The [3]-[0] is the number of minutes; the [*] stores the data, and moves to the next segment of this location.

Segment 1	Dynamic battery test duration in minutes, 0-255 minutes ("0" = no test)
Segment 2	AC fail report delay in minutes, 0-255 minutes
Segment 3	Power up delay in seconds, 0-60 seconds ("0" = no power up delay)
Segment 4	Siren time in minutes, 1-255 minutes
Segment 5	Telephone line cut delay in seconds, 0-255 seconds ("0" = no telephone line monitoring enabled)
Segment 6	Cross zone time in minutes, 0-255 ("0" = no cross zoning)
Segment 7	Chime time in 50 msec. (1/ 20th second) increments from 0-12 seconds ("0" = follows zone 255 latched)
Segment 8	Dial delay in seconds, 0-255 seconds (0 no abort delay)
Segment 9	Fire alarm verification time in seconds, 120-255 seconds ("0" = no fire alarm verification). Values less than 120 sec. are considered as 120 sec.
Segment 10	Listen-in time in seconds, 0-255 ("0" = no listen-in time)
Segment 11	Zone activity monitor feature timed in hours/days, 0-255 ("0" = disabled)
Segment 12	Reserved
Segment 13	Reserved
Segment 14	Reserved

LOCATION 41 - CODE REQUIREMENTS (1 segment, feature data)

Segment 1	<p>1 = On: enables the 6-digit code option. If 6-digit option is enabled, all arm/disarm codes and the "Go To Program Code" are 6 digits. If this option is enabled, the default user 1 code is [1]-[2]-[3]-[4]-[5]-[6]. NOTE: IF YOU ENABLE THIS OPTION, VERIFY THAT THE "GO TO PROGRAM CODE" IS A SIX-DIGIT CODE BEFORE YOU EXIT FROM PROGRAMMING</p> <p>2 = On: requires code entry for [*]-[9]-[8] (perform callback download) and [*]-[9]-[9] (answer incoming call for download) functions</p> <p>3 = Reserved</p> <p>4 = Reserved</p> <p>5 = On: keypad shutdown mode</p> <p>6 = On: user authorisation to enter program mode</p> <p>7 = Reserved</p> <p>8 = Reserved</p>
------------------	--

LOCATION 42 - GO TO PROGRAM CODE (6 segments, numerical data)

Location 42 contains the "Go To Program Code". This location contains a code with either 4 or 6 digits. If the 6-digit code option is enabled in Location 41, THIS CODE MUST CONTAIN SIX (6) DIGITS. If this option is not enabled in location 41, the last 2 segments (digits) will be ignored. With the NX-8E disarmed, the "Go To Program Code" can be used to enter the Program Mode.

LOCATION 43 - GO TO PROGRAM CODE PARTITION AND AUTHORIZATION (2 segments, feature selection data)

The "Go To Program Code" can be used as a standard arm/disarm code. When using the code to arm or disarm, the user ID is 255. (It is not possible to change this code in the run mode).

- Segment 1**
- 1 = Reserved
 - 2 = On: enables "Go To Program Code" as an arm only code
 - 3 = On: enables "Go To Program Code" as an arm only, after closing
 - 4 = On: enables "Go To Program Code" as a master arm/disarm code (can change user codes)
 - 5 = On: enables "Go To Program Code" as an arm/disarm code
 - 6 = On: enables "Go To Program Code" to bypass zones
 - 7 = On: enables "Go To Program Code" opening and closing reports
 - 8 = Reserved

- Segment 2**
- 1 = On: enables the "Go To Program Code" for partition 1
 - 2 = On: enables the "Go To Program Code" for partition 2
 - 3 = On: enables the "Go To Program Code" for partition 3
 - 4 = On: enables the "Go To Program Code" for partition 4
 - 5 = On: enables the "Go To Program Code" for partition 5
 - 6 = On: enables the "Go To Program Code" for partition 6
 - 7 = On: enables the "Go To Program Code" for partition 7
 - 8 = On: enables the "Go To Program Code" for partition 8

☞ LOCATION 44 - DURESS CODE (6 segments, numerical data)

Location 43 contains the "Duress" code. This Location contains either 4 or 6 digits. If the 6-digit code option is enabled in location 41, THIS CODE MUST CONTAIN SIX (6) DIGITS. If the 6-digit option is not enabled in location 41, the last 2 digits will be ignored. If the duress code is programmed, it will work for all partitions.

Programming the outputs

LOCATION 45 - AUXILIARY OUTPUT 1-4 PARTITION SELECTION (4 segments, feature selection data)

Location 45 is used to select the partition(s) in which the events must occur before the output (relay) will activate. Location 45 has 4 segments. Segment 1 corresponds to output 1, and segment 2 corresponds to output 2, segments 3 and 4 correspond to outputs 3 and 4.

Segment 1 (Auxiliary 1)	Segment 2 (Auxiliary 2)	Segment 3 (Auxiliary)	Segment 4 (Auxiliary)
1= Partition #1	1= Partition #1	1= Partition #1	1= Partition #1
2= Partition #2	2= Partition #2	2= Partition #2	2= Partition #2
3= Partition #3	3= Partition #3	3= Partition #3	3= Partition #3
4= Partition #4	4= Partition #4	4= Partition #4	4= Partition #4
5= Partition #5	5= Partition #5	5= Partition #5	5= Partition #5
6= Partition #6	6= Partition #6	6= Partition #6	6= Partition #6
7= Partition #7	7= Partition #7	7= Partition #7	7= Partition #7
8= Partition #8	8= Partition #8	8= Partition #8	8= Partition #8

LOCATION 46 - AUXILIARY OUTPUT 1-4 SPECIAL TIMING (4 segments, feature selection data)

Location 46 contains special timing feature activation for the 4 auxiliary outputs (relays). Segment 1 corresponds to output 1, segment 2 corresponds to output 2. Segments 3 and 4 correspond to outputs 3-4.

- Segment 1-4**
- 1 = On: if output should be timed in minutes; Off: if timed in seconds
 - 2 = On: if output should latch; Off: if output should be timed
 - 3 = On: if output should stop timing when the code is entered; Off: if the output should continue to time when the code is entered
 - 4 = On: if output should only activate between the closing and opening time in locations 52 and 53
 - 5 = On: if output should only activate between the opening and closing time in locations 52 and 53
 - 6 = On: if output should be inverted (0 volts going to 12 volts when activated)
 - 7 = Reserved
 - 8 = Reserved

LOCATION 47 - AUXILIARY OUTPUT 1 (relay 1 and open collector 1), EVENT AND TIME (2 segments, numerical data)

- Segment 1** Use the chart below to select the event that will activate auxiliary output 1 (relay 1)
- Segment 2** Program the timing from 0-255 (minutes or seconds, depending on the data programmed in segment 1, location 46). Programming a "0" makes the output follow the event

LOCATION 48 - AUXILIARY OUTPUT 2 (relay 2 and open collector 2), EVENT AND TIME (2 segments, numerical data)

- Segment 1** Use the chart below to select the event that will activate auxiliary output 2 (relay 2)
- Segment 2** Program the timing from 0-255 (minutes or seconds, depending on the data programmed in segment 2, location 46). Programming a "0" makes the output follow the event

LOCATION 49- AUXILIARY OUTPUT 3 (open collector 3), EVENT AND TIME (2 segments, numerical data)

- Segment 1** Use the chart below to select the event that will activate auxiliary output 3
- Segment 2** Program the timing from 0-255 (minutes or seconds, depending on the data programmed in segment 3, location 46). Programming a "0" makes the output follow the event

LOCATION 50- AUXILIARY OUTPUT 4 (open collector 4), EVENT AND TIME (2 segments, numerical data)

- Segment 1** Use the chart below to select the event that will activate auxiliary output 4
- Segment 2** Program the timing from 0-255 (minutes or seconds, depending on the data programmed in segment 4, location 46). Programming a "0" makes the output follow the event

AUXILIARY OUTPUT EVENT SELECTION

DATA	EVENT	DATA	EVENT
0✓	Burglary alarm	27	Chime
1✓	Fire alarm	28✓	Expander trouble
2✓	24 hour alarm	29	Dynamic battery test time
3✓	Trouble alarm	30	Open period
4	Tamper alarm	31	Closed period
5	Yelping siren	32	Listen-in
6	Steady siren	33	Line seizure
7	Any siren	34	Reserved
8	Any bypass	35	Fail to communicate
9	AC fail	36	Telephone line fault
10	Low battery	37	Program mode
11✓	Duress	38	Download in process
12✓	Aux 1 keypad (fire alarm)	39	Reserved
13✓	Aux 2 keypad (medical alarm)	40	Short circuit (overcurrent on 12 Vdc)
14✓	Panic keypad	41	Box tamper
15	Keypad tamper	42	Siren tamper
16✓	Autotest	43	Any open
17	Alarm memory	44	Any short
18	Entry	45	Any fault (open/short on non-fire zone)
19	Exit	46✓	Any alarm
20	Entry or exit	47	Beeping keypad
21	Armed state	48♦✓	Code entry (see note below)
22	Disarmed state	49♣✓	Key FOB function 1 (wireless)
23	Ready	50♣✓	Key FOB function 2 (wireless)
24	Not ready	51	Always on
25	Fire	52	Autoarm time (last minute)
26	Fire trouble	53	Any siren when in away mode

Note :

- ♦ When event 48 is programmed, it is possible to program a user code authorisation to select the output(s), which a particular code will activate. When LED 8 is on for an authorisation, then LED's -24 will correspond to the code that activates outputs 1 - 2 respectively. (See "Programming the LED Keypads")
- ♣ Events 49 and 50 require one or more of the following to operate: wireless receivers or cardreaders.
- ✓ If set to follow condition, these events will be 1 second.

Setup for auto-test, auto-arm and opening/closing times

LOCATION 51 - AUTOTEST CONTROL (4 segments, numerical data)

- | | |
|------------------|--|
| Segment 1 | Program a "1" if the interval is to be in hours; program a "0" for days. Add a "2" to suppress the daily test or a "3" to suppress the hourly test if any report has been sent |
| Segment 2 | Program the autotest interval from 1-255 hours/days |
| Segment 3 | Program the autotest report hour in 24 hour format (if the interval is in hours, this segment is ignored) |
| Segment 4 | Program the autotest report time, number of minutes after the hour |

LOCATION 52 - OPENING TIME (2 segments, numerical data)

Location 52 contains the time (in 24 hour format) when the NX-8E will enable the disarm capability for codes designated as 'arm only after closing'. This time is only valid on those days programmed in location 54.

Note: Opening time must be earlier than closing time so that autoarm, Aux. outputs, or code authorisation can function properly.

- | | |
|------------------|--|
| Segment 1 | Program the hour of the opening time |
| Segment 2 | Program the minutes after the hour of the opening time |

LOCATION 53 - CLOSING TIME/AUTOMATIC ARMING TIME (2 segments, numerical data)

Location 53 contains the time (in 24 hour format) when the NX-8E will disable the disarm capability for codes designated as 'arm only after closing'. This is also the time when the automatic arming sequence will begin (if this option is enabled in location 55).

Note: Opening time must be earlier than closing time so that auto arm, Aux. outputs, or code authorisation can function properly.

- | | |
|------------------|---|
| Segment 1 | Program the hour of the closing / auto arm time |
| Segment 2 | Program the minutes after the hour of the closing / auto arm time |

LOCATION 54 - DAYS OF THE WEEK "ARM ONLY AFTER CLOSE WINDOW" CODES FUNCTION IN PARTITIONS 1 THRU 8 (8 Segments, feature selection data)

Location 54 selects the days of the week on which each partition is open. On these days, "arm only after close window" codes will be able to arm and disarm during "open window". On days not selected here, "arm only after close window" codes will not disarm. Segment 1 is for partition 1, and segment 8 is for partition 8 (see locations 52 and 53 for the opening and closing times for the open days).

- Segment 1-8**
- 1 = "Arm only after close window" will arm/disarm on Sunday
 - 2 = "Arm only after close window" will arm/disarm on Monday
 - 3 = "Arm only after close window" will arm/disarm on Tuesday
 - 4 = "Arm only after close window" will arm/disarm on Wednesday
 - 5 = "Arm only after close window" will arm/disarm on Thursday
 - 6 = "Arm only after close window" will arm/disarm on Friday
 - 7 = "Arm only after close window" will arm/disarm on Saturday
 - 8 = Reserved

LOCATION 55 - DAYS OF THE WEEK FOR AUTO ARMING IN PARTITIONS 1 THRU 8 (8 Segments, feature selection data)

Location 55 selects the days on which each partition will auto-arm. Segment 1 is for partition 1, and segment 8 is for partition 8. If a zone is faulted when the panel tries to auto-arm, the zone will be bypassed. If the zone restores, it will be unbypassed and active in the system.

- Segment 1-8**
- 1 = Auto arming on Sunday
 - 2 = Auto arming on Monday
 - 3 = Auto arming on Tuesday
 - 4 = Auto arming on Wednesday
 - 5 = Auto arming on Thursday
 - 6 = Auto arming on Friday
 - 7 = Auto arming on Saturday
 - 8 = Disable 45 minute retry timer

Communicator codes for slow speed formats only

LOCATIONS 56-83 ARE ONLY USED WHEN REPORTING EVENTS TO A PAGER, OR WHEN USING A SLOW FORMAT SUCH AS 4+2. WHEN USING CONTACT ID OR SIA, THERE IS NO NEED TO PROGRAM THESE LOCATIONS.

LOCATION 56 - RESTORE COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (8 segments, numerical data)

Location 56 contains the event code for a zone "Restore" for a 4+2 and 3+1 format. For a 4+2 format, the digit programmed in this location will be sent as the tens digit of the restore event code. The zone ID will always be reported as the ones digit of the zone number (e.g. zone 16 = 6, zone 45 = 5).

This location contains 8 segments. Any segment left as "0" will follow the segment 1 selection.

Segment 1	Partition 1	"Restore Code"
Segment 2	Partition 2	"Restore Code"
Segment 3	Partition 3	"Restore Code"
Segment 4	Partition 4	"Restore Code"
Segment 5	Partition 5	"Restore Code"
Segment 6	Partition 6	"Restore Code"
Segment 7	Partition 7	"Restore Code"
Segment 8	Partition 8	"Restore Code"

LOCATION 57 - BYPASS COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (8 segments, numerical data)

Location 57 contains the event code for a zone "Bypass" with a 4+2 and 3+1 format. For a 4+2 format, the digit programmed in this location will be sent as the tens digit of the bypass event code. The zone ID will always be reported as the ones digit of the zone number (e.g. zone 16 = 6, zone 45 = 5).

This location contains 8 segments. Any segment left as "0" will follow the segment 1 selection.

Segment 1	Partition 1	"Bypass Code"
Segment 2	Partition 2	"Bypass Code"
Segment 3	Partition 3	"Bypass Code"
Segment 4	Partition 4	"Bypass Code"
Segment 5	Partition 5	"Bypass Code"
Segment 6	Partition 6	"Bypass Code"
Segment 7	Partition 7	"Bypass Code"
Segment 8	Partition 8	"Bypass Code"

LOCATION 58 - TAMPER COMMUNICATOR CODE, SLOW SPEED FORMATS (8 segments, numerical data)

Location 58 contains the event code for a zone "Tamper" with a 4+2 and 3+1 format. For a 4+2 format, the digit programmed in this location will be sent as the tens digit of the tamper event code. The zone ID will always be reported as the ones digit of the zone number (e.g. zone 16 = 6, zone 45 = 5).

This location contains 8 segments. Any segment left as "0" will follow the segment 1 selection.

Segment 1	Partition 1	"Tamper Code"
Segment 2	Partition 2	"Tamper Code"
Segment 3	Partition 3	"Tamper Code"
Segment 4	Partition 4	"Tamper Code"
Segment 5	Partition 5	"Tamper Code"
Segment 6	Partition 6	"Tamper Code"
Segment 7	Partition 7	"Tamper Code"
Segment 8	Partition 8	"Tamper Code"

LOCATION 59 - TROUBLE COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (8 segments, numerical data)

Location 59 contains the event code for a zone "Trouble" with a 4+2 and 3+1 format. For the 4+2 format, the digit programmed in this location will be sent as the tens digit of the trouble event code. The zone ID will always be reported as the ones digit of the zone number (e.g. zone 16 = 6, zone 45 = 5).

This location contains 8 segments. Any segment left as "0" will follow segment 1 selection.

Segment 1	Partition 1	"Trouble Code"
Segment 2	Partition 2	"Trouble Code"
Segment 3	Partition 3	"Trouble Code"
Segment 4	Partition 4	"Trouble Code"
Segment 5	Partition 5	"Trouble Code"
Segment 6	Partition 6	"Trouble Code"
Segment 7	Partition 7	"Trouble Code"
Segment 8	Partition 8	"Trouble Code"

LOCATION 60 - SENSOR LOW BATTERY COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (8 segments, numerical data)

Location 60 contains the event code for a zone "Sensor Low Battery" for a 4+2 and 3+1 format. For a 4+2 format, the digit programmed in this location will be sent as the tens digit of the sensor low battery event code. The zone ID will always be reported as the ones digit of the zone number (e.g. zone 16 = 6, zone 45 = 5).

This location contains 8 segments. Any segment left as "0" will follow the Segment 1 selection.

Segment 1	Partition 1	"Sensor Low battery Code"
Segment 2	Partition 2	"Sensor Low battery Code"
Segment 3	Partition 3	"Sensor Low battery Code"
Segment 4	Partition 4	"Sensor Low battery Code"
Segment 5	Partition 5	"Sensor Low battery Code"
Segment 6	Partition 6	"Sensor Low battery Code"
Segment 7	Partition 7	"Sensor Low battery Code"
Segment 8	Partition 8	"Sensor Low battery Code"

LOCATION 61 - SENSOR MISSING COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (8 segments, numerical data)

Location 61 contains the event code for a zone "Sensor-missing" for a 4+2 and 3+1 format. For a 4+2 format, the digit programmed in this location will be sent as the tens digit of the sensor missing event code. The zone ID will always be reported as the ones digit of the zone number (e.g. zone 16 = 6, zone 45 = 5).

This location contains 8 segments. Any segment left as "0" will follow the Segment 1 selection.

Segment 1	Partition 1	"Sensor Missing Code"
Segment 2	Partition 2	"Sensor Missing Code"
Segment 3	Partition 3	"Sensor Missing Code"
Segment 4	Partition 4	"Sensor Missing Code"
Segment 5	Partition 5	"Sensor Missing Code"
Segment 6	Partition 6	"Sensor Missing Code"
Segment 7	Partition 7	"Sensor Missing Code"
Segment 8	Partition 8	"Sensor Missing Code"

LOCATION 62 - DURESS COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (2 segments, numerical data)

Location 62 contains the tens and ones digits that will be sent for a 4+2 and 3+1 format if the duress code is enabled in location 44. Segment 1 contains the tens digit, and segment 2 contains the ones digit.

For a 3+1 format, only the segment 1 digit (tens) will be sent.

LOCATION 63 - KEYPAD AUXILIARY 1 COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (2 segments, numerical data)

Location 63 contains the tens and ones digits that will be sent for a 4+2 and 3+1 format if the keypad "Auxiliary 1" (FIRE) is enabled in the partition feature selection. Segment 1 contains the tens digit; segment 2 contains the ones digit.

For a 3+1 format, only the segment 1 digit (tens) will be sent.

LOCATION 64 - KEYPAD AUXILIARY 2 COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (2 segments, numerical data)

Location 64 contains the tens and ones digits that will be sent for a 4+2 and 3+1 format if the keypad "Auxiliary 2" (MEDICAL) is enabled in the partition feature selection. Segment 1 contains the tens digit; segment 2 contains the ones digit.

For a 3+1 format, only the segment 1 digit (tens) will be sent.

LOCATION 65 - KEYPAD PANIC COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (2 segments, numerical data)

Location 65 contains the tens and ones digits that will be sent for a 4+2 and 3+1 format if the keypad "Panic" is enabled in the partition feature selection. Segment 1 contains the tens digit, and segment 2 contains the ones digit.

For a 3+1 format, only the segment 1 digit (tens) will be sent.

LOCATION 66 - KEYPAD MULTIPLE CODE ENTRY TAMPER COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (2 segments, numerical data)

Location 66 contains the tens and ones digits that will be sent for a 4+2 and 3+1 format if the keypad "Multiple Code Entry" (Tamper) is enabled in the partition feature selection. Segment 1 contains the tens digit, and segment 2 contains the ones digit.

For a 3+1 format, only the segment 1 digit (tens) will be sent.

LOCATION 67 - BOX TAMPER / BOX TAMPER RESTORE COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (4 segments, numerical data)

Location 67 contains the tens and ones digits that will be sent for a 4+2 and 3+1 format if the "Box Tamper" feature is enabled in location 37. Segment 1 contains the tens digit of the "Box Tamper". Segment 2 contains the ones digit of the "Box Tamper". Segment 3 contains the tens digit of the "Box Tamper Restore". Segment 4 contains the ones digit of the "Box Tamper Restore".

For a 3+1 format, only the segment 1 resp. segment 3 digit (tens) will be sent.

LOCATION 68 - AC FAIL / AC FAIL RESTORE COMMUNICATOR CODES, SLOW SPEED FORMATS ONLY (4 segments, numerical data)

Location 68 contains the tens and ones digits for a 4+2 and 3+1 format that will be sent if "AC Fail Reporting" is enabled. Segment 1 contains the tens digit of the "AC Fail Reporting". Segment 2 contains the ones digit of the "AC Fail Reporting". Segment 3 contains the tens digit of the "AC Fail Restore". Segment 4 contains the ones digit of the "AC Fail Restore".

For a 3+1 format, only the segment 1 resp. segment 3 digit (tens) will be sent.

LOCATION 69 - LOW BATTERY / LOW BATTERY RESTORE COMMUNICATOR CODES, SLOW SPEED FORMATS ONLY (4 segments, numerical data)

Location 69 contains the tens and ones digits for a 4+2 and 3+1 format that will be sent if "Low Battery Reporting" is enabled. Segment 1 contains the tens digit of the "Low Battery Reporting". Segment 2 contains the ones digit of the "Low Battery Reporting". Segment 3 contains the tens digit of the "Low Battery Restore". Segment 4 contains the ones digit of the "Low Battery Restore".

For a 3+1 format, only the segment 1 digit resp. segment 3 digit (tens) will be sent.

LOCATION 70 - AUX POWER OVERCURRENT/ AUX POWER OVERCURRENT RESTORE COMMUNICATOR CODES, SLOW SPEED FORMATS ONLY (4 segments, numerical data)

Location 70 contains the tens and ones digits for a 4+2 and 3+1 format that will be sent if "Aux Power Overcurrent Reporting" is enabled. Segment 1 contains the tens digit of the "Aux Power Overcurrent Reporting". Segment 2 contains the ones digit of the "Aux Power Overcurrent Reporting". Segment 3 contains the tens digit of the "Aux Power Overcurrent Restore". Segment 4 contains the ones digit of the "Aux Power Overcurrent Restore".

For a 3+1 format, only the segment 1 resp. segment 3 digit (tens) will be sent.

LOCATION 71 - BELL TAMPER AND BELL TAMPER RESTORE COMMUNICATOR CODES, SLOW SPEED FORMATS ONLY (4 segments, numerical data)

Location 71 contains the tens and ones digits for a 4+2 and 3+1 format that will be sent if siren supervision reporting is enabled. Segment 1 contains the tens digit of the "Bell Tamper Reporting". Segment 2 contains the ones digit of the "Bell Tamper Reporting". Segment 3 contains the tens digit of the "Bell Tamper Restore". Segment 4 contains the ones digit of the "Bell Tamper Restore".

For a 3+1 format, only the segment 1 resp. segment 3 digit (tens) will be sent.

LOCATION 72 - TELEPHONE LINE CUT RESTORE COMMUNICATOR CODES, SLOW SPEED FORMATS ONLY (4 segments, numerical data)

Location 72 contains the tens and ones digits for a 4+2 and 3+1 format that will be sent if "Telephone Line Cut Restore Reporting" is enabled. Segment 1 and segment 2 are reserved. Segment 3 contains the tens digit of the "Telephone Line Cut Restore". Segment 4 contains the ones digit of the "Telephone Line Cut Restore".

For a 3+1 format, only the segment 3 digit (tens) will be sent.

LOCATION 73 - B-ALARM REPORT CODE (only for Norway/Sweden)

B-Alarm time is fixed at 30 minutes. The reporting of a B-Alarm is enabled if feature 7 is set on location 37, segment 3.

LOCATION 74 - EXPANDER TROUBLE AND EXPANDER TROUBLE RESTORE COMMUNICATOR CODES, SLOW SPEED FORMATS ONLY (4 segments, numerical data)

Location 74 contains the tens and ones digits for a 4+2 and 3+1 format that will be sent if “Expander Trouble Reporting” is enabled. Segment 1 contains the tens digit of the “Expander Trouble Reporting”. Segment 2 contains the ones digit of the “Expander Trouble Reporting”. Segment 3 contains the tens digit of the “Expander Trouble Restore”. Segment 4 contains the ones digit of the “Expander Trouble Restore”.

For a 3+1 format, only the segment 1 digit resp. segment 3 digit (tens) will be sent.

LOCATION 75 - FAIL TO COMMUNICATE COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (2 segments, numerical data)

Location 75 contains the tens and ones digits for a 4+2 and 3+1 format that will be sent if the “Fail To Communicate Reporting” is enabled. Segment 1 contains the tens digit, and segment 2 contains the ones digit.

For a 3+1 format, only the segment 1 digit (tens) will be sent.

LOCATION 76 - LOG FULL COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (2 segments, numerical data)

Location 76 contains the tens and ones digits for a 4+2 and 3+1 format if the “Log Full Reporting” is enabled. Segment 1 contains the tens digit, and segment 2 contains the ones digit.

For a 3+1 format, only the segment 1 digit (tens) will be sent.

LOCATION 77 - OPENING COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (8 segments, numerical data)

Location 77 contains the tens digit for a 4+2 and 3+1 format if “Opening Reporting” is enabled. The ones digit is the ones digit of the user number that did the opening. If the user is greater than 9, the numbers will begin repeating (e.g. code 6 = 6, code 45 = 5).

This location contains 8 segments. Any segment left as “0” will follow the segment 1 selection.

If you need to report openings and closings with a unique code per user, Contact ID or SIA format must be used.

Segment 1	Opening code for partition 1
Segment 2	Opening code for partition 2
Segment 3	Opening code for partition 3
Segment 4	Opening code for partition 4
Segment 5	Opening code for partition 5
Segment 6	Opening code for partition 6
Segment 7	Opening code for partition 7
Segment 8	Opening code for partition 8

LOCATION 78 - CLOSING COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (8 segments, numerical data)

Location 78 contains the tens digit for a 4+2 and 3+1 format if "Closing Reporting" is enabled. The ones digit is the ones digit of the user number that did the opening. If the user is greater than 9, the numbers will begin repeating (e.g. code 6 = 6, code 45 = 5).

This location contains 8 segments. Any segment left as "0" will follow the segment 1 selection.

If you need to report openings and closings with a unique code per user, Contact ID or SIA format must be used.

Segment 1	Closing code for partition 1
Segment 2	Closing code for partition 2
Segment 3	Closing code for partition 3
Segment 4	Closing code for partition 4
Segment 5	Closing code for partition 5
Segment 6	Closing code for partition 6
Segment 7	Closing code for partition 7
Segment 8	Closing code for partition 8

LOCATION 79 - AUTOTEST COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (2 segments, numerical data)

Location 79 contains the tens and ones digits for a 4+2 and 3+1 format that will be sent if "Autotest" or "Manual Test" is enabled. Segment 1 contains the tens digit, and segment 2 contains the ones digit.

For a 3+1 format, only the segment 1 digit (tens) will be sent.

LOCATION 80 - RECENT CLOSING AND EXIT ERROR COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (2 segments, numerical data)

Location 80 contains the tens digit for a 4+2 and 3+1 format that will be sent if "Recent Closing" and/or "Exit Error Reporting" is enabled. Segment 1 contains the tens digit for the "Recent Closing Reporting". Segment 2 contains the tens digit for the "Exit Error Reporting". The ones digit is the ones digit of the user number that did the opening. If the user is greater than 9, the numbers will begin repeating (e.g. code 6 = 6, code 45 = 5).

If you need to report Recent Closings and Exit Errors with a unique code per user, Contact ID or SIA format must be used.

LOCATION 81 - START PROGRAM AND END PROGRAM COMMUNICATOR CODES, SLOW SPEED FORMATS ONLY (4 segments, numerical data)

Location 81 contains the tens and ones digits for a 4+2 and 3+1 format that will be sent if "Start / End Programming Reporting" is enabled. Segment 1 contains the tens digit of the "Start Program Reporting". Segment 2 contains the ones digit of the "Start Program Reporting". Segment 3 contains the tens digit of the "End Program Reporting". Segment 4 contains the ones digit of the "End Program Reporting".

For a 3+1 format, only the segment 1 digit resp. segment 3 digit (tens) will be sent.

LOCATION 82 - END DOWNLOAD COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (4 segments, numerical data)

Location 82 contains the tens and ones digits for a 4+2 and 3+1 format that will be sent if “End Downloading Reporting” is enabled. Segment 1 and 2 are reserved. Segment 3 contains the tens digit of the “End Download Reporting”. Segment 4 contains the ones digit of the “End Download Reporting”.

Note: A start download report will be sent to the internal event log.

For a 3+1 format, only the segment 1 digit (tens) will be sent.

LOCATION 83 - CANCEL COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY (1 segments, numerical data)

Location 83 contains the tens digit for a 4+2 and 3+1 format that will be sent if “Cancel Reporting” is enabled. Segment 1 contains the tens digit for the “Cancel Communicator Reporting”. The ones digit is the ones digit of the user number that did the opening. If the user is greater than 9, the numbers will begin repeating (e.g. code 6 = 6, code 45 = 5).

If you need to report Cancels with a unique code per user, Contact ID or SIA format must be used.

LOCATIONS 84-87 - RESERVED

Programming partition parameters

LOCATIONS 88-109 ARE FOR PROGRAMMING DIFFERENT ACCOUNT CODES AND/OR FEATURES FOR EACH PARTITION. IF A LOCATION IS LEFT UNPROGRAMMED, THE FEATURE FOR PARTITION 1 AND THE ACCOUNT CODE FOR THE PHONE NUMBER WILL BE USED

LOCATION 88 - ACCOUNT CODE FOR PARTITION 1 (6 segments, numerical data)

Location 88 contains the account code that is sent when partition 1 is reported. If location 88 is left unprogrammed (all "10"s), then the account code corresponding to the phone number that is dialled will be used. If the account code is less than six digits, program a "10" in the segment immediately after the last digit of the account code. If the account code is 6 digits long, program all 6 segments.

LOCATION 89 - ACCOUNT CODE FOR PARTITION 2 (6 segments, numerical data)

Location 89 contains the account code that is sent when partition 2 is reported. If location 89 is left unprogrammed (all "10"s), then the account code corresponding to the phone number that is dialled will be used. If the account code is less than six digits, program a "10" in the segment immediately after the last digit of the account code. If the account code is 6 digits long, program all 6 segments.

LOCATION 90 - PARTITION 2 FEATURE AND REPORTING SELECTIONS (5 segments, feature selection data)

Location 90 is used to enable certain features that the user can access or see from the keypad of the system. In addition, certain communicator reports are enabled in this location. Each of these features can be enabled by partition. This location contains 5 segments, with eight possible features per segment. Refer to location 23 for the feature selections. If all the segments are blank (nothing enabled), the features for partition 1 will be used.

LOCATION 91 - PARTITION 2 ENTRY EXIT TIMERS (6 segments, numerical data)

Location 91 is used to enter the entry and exit times, in seconds. There are 2 separate entry and exit times. Valid entries are 10-255 seconds. If all the segments are "0", the entry and exit times for partition 1 will be used.

Segment 1	Entry time 1	Entry time that will be used when a delay 1 zone type initiates an entry delay
Segment 2	Exit time 1	Exit time that will be used for all zones designated as delay 1
Segment 3	Entry time 2	Entry time that will be used when a delay 2 zone type initiates an entry delay
Segment 4	Exit time 2	Exit time that will be used for all zones designated as delay 2
Segment 5	Reserved	
Segment 6	Reserved	

LOCATION 92 - ACCOUNT CODE FOR PARTITION 3 (6 segments, numerical data)

The account code that is sent when reporting partition 3 is programmed in location 92. If location 92 is left unprogrammed (all "10"), then the account code corresponding to the phone number that is dialled will be used. If the account code is less than six digits, program a "10" in the segment immediately after the last digit of the account code. If the account code is 6 digits long, program all 6 segments.

LOCATION 93 - PARTITION 3 FEATURE AND REPORTING SELECTIONS (5 segments, feature selection data)

Location 93 is used to enable certain features that the user can access or see from the keypad of the system. In addition, certain communicator reports are enabled in this location. Each of these features can be enabled by partition. This location contains 5 segments, with eight possible features per segment. Refer to location 23 for the feature selections. If all the segments are blank (nothing enabled), the features for partition 1 will be used.

LOCATION 94 - PARTITION 3 ENTRY EXIT TIMERS (6 segments, numerical data)

Location 94 is used to enter the entry and exit times, in seconds. There are 2 separate entry and exit times. Valid entries are 10-255 seconds. If all the segments are "0", the entry and exit times for partition 1 will be used.

Segment 1	Entry time 1	Entry time that will be used when a delay 1 zone type initiates an entry delay
Segment 2	Exit time 1	Exit time that will be used for all zones designated as delay 1
Segment 3	Entry time 2	Entry time that will be used when a delay 2 zone type initiates an entry delay
Segment 4	Exit time 2	Exit time that will be used for all zones designated as delay 2
Segment 5	Reserved	
Segment 6	Reserved	

LOCATION 95 - ACCOUNT CODE FOR PARTITION 4 (6 segments, numerical data)

The account code that is sent when reporting partition 4 is programmed in location 95. If location 95 is left unprogrammed (all "10") then the account code corresponding to the phone number that is dialled will be used. If the account code is less than six digits, program a "10" in the segment immediately after the last digit of the account code. If the account code is 6 digits long, program all 6 segments.

LOCATION 96 - PARTITION 4 FEATURE AND REPORTING SELECTIONS (5 segments, feature selection data)

Location 96 is used to enable certain features that the user can access or see from the keypad of the system. In addition, certain communicator reports are enabled in this location. Each of these features can be enabled by partition. This location contains 5 segments, with eight possible features per segment. Refer to location 23 for the feature selections. If all the segments are blank (nothing enabled), the features for partition 1 will be used.

LOCATION 97 - PARTITION 4 ENTRY EXIT TIMERS (6 segments, numerical data)

Location 97 is used to enter the entry and exit times in seconds. There are 2 separate entry and exit times. Valid entries are 10-255 seconds. If all the segments are "0", the entry and exit times for partition 1 will be used.

Segment 1	Entry time 1	Entry time that will be used when a delay 1 zone type initiates an entry delay
Segment 2	Exit time 1	Exit time that will be used for all zones designated as delay 1
Segment 3	Entry time 2	Entry time that will be used when a delay 2 zone type initiates an entry delay
Segment 4	Exit time 2	Exit time that will be used for all zones designated as delay 2
Segment 5	Reserved	
Segment 6	Reserved	

LOCATION 98 - ACCOUNT CODE FOR PARTITION 5 (6 segments, numerical data)

The account code that is sent when reporting partition 5 is programmed in location 98. If location 98 is left unprogrammed (all "10") then the account code corresponding to the phone number that is dialled will be used. If the account code is less than six digits, program a "10" in the segment immediately after the last digit of the account code. If the account code is 6 digits long, program all 6 segments.

LOCATION 99 - PARTITION 5 FEATURE AND REPORTING SELECTIONS (5 segments, numerical data)

Location 99 is used to enable certain features that the user can access or see from the keypad of the system. In addition, certain communicator reports are enabled in this location. Each of these features can be enabled by partition. This location contains 5 segments, with eight possible features per segment. Refer to location 23 for the feature selections. If all the segments are blank (nothing enabled), the features for partition 1 will be used.

LOCATION 100 - PARTITION 5 ENTRY EXIT TIMERS (6 segments, numerical data)

Location 100 is used to enter the entry and exit times in seconds. There are 2 separate entry and exit times. Valid entries are 10-255 seconds. If all the segments are "0", the entry and exit times for partition 1 will be used.

Segment 1	Entry time 1	Entry time that will be used when a delay 1 zone type initiates an entry delay
Segment 2	Exit time 1	Exit time that will be used for all zones designated as delay 1
Segment 3	Entry time 2	Entry time that will be used when a delay 2 zone type initiates an entry delay
Segment 4	Exit time 2	Exit time that will be used for all zones designated as delay 2
Segment 5	Reserved	
Segment 6	Reserved	

LOCATION 101 - ACCOUNT CODE FOR PARTITION 6 (6 segments, numerical data)

The account code that is sent when reporting partition 6 is programmed in location 101. If location 101 is left unprogrammed (all "10") then the account code corresponding to the phone number that is dialled will be used. If the account code is less than six digits, program a "10" in the segment immediately after the last digit of the account code. If the account code is 6 digits long, program all 6 segments.

LOCATION 102 - PARTITION 6 FEATURE AND REPORTING SELECTIONS (5 segments, feature selection data)

Location 102 is used to enable certain features that the user can access or see from the keypad of the system. In addition, certain communicator reports are enabled in this location. Each of these features can be enabled by partition. This location contains 5 segments, with eight possible features per segment. Refer to location 23 for the feature selections. If all the segments are blank (nothing enabled), the features for partition 1 will be used.

LOCATION 103 - PARTITION 6 ENTRY EXIT TIMERS (6 segments, numerical data)

Location 103 is used to enter the entry and exit times in seconds. There are 2 separate entry and exit times. Valid entries are 10-255 seconds. If all the segments are "0", the entry and exit times for partition 1 will be used.

Segment 1	Entry time 1	Entry time that will be used when a delay 1 zone type initiates an entry delay
Segment 2	Exit time 1	Exit time that will be used for all zones designated as delay 1
Segment 3	Entry time 2	Entry time that will be used when a delay 2 zone type initiates an entry delay
Segment 4	Exit time 2	Exit time that will be used for all zones designated as delay 2
Segment 5	Reserved	
Segment 6	Reserved	

LOCATION 104 - ACCOUNT CODE FOR PARTITION 7 (6 segments, numerical data)

The account code that is sent when reporting partition 7 is programmed in location 104. If location 104 is left unprogrammed (all "10") then the account code corresponding to the phone number that is dialled will be used. If the account code is less than six digits, program a "10" in the segment immediately after the last digit of the account code. If the account code is 6 digits long, program all 6 segments.

LOCATION 105 - PARTITION 7 FEATURE AND REPORTING SELECTIONS (5 segments, feature selection data)

Location 105 is used to enable certain features that the user can access or see from the keypad of the system. In addition, certain communicator reports are enabled in this location. Each of these features can be enabled by partition. This location contains 5 segments, with eight possible features per segment. Refer to location 23 for the feature selections. If all the segments are blank (nothing enabled), the features for partition 1 will be used.

LOCATION 106 - PARTITION 7 ENTRY EXIT TIMERS (6 segments, numerical data)

Location 106 is used to enter the entry and exit times in seconds. There are 2 separate entry and exit times. Valid entries are 10-255 seconds. If all the segments are "0", the entry and exit times for partition 1 will be used.

Segment 1	Entry time 1	Entry time that will be used when a delay 1 zone type initiates an entry delay
Segment 2	Exit time 1	Exit time that will be used for all zones designated as delay 1
Segment 3	Entry time 2	Entry time that will be used when a delay 2 zone type initiates an entry delay
Segment 4	Exit time 2	Exit time that will be used for all zones designated as delay 2
Segment 5	Reserved	
Segment 6	Reserved	

LOCATION 107 - ACCOUNT CODE FOR PARTITION 8 (6 segments, numerical data)

The account code that is sent when reporting partition 8 is programmed in location 107. If location 107 is left unprogrammed (all "10") then the account code corresponding to the phone number that is dialled will be used. If the account code is less than six digits, program a "10" in the segment immediately after the last digit of the account code. If the account code is 6 digits long, program all 6 segments.

LOCATION 108 - PARTITION 8 FEATURE AND REPORTING SELECTIONS (5 segments, feature selection data)

Location 108 is used to enable certain features that the user can access or see from the keypad of the system. In addition, certain communicator reports are enabled in this location. Each of these features can be enabled by partition. This location contains 5 segments, with eight possible features per segment. Refer to location 23 for the feature selections. If all the segments are blank (nothing enabled), the features for partition 1 will be used.

LOCATION 109 - PARTITION 8 ENTRY EXIT TIMERS (6 segments, numerical data)

Location 109 is used to enter the entry and exit times in seconds. There are 2 separate entry and exit times. Valid entries are 10-255 seconds. If all the segments are "0", the entry and exit times for partition 1 will be used.

Segment 1	Entry time 1	Entry time that will be used when a delay 1 zone type initiates an entry delay
Segment 2	Exit time 1	Exit time that will be used for all zones designated as delay 1
Segment 3	Entry time 2	Entry time that will be used when a delay 2 zone type initiates an entry delay
Segment 4	Exit time 2	Exit time that will be used for all zones designated as delay 2
Segment 5	Reserved	
Segment 6	Reserved	

Programming zone configuration groups

LOCATIONS 110-169 ARE USED TO CHANGE THE ZONE CONFIGURATIONS AS LISTED IN THE TABLE ON PAGES 44-46. THESE LOCATIONS ARE CONSIDERED AS ADVANCED PROGRAMMING, AND THEY SHOULD ONLY BE CHANGED IF YOU HAVE A THOROUGH UNDERSTANDING OF THE OPERATION OF EACH BIT.

LOCATION 110 - CONFIGURATION GROUP 1 ALARM EVENT CODE (1 segment, numerical data)

Location 110 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 111 - CONFIGURATION GROUP 1 CHARACTERISTIC SELECT (5 segments, feature selection data)

- | | |
|------------------|--|
| Segment 1 | <ul style="list-style-type: none"> 1 = Fire (turn on if this is a fire zone) 2 = 24 hour (turn on for non-fire 24 hour zones) 3 = Keyswitch zone (normally open switch) 4 = Follower (turn on for burglary zones that are Instant during non-entry times) 5 = Delay 1 zone (follows timer 1 Entry and Exit times) 6 = Delay 2 zone (follows timer 2 Entry and Exit times) 7 = Interior (turn on if this zone should Automatically Bypass or Bypass for Stay Arming) 8 = Local only (turn on if this zone should not be reported) <p>Remark: for a maintained keyswitch (ON/OFF), program both "keyswitch" and "local"</p> |
| Segment 2 | <ul style="list-style-type: none"> 1 = On: if configuration group will beep the keypad for alarm 2 = On: if configuration group will sound the yelping siren for alarm 3 = On: if configuration group will sound the steady siren for alarm 4 = On: if configuration group will chime 5 = On: if configuration group can be bypassed 6 = On: if configuration group is included in the group shunt 7 = On: if configuration group is force armable 8 = On: if configuration group is entry guard |
| Segment 3 | <ul style="list-style-type: none"> 1 = On: enables Fast Loop Response. (50mS) - Off= 500mS 2 = On: enables Double End Of Line Tamper zone. (Mainly used for tamper on wireless zones) 3 = On: enables Trouble Reporting zone. (Day zone and Fire zones) 4 = On: if configuration group is a Cross Zone 5 = On: enables Dialler Delay zone. (See location 40) 6 = On: if configuration group will use swinger shutdown. (See location 38) 7 = On: enables Restore reporting 8 = On: enables Listen-In. (See location 40) |

-
- | | | |
|------------------|-----|---|
| Segment 4 | 1 = | On: enables zone activity monitor |
| | 2 = | On: enables end of line resistor defeat on non-fire/non-keyswitch zones |
| | 3 = | On : enables zone to act as request to exit input / disables for alarm activation |
| | 4 = | On : enables zone to act as access control zone (Door Shunt) |
| | 5 = | Reserved |
| | 6 = | Reserved |
| | 7 = | Reserved |
| | 8 = | Reserved |
| Segment 5 | 1-8 | Reserved |

LOCATION 112 - CONFIGURATION GROUP 2 ALARM EVENT CODE (1 segment, numerical data)

Location 112 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 113 - CONFIGURATION GROUP 2 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 114 - CONFIGURATION GROUP 3 ALARM EVENT CODE (1 segment, numerical data)

Location 114 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 115 - CONFIGURATION GROUP 3 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 116 - CONFIGURATION GROUP 4 ALARM EVENT CODE (1 segment, numerical data)

Location 116 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 117 - CONFIGURATION GROUP 4 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 118 - CONFIGURATION GROUP 5 ALARM EVENT CODE (1 segment, numerical data)

Location 118 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 119 - CONFIGURATION GROUP 5 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 120 - CONFIGURATION GROUP 6 ALARM EVENT CODE (1 segment, numerical data)

Location 120 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 121 - CONFIGURATION GROUP 6 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 122 - CONFIGURATION GROUP 7 ALARM EVENT CODE (1 segment, numerical data)

Location 122 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on page 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 123 - CONFIGURATION GROUP 7 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 124 - CONFIGURATION GROUP 8 ALARM EVENT CODE (1 segment, numerical data)

Location 124 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 125 - CONFIGURATION GROUP 8 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 126 - CONFIGURATION GROUP 9 ALARM EVENT CODE (1 segment, numerical data)

Location 126 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 127 - CONFIGURATION GROUP 9 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 128 - CONFIGURATION GROUP 10 ALARM EVENT CODE (1 segment, numerical data)

Location 128 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 129 - CONFIGURATION GROUP 10 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 130 - CONFIGURATION GROUP 11 ALARM EVENT CODE (1 segment, numerical data)

Location 130 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 131 - CONFIGURATION GROUP 11 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 132 - CONFIGURATION GROUP 12 ALARM EVENT CODE (1 segment, numerical data)

Location 132 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 133 - CONFIGURATION GROUP 12 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 134 - CONFIGURATION GROUP 13 ALARM EVENT CODE (1 segment, numerical data)

Location 134 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 135 - CONFIGURATION GROUP 13 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 136 - CONFIGURATION GROUP 14 ALARM EVENT CODE (1 segment, numerical data)

Location 136 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 137 - CONFIGURATION GROUP 14 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 138 - CONFIGURATION GROUP 15 ALARM EVENT CODE (1 segment, numerical data)

Location 138 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 139 - CONFIGURATION GROUP 15 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 140 - CONFIGURATION GROUP 16 ALARM EVENT CODE (1 segment, numerical data)

Location 140 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 141 - CONFIGURATION GROUP 16 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 142 - CONFIGURATION GROUP 17 ALARM EVENT CODE (1 segment, numerical data)

Location 142 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 143 - CONFIGURATION GROUP 17 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 144 - CONFIGURATION GROUP 18 ALARM EVENT CODE (1 segment, numerical data)

Location 144 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 145 - CONFIGURATION GROUP 18 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 146 - CONFIGURATION GROUP 19 ALARM EVENT CODE (1 segment, numerical data)

Location 146 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 147 - CONFIGURATION GROUP 19 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 148 - CONFIGURATION GROUP 20 ALARM EVENT CODE (1 segment, numerical data)

Location 148 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 149 - CONFIGURATION GROUP 20 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 150 - CONFIGURATION GROUP 21 ALARM EVENT CODE (1 segment, numerical data)

Location 150 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 151 - CONFIGURATION GROUP 21 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 152 - CONFIGURATION GROUP 22 ALARM EVENT CODE (1 segment, numerical data)

Location 152 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 153 - CONFIGURATION GROUP 22 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 154 - CONFIGURATION GROUP 23 ALARM EVENT CODE (1 segment, numerical data)

Location 154 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 155 - CONFIGURATION GROUP 23 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 156 - CONFIGURATION GROUP 24 ALARM EVENT CODE (1 segment, numerical data)

Location 156 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 157 - CONFIGURATION GROUP 24 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 158 - CONFIGURATION GROUP 25 ALARM EVENT CODE (1 segment, numerical data)

Location 158 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 159 - CONFIGURATION GROUP 25 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 160 - CONFIGURATION GROUP 26 ALARM EVENT CODE (1 segment, numerical data)

Location 160 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 161 - CONFIGURATION GROUP 26 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 162 - CONFIGURATION GROUP 27 ALARM EVENT CODE (1 segment, numerical data)

Location 162 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 163 - CONFIGURATION GROUP 27 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 164 - CONFIGURATION GROUP 28 ALARM EVENT CODE (1 segment, numerical data)

Location 164 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 165 - CONFIGURATION GROUP 28 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 166 - CONFIGURATION GROUP 29 ALARM EVENT CODE (1 segment, numerical data)

Location 166 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 167 - CONFIGURATION GROUP 29 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

LOCATION 168 - CONFIGURATION GROUP 30 ALARM EVENT CODE (1 segment, numerical data)

Location 168 contains the event code that is sent for a Contact ID or SIA report. The desired event code should be chosen from the list on pages 121-122. The zone ID will be the zone that is in alarm.

This location is not used for slow speed formats (like 4+2 and 3+1). This location may also contain the alarm report code for the Robofon format (value 00-99).

LOCATION 169 - CONFIGURATION GROUP 30 CHARACTERISTIC SELECT (5 segments, feature selection data)

Use the "Configuration Group Characteristic Selections" described in Location 111.

🔑 LOCATION 170 - ZONES 49-56 CONFIGURATION GROUP (8 segments, numerical data)

Location 170 contains the configuration group (zone type) for zones 1-8. Segment 1 is for zone 49, and segment 8 is for zone 56. You will find the default configurations in the table above.

LOCATION 171 - PARTITION SELECT, ZONES 49-56 segments, feature selection data)

Location 171 is used to select the partition(s) in which zones 49-56 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 49, and segment 8 corresponds to zone 56.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 172 - ZONES 57-64 CONFIGURATION GROUP (8 segments, numerical data)

Location 172 contains the configuration group (zone type) for zones 57-64. Segment 1 is for zone 57, and segment 8 is for zone 64. You will find the default configurations in the table above.

LOCATION 173 - PARTITION SELECT, ZONES 57-64 (8 segments, feature selection data)

Location 173 is used to select the partition(s) in which zones 57-64 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 57, and segment 8 corresponds to zone 64.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 174 - ZONES 65-72 CONFIGURATION GROUP (8 segments, numerical data)

Location 174 contains the configuration group (zone type) for zones 65-72. Segment 1 is for zone 65, and segment 8 is for zone 72. You will find the default configurations in the table above.

LOCATION 175 - PARTITION SELECT, ZONES 65-72 (8 segments, feature selection data)

Location 175 is used to select the partition(s) in which zones 65-72 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 65, and segment 8 corresponds to zone 72.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ **LOCATION 176 - ZONES 73-80 CONFIGURATION GROUP (8 segments, numerical data)**

Location 176 contains the configuration group (zone type) for zones 73-80. Segment 1 is for zone 73, and segment 8 is for zone 80. You will find the default configurations in the table above.

LOCATION 177 - PARTITION SELECT, ZONES 73-80 (8 segments, feature selection data)

Location 177 is used to select the partition(s) in which zones 73-80 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 73, and segment 8 corresponds to zone 80.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ **LOCATION 178 - ZONES 81-88 CONFIGURATION GROUP (8 segments, numerical data)**

Location 178 contains the configuration group (zone type) for zones 81-88. Segment 1 is for zone 81, and segment 8 is for zone 88. You will find the default configurations in the table above.

LOCATION 179 - PARTITION SELECT, ZONES 81-88 (8 segments, feature selection data)

Location 179 is used to select the partition(s) in which zones 81-88 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 81, and segment 8 corresponds to zone 88.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 180 - ZONES 89-96 CONFIGURATION GROUP (8 segments, numerical data)

Location 180 contains the configuration group (zone type) for zones 89-96. Segment 1 is for zone 89, and segment 8 is for zone 96. You will find the default configurations in the table above.

LOCATION 181 - PARTITION SELECT, ZONES 89-96 (8 segments, feature selection data)

Location 181 is used to select the partition(s) in which zones 89-96 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 89, and segment 8 corresponds to zone 96.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 182 - ZONES 97-104 CONFIGURATION GROUP (8 segments, numerical data)

Location 182 contains the configuration group (zone type) for zones 97-104. Segment 1 is for zone 97, and segment 8 is for zone 104. You will find the default configurations in the table above.

LOCATION 183 - PARTITION SELECT, ZONES 97-104 (8 segments, feature selection data)

Location 183 is used to select the partition(s) in which zones 97-104 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 97, and segment 8 corresponds to zone 104.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 184 - ZONES 105-112 CONFIGURATION GROUP (8 segments, numerical data)

Location 184 contains the configuration group (zone type) for zones 105-112. Segment 1 is for zone 105, and segment 8 is for zone 112. You will find the default configurations in the table above.

LOCATION 185 - PARTITION SELECT, ZONES 105-112 (8 segments, feature selection data)

Location 185 is used to select the partition(s) in which zones 105-112 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 105, and segment 8 corresponds to zone 112.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 186 - ZONES 113-120 CONFIGURATION GROUP (8 segments, numerical data)

Location 186 contains the configuration group (zone type) for zones 113-120. Segment 1 is for zone 113, and segment 8 is for zone 120. You will find the default configurations in the table above.

LOCATION 187 - PARTITION SELECT, ZONES 113-120 (8 segments, feature selection data)

Location 187 is used to select the partition(s) in which zones 113-120 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 113, and segment 8 corresponds to zone 120.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 188 - ZONES 121-128 CONFIGURATION GROUP (8 segments, numerical data)

Location 188 contains the configuration group (zone type) for zones 121-128. Segment 1 is for zone 121, and segment 8 is for zone 128. You will find the default configurations in the table above.

LOCATION 189 - PARTITION SELECT, ZONES 121-128 (8 segments, feature selection data)

Location 189 is used to select the partition(s) in which zones 121-128 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 121, and segment 8 corresponds to zone 128.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 190 - ZONES 129-136 CONFIGURATION GROUP (8 segments, numerical data)

Location 190 contains the configuration group (zone type) for zones 129-136. Segment 1 is for zone 129, and segment 8 is for zone 136. You will find the default configurations in the table above.

LOCATION 191 - PARTITION SELECT, ZONES 129-136 (8 segments, feature selection data)

Location 191 is used to select the partition(s) in which zones 129-136 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 129, and segment 8 corresponds to zone 136.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 192 - ZONES 137-144 CONFIGURATION GROUP (8 segments, numerical data)

Location 192 contains the configuration group (zone type) for zones 137-144. Segment 1 is for zone 137, and segment 8 is for zone 144. You will find the default configurations in the table above.

LOCATION 193 - PARTITION SELECT, ZONES 137-144 (8 segments, feature selection data)

Location 193 is used to select the partition(s) in which zones 137-144 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 137, and segment 8 corresponds to zone 144.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 194 - ZONES 145-152 CONFIGURATION GROUP (8 segments, numerical data)

Location 194 contains the configuration group (zone type) for zones 145-152. Segment 1 is for zone 145, and segment 8 is for zone 152. You will find the default configurations in the table above.

LOCATION 195 - PARTITION SELECT, ZONES 145-152 (8 segments, feature selection data)

Location 195 is used to select the partition(s) in which zones 145-152 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 145, and segment 8 corresponds to zone 152.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 196 - ZONES 153-160 CONFIGURATION GROUP (8 segments, numerical data)

Location 196 contains the configuration group (zone type) for zones 153-160. Segment 1 is for zone 153, and segment 8 is for zone 160. You will find the default configurations in the table above.

LOCATION 197 - PARTITION SELECT, ZONES 153-160 (8 segments, feature selection data)

Location 197 is used to select the partition(s) in which zones 153-160 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 153, and segment 8 corresponds to zone 160.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 198 - ZONES 161-168 CONFIGURATION GROUP (8 segments, numerical data)

Location 198 contains the configuration group (zone type) for zones 161-168. Segment 1 is for zone 161, and segment 8 is for zone 168. You will find the default configurations in the table above.

LOCATION 199 - PARTITION SELECT, ZONES 161-168 (8 segments, feature selection data)

Location 199 is used to select the partition(s) in which zones 161-168 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 161, and segment 8 corresponds to zone 168.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 200 - ZONES 169-176 CONFIGURATION GROUP (8 segments, numerical data)

Location 200 contains the configuration group (zone type) for zones 169-172. Segment 1 is for zone 169, and segment 8 is for zone 176. You will find the default configurations in the table above.

LOCATION 201 - PARTITION SELECT, ZONES 169-176 (8 segments, feature selection data)

Location 201 is used to select the partition(s) in which zones 169-176 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 169, and segment 8 corresponds to zone 176.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 202 - ZONES 177-184 CONFIGURATION GROUP (8 segments, numerical data)

Location 202 contains the configuration group (zone type) for zones 177-184. Segment 1 is for zone 177, and segment 8 is for zone 184. You will find the default configurations in the table above.

LOCATION 203 - PARTITION SELECT, ZONES 177-184 (8 segments, feature selection data)

Location 203 is used to select the partition(s) in which zones 177-184 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 177, and segment 8 corresponds to zone 184.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

☞ LOCATION 204 - ZONES 185-192 CONFIGURATION GROUP (8 segments, numerical data)

Location 204 contains the configuration group (zone type) for zones 185-192. Segment 1 is for zone 185, and segment 8 is for zone 192. You will find the default configurations in the table above.

LOCATION 205 - PARTITION SELECT, ZONES 185-192 (8 segments, feature selection data)

Location 205 is used to select the partition(s) in which zones 185-192 reside. A zone may reside in any combination of the 8 partitions. If a burglary zone resides in more than 1 partition, that zone will only be active when all the partitions in which it is resident in are armed. A zone that resides in more than 1 partition will be reported to its lowest partition number. Location 26 has 8 segments. Segment 1 corresponds to zone 185, and segment 8 corresponds to zone 192.

Segment 1-8	1 =	Partition 1
	2 =	Partition 2
	3 =	Partition 3
	4 =	Partition 4
	5 =	Partition 5
	6 =	Partition 6
	7 =	Partition 7
	8 =	Partition 8

LOCATION 206 – AUTO DISARM DAY SELECTOR (8 segments, feature selection data)

Location 206 selects which days each partition will auto disarm. Segment 1 is for partition 1 and segment 8 is for partition 8.

Segment 1-8	1 =	Auto disarming on Sunday
	2 =	Auto disarming on Monday
	3 =	Auto disarming on Tuesday
	4 =	Auto disarming on Wednesday
	5 =	Auto disarming on Thursday
	6 =	Auto disarming on Friday
	7 =	Auto disarming on Saturday
	8 =	Reserved

LOCATION 207 – SERIAL PORT SELECTOR (1 segment, feature selection data)

Location 207 enables the serial port operations. There is one segment.

0 =	Disabled
1 =	NX-584 enabled
2 =	Serial printer enabled

LOCATION 208 – BAUD RATE TABLE (1 segment, feature selection data)

The serial port can operate on a number of different baud rates. Consult the home automation information to determine the best baud rate for your application and program it in location 208. The default is “2” – 9600 baud or the serial printer baud rate.

Segment 1	0 =	2400 Baud (2.4K)
	1 =	4800 Baud (4.8K)
	2 =	9600 Baud (9.6K)
	3 =	19200 Baud (19.2K)
	4 =	38400 Baud (38.4K)
	5-7	Reserved

LOCATION 209 – PROGRAMMING THE NX-8E HOME AUTOMATION PROTOCOL (1 segment, numerical data)

The NX-8E home automation protocol can operate in one of two possible modes – binary or ASCII. Consult the home automation application information to determine the proper mode for your application and program it in location 209. The default is “Off” – binary.

Segment 1	1 =	Off: binary. On: ASCII.
	2-8	Reserved

LOCATION 210 – PROGRAMMING THE NX-8E HOME AUTOMATION PROTOCOL (1 segment, numerical data)

The NX-8E can be programmed to automatically send information to the home automation system whenever there has been a change in this information. This is referred to as “transition-based broadcasting”. Which information packets use “transition-based broadcasting” is dependent upon the application and the capabilities of the home automation system. Location 210 is used to enable and disable the appropriate transition-based broadcasts. Consult the home automation application information and enable the appropriate transition based broadcasts in location 210.

Segment 1	1 =	Reserved
	2 =	Interface configuration at power-up / end download / program mode
	3 =	Reserved
	4 =	Reserved
	5 =	Zone status message
	6 =	Zones snapshot message
	7 =	Partition status message
	8 =	Partitions snapshot message
Segment 2	1 =	System status message
	2 =	X-10 message received
	3 =	Log event message
	4 =	Keypad message received
	5-8	Reserved

LOCATION 211 – PROGRAMMING THE COMMAND / REQUEST ENABLES (4 segments, feature selection data)

The NX-8E has the ability to perform a variety of commands asked of it by the home automation system. For example, it is possible to allow arming and disarming of the security system, programming of the security system, or bypassing of zones by the home automation system. Location 211 is used to select which commands, if any, you wish the home automation system to have access. Consult the home automation information and enable the appropriate commands for your application.

CAUTION: It is important to understand the capabilities of the home automation system to avoid compromising the security of your system when programming this location.

- | | | |
|------------------|-----|--|
| Segment 1 | 1 = | Reserved |
| | 2 = | Interface configuration request |
| | 3 = | Reserved |
| | 4 = | Zone name request |
| | 5 = | Zone status request |
| | 6 = | Zones snapshot request |
| | 7 = | Partition status request |
| | 8 = | Partitions snapshot request |
| Segment 2 | 1 = | System status request |
| | 2 = | Send X-10 message |
| | 3 = | Log event request |
| | 4 = | Send keypad text message |
| | 5 = | Keypad terminal mode request |
| | 6-8 | Reserved |
| Segment 3 | 1 = | Program data request |
| | 2 = | Program data command |
| | 3 = | User information request with PIN |
| | 4 = | User information request without PIN |
| | 5 = | Set user code command with PIN |
| | 6 = | Set user code command without PIN |
| | 7 = | Set user authorisation command with PIN |
| | 8 = | Set user authorisation command without PIN |
| Segment 4 | 1-2 | Reserved |
| | 3 = | Store communication event command |
| | 4 = | Set clock / calendar command |
| | 5 = | Primary keypad function with PIN |
| | 6 = | Primary keypad function without PIN |
| | 7 = | Secondary keypad function |
| | 8 = | Zone bypass toggle |

LOCATION 212 – PROGRAMMING THE LCD KEYPAD ADDRESS (1 segment, numerical data)

Certain commands in the NX-8E require it to know the location of at least 1 LCD keypad (if one exist in the system). If your system has a LCD keypad it is recommended that it will be placed in location 1 keypad 1. This will allow location 212 to be left at the factory default. If the LCD keypad is selected as something other than partition 1 / keypad1, program the appropriate address in location 212. Select the address from the location chart.

Keypad	Part 1	Part 2	Part 3	Part 4	Part 5	Part 6	Part 7	Part 8
1	192	193	194	195	196	197	198	199
2	200	201	202	203	204	205	206	207
3	208	209	210	211	212	213	214	215
4	216	217	218	219	220	221	222	223
5	224	225	226	227	228	229	230	231
6	232	233	234	235	236	237	238	239
7	240	241	242	243	244	245	246	247
8	248	249	250	251	252	253	254	255

11	38	PHONE 2, SELECTING WHICH PARTITIONS REPORT TO PHONE 2	
		Segment 1 (Circle Numbers To Program)	
		1	Partition 1
		2	Partition 2
		3	Partition 3
		4	Partition 4
		5	Partition 5
		6	Partition 6
		8	Partition 8

12	38	PHONE 3	14-14-14-14-14-14-14-14-14-14-14-14-14-14-14-14		
13	38	PHONE 3, ACCOUNT CODE	10 - 10 - 10 - 10 - 10 - 10		
14	39	PHONE 3, REPORTING FORMAT	0		
15	39	PHONE 3, DIAL ATTEMPTS BACKUP CONTROL	8 0		
16	40	PHONE 3, SELECTING EVENTS TO REPORT TO PHONE 3			
		Segment 1 (Circle Numbers To Program)		Segment 2 (Circle Numbers To Program)	
		1	Alarms	1	Tampers (zones and box)
		2	Open/Close	2	Short Circuit
		3	Bypass	3	Sensor Lost
		4	Zone Trouble	4	Sensor Low Battery
		5	Power Trouble (AC Failure or Low Batt.)	5	Expander Trouble (incl. keypad)
		6	Siren & Telephone Fault	6	Failure To Communicate
		8	Program, Download, & Log Full	8	Tamper Restore
17	40	PHONE 3, SELECTING WHICH PARTITIONS REPORT TO PHONE 3			
		Segment 1 (Circle Numbers To Program)			
		1	Partition 1		
		2	Partition 2		
		3	Partition 3		
		4	Partition 4		
		5	Partition 5		
		6	Partition 6		
		8	Partition 8		

18	41	FORMAT OVERRIDE			
		Segment 1 (Circle Numbers To Program)		Segment 2 (Circle Numbers To Program)	
		1	On = 1800hz transmit; Off = 1900hz	1	On = pager format (no handshake required)
		2	On = 2300hz handshake; Off = 1400hz	2	On = 1400/2300 handshake
		3	On =chksum parity; Off = double round par.	3	Reserved
		4	On = 2 digit event code; Off = 1 digit code	4	Reserved
		5	On = extended reporting; Off =non-extended	5	On = Contact ID
		6	Reserved	6	On = SIA
		7	On = 20 PPS; Off = 10 or 40 PPS	7	On = 3 digit event code
		8	On = 10 PPS; Off = 20 or 40 PPS	8	On = DTMF
		Segment 3 RESERVED			
		Segment 4 INTER-DIGIT TIME			0-0-0-0

19	42	DOWNLOAD ACCESS CODE	8-4-8-0-0-0-0-0
20	42	RINGS TO ANSWER DOWNLOAD	8

21	42	DOWNLOAD CONTROL	
		Segment 1 (Circle Numbers To Program)	
		1	Enables two-call answering machine defeat
		2	Reserved
		3	Requires callback before downloading
		4	Shutdown control panel
		5	Lock out local programming
		6	Lock out communicator programming
		7	Lock out download section
8	Enables callback at autotest interval		

22	42	CALLBACK PHONE NUMBER	14-14
----	----	-----------------------	---

23	43	PARTITION 1, FEATURE SELECTION							
		Segment 1		Segment 2			Segment 3		
		1	Quick Arm	1	LED extinguish enable	1	Open/Close		
		2	Re-Exit	2	Require user code for bypassing zones	2	Bypass		
		3	Auto Bypass (interior)	3	Bypass sounder alert	3	Restore		
		4	Silent Panic	4	AC power/ low battery sounder alert	4	Trouble		
		5	Audible Panic	5	Enables bypass toggle	5	Tamper		
		6	Auxiliary 1	6	Enables silent auto arm	6	Cancel		
		7	Auxiliary 2	7	Enables automatic instant (entry/exit)	7	Recent Closing		
		8	Multi Keypress Tamper	8	Final set door	8	Exit Error		
		Segment 4				Segment 5			
		1	Late to close/early to open	1	Reserved				
		2	Auto arm in stay mode	2	Reserved				
		3	Enables instant night	3	Reserved				
		4	Tamper when sensor lost if armed	4	Reserved				
		5	Enables instant stay toggle	5	Reserved				
		6	Reserved	6	Reserved				
		7	Reserved	7	Reserved				
		8	Reserved	8	Reserved				

24	44	ENTRY/EXIT TIMERS	
		Segment 1 (Entry Time 1)	30
		Segment 2 (Exit Time 1)	60
		Segment 3 (Entry Time 2)	30
		Segment 4 (Exit Time 2)	60
		Reserved	0
		Reserved	0

25	48	ZONES 1-8, CONFIGURATION GROUPS	3-5-6-6-6-6-6-6
----	----	---------------------------------	------------------------

26	48	ZONES 1-8, PARTITION SELECTION (Segment 1=Zone 1 thru Segment 8=Zone 8)								
		Segments	1	2	3	4	5	6	7	8
		Partition 1	1	1	1	1	1	1	1	1
		Partition 2	2	2	2	2	2	2	2	2
		Partition 3	3	3	3	3	3	3	3	3
		Partition 4	4	4	4	4	4	4	4	4
		Partition 5	5	5	5	5	5	5	5	5
		Partition 6	6	6	6	6	6	6	6	6
		Partition 7	7	7	7	7	7	7	7	7
		Partition 8	8	8	8	8	8	8	8	8

27	48	ZONES 9-16, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
28	48	ZONES 9-16, PARTITION SELECTION (Segment 1=Zone 9 thru Segment 8=Zone 16)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
29	49	ZONES 17-24, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
30	49	ZONES 17-24, PARTITION SELECTION (Segment 1=Zone 17 thru Segment 8=Zone 24)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
31	49	ZONES 25-32, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
32	49	ZONES 25-32, PARTITION SELECTION (Segment 1=Zone 25 thru Segment 8=Zone 32)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
33	50	ZONES 33-40, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
34	50	ZONES 33-40, PARTITION SELECTION (Segment 1=Zone 33 thru Segment 8=Zone 40)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
35	50	ZONES 41-48, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
36	50	ZONES 41-48, PARTITION SELECTION (Segment 1=Zone 41 thru Segment 8=Zone 48)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			

37	51	SIREN AND SYSTEM SUPERVISION
		Segment 1 (Circle Numbers To Program)
		1 <i>Siren sounds for telephone line cut while armed</i>
		2 Siren sounds for telephone line cut while disarmed
		3 Siren blast at arming (pulse)
		4 Siren blast at exit delay expiration (pulse)
		5 Siren blast at closing kissoff (pulse)
		6 Siren sounds during a cross zone verification time
		7 <i>Siren sounds for a tamper</i>
		8 Siren blast once for keyswitch arming, twice for disarming
		Segment 2 (Circle Numbers To Program)
		1 Convert siren driver to voltage out
		2 Siren sounds for expander trouble
		3 Zones to always restore
		4 Dynamic battery test performed upon arming
		5 <i>Battery missing test performed every 12 seconds</i>
		6 <i>Manual bell test performed during [*]-[4]-[4] test function</i>
		7 Manual communicator test performed during [*]-[4]-[4] test function
		8 <i>Box tamper enabled</i>
		Segment 3 (Circle Numbers To Program)
		1 <i>Box Tamper report enabled</i>
		2 <i>AC Fail report enabled</i>
		3 <i>Low Battery report enabled</i>
		4 <i>Auxiliary power overcurrent report enabled</i>
		5 <i>Siren supervision report enabled</i>
		6 <i>Restore Telephone Line Cut report enabled</i>
		7 Reserved
		8 <i>Expander trouble report enabled</i>
		Segment 4 (Circle Numbers To Program)
		1 <i>Failure To Communicate report enabled</i>
		2 Log Full report enabled
		3 Autotest report enabled
		4 <i>Start and End Programming report enabled</i>
		5 <i>End Download report enabled</i>
		6 Sensor Low Battery report enabled
		7 Sensor Missing report enabled
		8 Autotest report enabled ONLY when system is armed
		Segment 5 (Circle Numbers To Program)
		1 <i>Lost Clock service LED enable</i>
		2 Wireless and hardwired zones used together for zones 1-8 only
		3 Disable eight on-board zones
		4 Enable two trips on the same cross-zone to activate the alarm
		5 Disable bypass reports for force armed zones
		6 <i>Silent exit</i>
		7 Activate "first disarm reporting" - "last arm reporting" for partitions
		8 Automatic switch summer/wintertime and vice versa
		Segment 6 (Circle Numbers To Program)
		1 Enable 2 wire smoke sensors on zone 8
		2 Reserved
		3 Enable zone activity in hours (not in days)
		4-5 Reserved
6 Disable Clean Me report		
7-8 Reserved		

37	52	Segment 7 (Circle Numbers To Program)		
		1	Clock uses internal crystal	
		2	dial via GSM when phone line trouble (only when NX-7002 is used)	
		3-8	Reserved	

38	52	SWINGER COUNTDOWN COUNT	0	
----	----	-------------------------	---	--

39	52	KEYPAD SOUNDER CONTROL		
		Segment 1 (Circle Numbers To Program)		
		1	Keypad sounds for Telephone Line Cut when in the Armed state	
		2	Keypad sounds for Telephone Line Cut when in the Disarmed state	
		3	Keypad sounds upon AC Power Failure	
		4	Keypad sounds upon Low Battery Detection	
		5	Keypad sounds during Cross Zone Trip Time	
		6	Keypad sounds for Tamper Alarm	
		7	Reserved	
		8	Keypad sounds for Expander Trouble	

40	53	SYSTEM TIMERS		
		Segment 1	Dynamic Battery Test duration (0-255 minutes)	0
		Segment 2	AC Failure report delay (0-255 minutes)	60
		Segment 3	Power Up Delay (0-60 seconds)	0
		Segment 4	Siren Time (1-255 minutes)	3
		Segment 5	Telephone Line Cut delay (0-255 seconds)	0
		Segment 6	Cross Zone Time (0-255 minutes)	5
		Segment 7	Chime Time in 50 mS increments (0-255)	3
		Segment 8	Dialer delay (0-255 seconds)	0
		Segment 9	Fire Alarm Verification Time (120-255 seconds)	0
		Segment 10	Listen-In Time (0-255 seconds)	0
		Segment 11	Zone monitor timer hours/days (0-255)	0
		Segment 12	Reserved	0
		Segment 13	Reserved	0
		Segment 14	Reserved	0

41	53	USER CODE REQUIREMENTS		
		Segment 1 (Circle Numbers To Program)		
		1	Enables six digit code option. All arm/disarm/Go to program codes require six digits	
		2	Requires valid user code entry so that [*]-[9]-[8] and [*]-[9]-[9] functions can work	
		3	Reserved	
		4	Reserved	
		5	On: keypad shutdown mode	
		6	On: user authorization to enter program mode	
		7	Reserved	
		8	Reserved	

42	53	GO TO PROGRAM CODE	9-7-1-3-0-0
43	54	GO TO PROGRAM CODE PARTITION AND AUTHORIZATION	
		Segment 1 (Circle Numbers To Program)	
		1	Reserved
		2	Enables "Go To Program Code" as an arm only code
		3	Enables "Go To Program Code" as an arm only code after closing
		4	Enables "Go To Program Code" as a master arm/disarm code (can change user codes)
		5	Enables "Go To Program Code" as an arm/disarm code
		6	Enables "Go To Program Code" to bypass zones
		7	Enables "Go To Program Code" opening and closing reports
		8	Reserved
		Segment 2 (Circle Numbers To Program)	
		1	<i>Enables "Go To Program Code" for partition #1.</i>
		2	<i>Enables "Go To Program Code" for partition #2.</i>
		3	<i>Enables "Go To Program Code" for partition #3.</i>
		4	<i>Enables "Go To Program Code" for partition #4.</i>
		5	<i>Enables "Go To Program Code" for partition #5.</i>
		6	<i>Enables "Go To Program Code" for partition #6.</i>
		7	<i>Enables "Go To Program Code" for partition #7.</i>
8	<i>Enables "Go To Program Code" for partition #8.</i>		

44	54	DURESS CODE	15-15-15-15-15
----	----	-------------	----------------

45	55	AUXILIARY OUTPUTS 1-4 PARTITION SELECTION				
		Segments	1	2	3	4
		Partition 1	1	1	1	1
		Partition 2	2	2	2	2
		Partition 3	3	3	3	3
		Partition 4	4	4	4	4
		Partition 5	5	5	5	5
		Partition 6	6	6	6	6
		Partition 7	7	7	7	7
Partition 8	8	8	8	8		

46	55	AUXILIARY OUTPUTS 1-4 SPECIAL TIMING				
		Segments	1	2	3	4
		Auxiliary output timed in minutes	1	1	1	1
		Auxiliary output to latch	2	2	2	2
		Auxiliary output to stop timing when user code is entered	3	3	3	3
		Auxiliary output to activate only between closing and opening time	4	4	4	4
		Auxiliary output to activate only between opening and closing time	5	5	5	5
		Invert auxiliary output (0 volts going to 12 volts when activated)	6	6	6	6
		Reserved	7	7	7	7
Reserved	8	8	8	8		

47	55	AUXILIARY OUTPUT 1, EVENT & TIME (relays 1 and open collector 1)		
		Segment 1	Program the event number for output 1	7=Each siren activation
		Segment 2	Program the timing for output 1	0 sec.=follow event

48	56	AUXILIARY OUTPUT 2, EVENT & TIME (relays 2 and open collector 2)		
		Segment 1	Program the event number for output 2	7=Each siren activation
		Segment 2	Program the timing for output 1	0 sec.=follow event

49	56	AUXILIARY OUTPUT 3, EVENT & TIME (open collector 3)		
		Segment 1	Program the event number for output 3	2=24 hour alarm
		Segment 2	Program the timing for output 3	10=10 sec.

50	56	AUXILIARY OUTPUT 4, EVENT & TIME (open collector 4)		
		Segment 1	Program the event number for output 4	21=armed
		Segment 2	Program the timing for output 4	0=follow event

51	58	AUTOTEST CONTROL			
		Segment 1	Program a "1" if the interval is hours, or a "0" for days. Add a "2" to suppress the daily test or a "3" to suppress the hourly test	0	
		Segment 2	Program the autotest interval from 1-255 days or hours	1	
		Segment 3	Program the autotest report in 24 hour time format	2	
		Segment 4	Program the autotest report time, minutes after the hour	0	

52	58	OPENING TIME			
		Segment 1	Program the hour of the opening time	8	
		Segment 2	Program the minutes after the hour of the opening time	0	
53	58	CLOSING TIME / AUTO ARMING TIME			
		Segment 1	Program the hour of the closing time / auto arming time	20	
		Segment 2	Program the minutes after hour of closing / auto arming time	0	

54	59	DAYS OF THE WEEK WHEN "ARM ONLY AFTER CLOSE" WILL ARM/DISARM IN PARTITIONS 1-8								
		Segments	1	2	3	4	5	6	7	8
		Sunday	1	1	1	1	1	1	1	1
		Monday	2	2	2	2	2	2	2	2
		Tuesday	3	3	3	3	3	3	3	3
		Wednesday	4	4	4	4	4	4	4	4
		Thursday	5	5	5	5	5	5	5	5
		Friday	6	6	6	6	6	6	6	6
		Saturday	7	7	7	7	7	7	7	7
		Reserved	8	8	8	8	8	8	8	8

55	59	DAYS OF THE WEEK WHEN "AUTO ARMING" WILL OCCUR IN PARTITIONS 1-8								
		Segments	1	2	3	4	5	6	7	8
		Sunday	1	1	1	1	1	1	1	1
		Monday	2	2	2	2	2	2	2	2
		Tuesday	3	3	3	3	3	3	3	3
		Wednesday	4	4	4	4	4	4	4	4
		Thursday	5	5	5	5	5	5	5	5
		Friday	6	6	6	6	6	6	6	6
		Saturday	7	7	7	7	7	7	7	7
		Disable retry	8	8	8	8	8	8	8	8

56	60	RESTORE COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY		
		Segment 1	Partition 1 restore code	0
		Segment 2	Partition 2 restore code	0
		Segment 3	Partition 3 restore code	0
		Segment 4	Partition 4 restore code	0
		Segment 5	Partition 5 restore code	0
		Segment 6	Partition 6 restore code	0
		Segment 7	Partition 7 restore code	0
		Segment 8	Partition 8 restore code	0
57	60	BYPASS COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY		
		Segment 1	Partition 1 bypass code	0
		Segment 2	Partition 2 bypass code	0
		Segment 3	Partition 3 bypass code	0
		Segment 4	Partition 4 bypass code	0
		Segment 5	Partition 5 bypass code	0
		Segment 6	Partition 6 bypass code	0
		Segment 7	Partition 7 bypass code	0
		Segment 8	Partition 8 bypass code	0
58	61	TAMPER COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY		
		Segment 1	Partition 1 tamper code	0
		Segment 2	Partition 2 tamper code	0
		Segment 3	Partition 3 tamper code	0
		Segment 4	Partition 4 tamper code	0
		Segment 5	Partition 5 tamper code	0
		Segment 6	Partition 6 tamper code	0
		Segment 7	Partition 7 tamper code	0
		Segment 8	Partition 8 tamper code	0
59	61	TROUBLE COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY		
		Segment 1	Partition 1 trouble code	0
		Segment 2	Partition 2 trouble code	0
		Segment 3	Partition 3 trouble code	0
		Segment 4	Partition 4 trouble code	0
		Segment 5	Partition 5 trouble code	0
		Segment 6	Partition 6 trouble code	0
		Segment 7	Partition 7 trouble code	0
		Segment 8	Partition 8 trouble code	0
60	61	SENSOR LOW BATTERY COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY		
		Segment 1	Partition 1 sensor low battery code	0
		Segment 2	Partition 2 sensor low battery code	0
		Segment 3	Partition 3 sensor low battery code	0
		Segment 4	Partition 4 sensor low battery code	0
		Segment 5	Partition 5 sensor low battery code	0
		Segment 6	Partition 6 sensor low battery code	0
		Segment 7	Partition 7 sensor low battery code	0
		Segment 8	Partition 8 sensor low battery code	0
61	62	SENSOR MISSING COMMUNICATOR CODE, SLOW SPEED FORMATS ONLY		
		Segment 1	Partition 1 sensor missing code	0
		Segment 2	Partition 2 sensor missing code	0
		Segment 3	Partition 3 sensor missing code	0
		Segment 4	Partition 4 sensor missing code	0
		Segment 5	Partition 5 sensor missing code	0
		Segment 6	Partition 6 sensor missing code	0
		Segment 7	Partition 7 sensor missing code	0
		Segment 8	Partition 8 sensor missing code	0

COMMUNICATOR CODES FOR SLOW SPEED FORMATS ONLY					
62	62	DURESS		0-0	
63	62	AUXILIARY 1 (fire)		0-0	
64	63	AUXILIARY 2 (medical alarm)		0-0	
65	63	KEYPAD PANIC		0-0	
66	63	KEYPAD MULTIPLE CODE ENTRY TAMPER		0-0	
67	63	BOX TAMPER / BOX TAMPER RESTORE		0-0-0-0	
68	63	AC FAIL / AC RESTORE		0-0-0-0	
69	64	LOW BATTERY / LOW BATTERY RESTORE		0-0-0-0	
70	64	POWER SHORT / POWER SHORT RESTORE		0-0-0-0	
71	64	BELL TAMPER / BELL TAMPER RESTORE		0-0-0-0	
72	64	TELEPHONE LINE CUT RESTORE		0-0-0-0	
73	64	B-ALARM (only for Norway/Sweden) fixed at 30 minutes		0-0	
74	65	EXPANDER TROUBLE / EXPANDER TROUBLE RESTORE		0-0-0-0	
75	65	FAILURE TO COMMUNICATE		0-0	
76	65	LOG FULL COMMUNICATOR CODE		0-0	
77	65	OPENING CODE COMMUNICATOR CODE			
		Segment 1	Opening Code for partition 1	0	
		Segment 2	Opening Code for partition 2	0	
		Segment 3	Opening Code for partition 3	0	
		Segment 4	Opening Code for partition 4	0	
		Segment 5	Opening Code for partition 5	0	
		Segment 6	Opening Code for partition 6	0	
		Segment 7	Opening Code for partition 7	0	
		Segment 8	Opening Code for partition 8	0	
78	66	CLOSING COMMUNICATOR CODE			
		Segment 1	Closing Code for partition 1	0	
		Segment 2	Closing Code for partition 2	0	
		Segment 3	Closing Code for partition 3	0	
		Segment 4	Closing Code for partition 4	0	
		Segment 5	Closing Code for partition 5	0	
		Segment 6	Closing Code for partition 6	0	
		Segment 7	Closing Code for partition 7	0	
		Segment 8	Closing Code for partition 8	0	
79	66	AUTOTEST COMMUNICATOR CODE		0-0	
80	66	RECENT CLOSING AND EXIT ERROR		0-0	
81	66	START PROGRAMMING / END PROGRAMMING		0-0-0-0	
82	67	RESERVED / END DOWNLOAD		0-0-0-0	
83	67	CANCEL COMMUNICATOR CODE		0	
84-87	67	RESERVED		0-0-0-0-0-0-0-0	

88	68	PARTITION 1, ACCOUNT CODE	10-10-10-10-10				
89	68	PARTITION 2, ACCOUNT CODE	10-10-10-10-10				
90	68	PARTITION 2, FEATURE SELECTION					
		Segment 1		Segment 2		Segment 3	
		1	Quick Arm	1	LED extinguish enable	1	Open/Close
		2	Re-Exit	2	Require user code for bypassing zones	2	Bypass
		3	Auto Bypass (interior)	3	Bypass sounder alert	3	Restore
		4	Silent Panic	4	AC power/ low battery sounder alert	4	Trouble
		5	Audible Panic	5	Enables bypass toggle	5	Tamper
		6	Auxiliary 1	6	Enables silent auto arm	6	Cancel
		7	Auxiliary 2	7	Enables automatic instant (entry/exit)	7	Recent Closing
		8	Multi Keypress Tamper	8	Final set door	8	Exit Error
		Segment 4			Segment 5		
		1	Late to close/early to open	1	Reserved		
		2	Auto arm in stay mode	2	Reserved		
		3	Enables instant night	3	Reserved		
		4	Tamper when sensor lost if armed	4	Reserved		
		5	Enables instant stay toggle	5	Reserved		
		6	Reserved	6	Reserved		
7	Reserved	7	Reserved				
8	Reserved	8	Reserved				
91	68	ENTRY/EXIT TIMERS					
		Segment 1 (Entry Time 1)		0			
		Segment 2 (Exit Time 1)		0			
		Segment 3 (Entry Time 2)		0			
		Segment 4 (Exit Time 2)		0			
		Reserved		0			
		Reserved		0			

92	69	PARTITION 3, ACCOUNT CODE	10-10-10-10-10				
93	69	PARTITION 3, FEATURE SELECTION					
		Segment 1		Segment 2		Segment 3	
		1	Quick Arm	1	LED extinguish enable	1	Open/Close
		2	Re-Exit	2	Require user code for bypassing zones	2	Bypass
		3	Auto Bypass (interior)	3	Bypass sounder alert	3	Restore
		4	Silent Panic	4	AC power/ low battery sounder alert	4	Trouble
		5	Audible Panic	5	Enables bypass toggle	5	Tamper
		6	Auxiliary 1	6	Enables silent auto arm	6	Cancel
		7	Auxiliary 2	7	Enables automatic instant (entry/exit)	7	Recent Closing
		8	Multi Keypress Tamper	8	Final set door	8	Exit Error
		Segment 4			Segment 5		
		1	Late to close/early to open	1	Reserved		
		2	Auto arm in stay mode	2	Reserved		
		3	Enables instant night	3	Reserved		
		4	Tamper when sensor lost if armed	4	Reserved		
		5	Enables instant stay toggle	5	Reserved		
		6	Reserved	6	Reserved		
7	Reserved	7	Reserved				
8	Reserved	8	Reserved				
94	69	ENTRY/EXIT TIMERS					
		Segment 1 (Entry Time 1)		0			
		Segment 2 (Exit Time 1)		0			
		Segment 3 (Entry Time 2)		0			
		Segment 4 (Exit Time 2)		0			
		Reserved		0			
		Reserved		0			

95	69	PARTITION 4, ACCOUNT CODE	10-10-10-10-10				
96	69	PARTITION 4, FEATURE SELECTION					
		Segment 1		Segment 2		Segment 3	
		1	Quick Arm	1	LED extinguish enable	1	Open/Close
		2	Re-Exit	2	Require user code for bypassing zones	2	Bypass
		3	Auto Bypass (interior)	3	Bypass sounder alert	3	Restore
		4	Silent Panic	4	AC power/ low battery sounder alert	4	Trouble
		5	Audible Panic	5	Enables bypass toggle	5	Tamper
		6	Auxiliary 1	6	Enables silent auto arm	6	Cancel
		7	Auxiliary 2	7	Enables automatic instant (entry/exit)	7	Recent Closing
		8	Multi Keypress Tamper	8	Final set door	8	Exit Error
		Segment 4			Segment 5		
		1	Late to close/early to open	1	Reserved		
		2	Auto arm in stay mode	2	Reserved		
		3	Enables instant night	3	Reserved		
		4	Tamper when sensor lost if armed	4	Reserved		
		5	Enables instant stay toggle	5	Reserved		
		6	Reserved	6	Reserved		
		7	Reserved	7	Reserved		
8	Reserved	8	Reserved				
97	70	ENTRY/EXIT TIMERS					
		Segment 1 (Entry Time 1)		0			
		Segment 2 (Exit Time 1)		0			
		Segment 3 (Entry Time 2)		0			
		Segment 4 (Exit Time 2)		0			
		Reserved		0			
		Reserved		0			

98	70	PARTITION 5, ACCOUNT CODE	10-10-10-10-10				
99	70	PARTITION 5, FEATURE SELECTION					
		Segment 1		Segment 2		Segment 3	
		1	Quick Arm	1	LED extinguish enable	1	Open/Close
		2	Re-Exit	2	Require user code for bypassing zones	2	Bypass
		3	Auto Bypass (interior)	3	Bypass sounder alert	3	Restore
		4	Silent Panic	4	AC power/ low battery sounder alert	4	Trouble
		5	Audible Panic	5	Enables bypass toggle	5	Tamper
		6	Auxiliary 1	6	Enables silent auto arm	6	Cancel
		7	Auxiliary 2	7	Enables automatic instant (entry/exit)	7	Recent Closing
		8	Multi Keypress Tamper	8	Final set door	8	Exit Error
		Segment 4			Segment 5		
		1	Late to close/early to open	1	Reserved		
		2	Auto arm in stay mode	2	Reserved		
		3	Enables instant night	3	Reserved		
		4	Tamper when sensor lost if armed	4	Reserved		
		5	Enables instant stay toggle	5	Reserved		
		6	Reserved	6	Reserved		
		7	Reserved	7	Reserved		
8	Reserved	8	Reserved				
100	70	ENTRY/EXIT TIMERS					
		Segment 1 (Entry Time 1)		0			
		Segment 2 (Exit Time 1)		0			
		Segment 3 (Entry Time 2)		0			
		Segment 4 (Exit Time 2)		0			
		Reserved		0			
		Reserved		0			

101	71	PARTITION 6, ACCOUNT CODE	10-10-10-10-10				
102	71	PARTITION 6, FEATURE SELECTION					
		Segment 1		Segment 2		Segment 3	
		1	Quick Arm	1	LED extinguish enable	1	Open/Close
		2	Re-Exit	2	Require user code for bypassing zones	2	Bypass
		3	Auto Bypass (interior)	3	Bypass sounder alert	3	Restore
		4	Silent Panic	4	AC power/ low battery sounder alert	4	Trouble
		5	Audible Panic	5	Enables bypass toggle	5	Tamper
		6	Auxiliary 1	6	Enables silent auto arm	6	Cancel
		7	Auxiliary 2	7	Enables automatic instant (entry/exit)	7	Recent Closing
		8	Multi Keypress Tamper	8	Final set door	8	Exit Error
		Segment 4			Segment 5		
		1	Late to close/early to open	1	Reserved		
		2	Auto arm in stay mode	2	Reserved		
		3	Enables instant night	3	Reserved		
		4	Tamper when sensor lost if armed	4	Reserved		
		5	Enables instant stay toggle	5	Reserved		
		6	Reserved	6	Reserved		
7	Reserved	7	Reserved				
8	Reserved	8	Reserved				
103	71	ENTRY/EXIT TIMERS					
		Segment 1 (Entry Time 1)		0			
		Segment 2 (Exit Time 1)		0			
		Segment 3 (Entry Time 2)		0			
		Segment 4 (Exit Time 2)		0			
		Reserved		0			
		Reserved		0			

104	71	PARTITION 7, ACCOUNT CODE	10-10-10-10-10				
105	71	PARTITION 7, FEATURE SELECTION					
		Segment 1		Segment 2		Segment 3	
		1	Quick Arm	1	LED extinguish enable	1	Open/Close
		2	Re-Exit	2	Require user code for bypassing zones	2	Bypass
		3	Auto Bypass (interior)	3	Bypass sounder alert	3	Restore
		4	Silent Panic	4	AC power/ low battery sounder alert	4	Trouble
		5	Audible Panic	5	Enables bypass toggle	5	Tamper
		6	Auxiliary 1	6	Enables silent auto arm	6	Cancel
		7	Auxiliary 2	7	Enables automatic instant (entry/exit)	7	Recent Closing
		8	Multi Keypress Tamper	8	Final set door	8	Exit Error
		Segment 4			Segment 5		
		1	Late to close/early to open	1	Reserved		
		2	Auto arm in stay mode	2	Reserved		
		3	Enables instant night	3	Reserved		
		4	Tamper when sensor lost if armed	4	Reserved		
		5	Enables instant stay toggle	5	Reserved		
		6	Reserved	6	Reserved		
7	Reserved	7	Reserved				
8	Reserved	8	Reserved				
106	72	ENTRY/EXIT TIMERS					
		Segment 1 (Entry Time 1)		0			
		Segment 2 (Exit Time 1)		0			
		Segment 3 (Entry Time 2)		0			
		Segment 4 (Exit Time 2)		0			
		Reserved		0			
		Reserved		0			

107	72	PARTITION 8, ACCOUNT CODE	10-10-10-10-10				
108	72	PARTITION 8, FEATURE SELECTION					
		Segment 1		Segment 2		Segment 3	
		1	Quick Arm	1	LED extinguish enable	1	Open/Close
		2	Re-Exit	2	Require user code for bypassing zones	2	Bypass
		3	Auto Bypass (interior)	3	Bypass sounder alert	3	Restore
		4	Silent Panic	4	AC power/ low battery sounder alert	4	Trouble
		5	Audible Panic	5	Enables bypass toggle	5	Tamper
		6	Auxiliary 1	6	Enables silent auto arm	6	Cancel
		7	Auxiliary 2	7	Enables automatic instant (entry/exit)	7	Recent Closing
		8	Multi Keypress Tamper	8	Final set door	8	Exit Error
		Segment 4			Segment 5		
		1	Late to close/early to open	1	Reserved		
		2	Auto arm in stay mode	2	Reserved		
		3	Enables instant night	3	Reserved		
		4	Tamper when sensor lost if armed	4	Reserved		
		5	Enables instant stay toggle	5	Reserved		
		6	Reserved	6	Reserved		
		7	Reserved	7	Reserved		
8	Reserved	8	Reserved				
109	72	ENTRY/EXIT TIMERS					
		Segment 1 (Entry Time 1)		0			
		Segment 2 (Exit Time 1)		0			
		Segment 3 (Entry Time 2)		0			
		Segment 4 (Exit Time 2)		0			
		Reserved		0			
Reserved		0					

110	73	CONFIGURATION GROUP 1 ALARM CODE	4		
111	73	CONFIGURATION GROUP 1 CHARACTERISTIC SELECT			
		Segment 1 (Circle Numbers To Program)			
		1	Fire (enable for fire zone)	5	Delay 1 zone (enable to follow Timer 1 Entry/Exit times)
		2	24 Hour (enable for non-fire 24 hour zone)	6	Delay 2 zone (enable to follow Timer 1 Entry / Exit times)
		3	Keyswitch zone	7	Interior (Enable for auto bypass or stay arming)
		4	Follower (enable for burglary zones that are instant during non-entry times)	8	Local Only (enable if zone is not to be reported)
		Segment 2 (Circle Numbers To Program)			
		1	Keypad audible on alarm	5	Bypassable
		2	Yelping siren on alarm	6	Group Shunt
		3	Steady siren on alarm	7	Force armable
		4	Chime	8	Entry Guard
		Segment 3 (Circle Numbers To Program)			
		1	Fast Loop Response	5	Dialer Delay zone
		2	Double End of Line Tamper zone	6	Swinger zone
		3	Trouble zone (Fire and Day zone)	7	Restore reporting
		4	Cross Zone	8	Listen-In
		Segment 4 (Circle Numbers To Program)			
		1	Zone activity monitor	5	Reserved
		2	End of line resistor defeat	6	Reserved
		3	Zone acts as request to exit input	7	Reserved
		4	Zone acts as acces control zone	8	Reserved
		Segment 5 (Circle Numbers To Program)			
		1-8	Reserved		

THE DEFAULTS LISTED IN THE ODD-NUMBERED LOCATIONS BELOW REPRESENT THE THREE SEGMENTS OF EACH OF THOSE LOCATIONS. USE THE THREE SEGMENT CHARTS FROM LOCATION 111 TO UNDERSTAND THESE DEFAULTS.

112	74	CONFIGURATION GROUP 2 ALARM EVENT CODE	2	
113	74	CONFIGURATION GROUP 2 CHARACTERISTIC SELECT	2-125-278	
114	74	CONFIGURATION GROUP 3 ALARM EVENT CODE	7	
115	74	CONFIGURATION GROUP 3 CHARACTERISTIC SELECT	5-125-25678	
116	74	CONFIGURATION GROUP 4 ALARM EVENT CODE	5	
117	75	CONFIGURATION GROUP 4 CHARACTERISTIC SELECT	45-125-25678	
118	75	CONFIGURATION GROUP 5 ALARM EVENT CODE	5	
119	75	CONFIGURATION GROUP 5 CHARACTERISTIC SELECT	457-125-25678	
120	75	CONFIGURATION GROUP 6 ALARM EVENT CODE	4	
121	75	CONFIGURATION GROUP 6 CHARACTERISTIC SELECT	0-125-25678	
122	75	CONFIGURATION GROUP 7 ALARM EVENT CODE	0	
123	75	CONFIGURATION GROUP 7 CHARACTERISTIC SELECT	2-5-278	
124	75	CONFIGURATION GROUP 8 ALARM EVENT CODE	1	
125	76	CONFIGURATION GROUP 8 CHARACTERISTIC SELECT	1-13-378	
126	76	CONFIGURATION GROUP 9 ALARM EVENT CODE	7	
127	76	CONFIGURATION GROUP 9 CHARACTERISTIC SELECT	6-125-25678	
128	76	CONFIGURATION GROUP 10 ALARM EVENT CODE	13	
129	76	CONFIGURATION GROUP 10 CHARACTERISTIC SELECT	24-12-78	
130	76	CONFIGURATION GROUP 11 ALARM EVENT CODE	3	
131	76	CONFIGURATION GROUP 11 CHARACTERISTIC SELECT	3-0-2	
132	76	CONFIGURATION GROUP 12 ALARM EVENT CODE	5	
133	77	CONFIGURATION GROUP 12 CHARACTERISTIC SELECT	457-125-245678	
134	77	CONFIGURATION GROUP 13 ALARM EVENT CODE	4	
135	77	CONFIGURATION GROUP 13 CHARACTERISTIC SELECT	0-1258-25678	
136	77	CONFIGURATION GROUP 14 ALARM EVENT CODE	7	
137	77	CONFIGURATION GROUP 14 CHARACTERISTIC SELECT	5-1256-25678	

138	77	CONFIGURATION GROUP 15 ALARM EVENT CODE	5	
139	77	CONFIGURATION GROUP 15 CHARACTERISTIC SELECT	457-1256-25678	
140	77	CONFIGURATION GROUP 16 ALARM EVENT CODE	4	
141	78	CONFIGURATION GROUP 16 CHARACTERISTIC SELECT	0-1256-25678	
142	78	CONFIGURATION GROUP 17 ALARM EVENT CODE	3	
143	78	CONFIGURATION GROUP 17 CHARACTERISTIC SELECT	38-0-2	
144	78	CONFIGURATION GROUP 18 ALARM EVENT CODE	7	
145	78	CONFIGURATION GROUP 18 CHARACTERISTIC SELECT	5-1257-25678	
146	78	CONFIGURATION GROUP 19 ALARM EVENT CODE	7	
147	78	CONFIGURATION GROUP 19 CHARACTERISTIC SELECT	6-1257-25678	
148	78	CONFIGURATION GROUP 20 ALARM EVENT CODE	7	
149	79	CONFIGURATION GROUP 20 CHARACTERISTIC SELECT	5-1245-25678	
150	79	CONFIGURATION GROUP 21 ALARM EVENT CODE	20	
151	79	CONFIGURATION GROUP 21 CHARACTERISTIC SELECT	24-125-278	
152	79	CONFIGURATION GROUP 22 ALARM EVENT CODE	20	
153	79	CONFIGURATION GROUP 22 CHARACTERISTIC SELECT	24-5-278	
154	79	CONFIGURATION GROUP 23 ALARM EVENT CODE	5	
155	79	CONFIGURATION GROUP 23 CHARACTERISTIC SELECT	7-125-25678	
156	79	CONFIGURATION GROUP 24 ALARM EVENT CODE	4	
157	80	CONFIGURATION GROUP 24 CHARACTERISTIC SELECT	0-1245-25678	
158	80	CONFIGURATION GROUP 25 ALARM EVENT CODE	5	
159	80	CONFIGURATION GROUP 25 CHARACTERISTIC SELECT	45-1245-25678	
160	80	CONFIGURATION GROUP 26 ALARM EVENT CODE	3	
161	80	CONFIGURATION GROUP 26 CHARACTERISTIC SELECT	248-125-2	
162	80	CONFIGURATION GROUP 27 ALARM EVENT CODE	4	
163	80	CONFIGURATION GROUP 27 CHARACTERISTIC SELECT	0-1257-25678	
164	80	CONFIGURATION GROUP 28 ALARM EVENT CODE	4	
165	81	CONFIGURATION GROUP 28 CHARACTERISTIC SELECT	0-125-25678-1	
166	81	CONFIGURATION GROUP 29 ALARM EVENT CODE	4	
167	81	CONFIGURATION GROUP 29 CHARACTERISTIC SELECT	0-125-5678-2	
168	81	CONFIGURATION GROUP 30 ALARM EVENT CODE	11	
169	81	CONFIGURATION GROUP 30 CHARACTERISTIC SELECT	24-125-278	

170	81	ZONES 49-56, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
171	81	ZONES 49-56, PARTITION SELECTION (Segment 1=Zone 49 thru Segment 8=Zone 56)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
172	82	ZONES 57-64, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
173	82	ZONES 57-64, PARTITION SELECTION (Segment 1=Zone 57 thru Segment 8=Zone 64)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
174	82	ZONES 65-72, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
175	82	ZONES 65-72, PARTITION SELECTION (Segment 1=Zone 65 thru Segment 8=Zone 72)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
176	83	ZONES 73-80, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
177	83	ZONES 73-80, PARTITION SELECTION (Segment 1=Zone 73 thru Segment 8=Zone 80)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
178	83	ZONES 81-88, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
179	83	ZONES 81-88, PARTITION SELECTION (Segment 1=Zone 81 thru Segment 8=Zone 88)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			

180	84	ZONES 89-96, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
181	84	ZONES 89-96, PARTITION SELECTION (Segment 1=Zone 89 thru Segment 8=Zone 96)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
182	84	ZONES 97-104, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
183	84	ZONES 97-104, PARTITION SELECTION (Segment 1=Zone 97 thru Segment 8=Zone 104)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
184	85	ZONES 105-112, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
185	85	ZONES 105-112, PARTITION SELECTION (Segment 1=Zone 105 thru Segment 8=Zone 112)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
186	85	ZONES 113-120, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
187	85	ZONES 113-120, PARTITION SELECTION (Segment 1=Zone 113 thru Segment 8=Zone 120)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
188	86	ZONES 121-128, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
189	86	ZONES 121-128, PARTITION SELECTION (Segment 1=Zone 121 thru Segment 8=Zone 128)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			

190	86	ZONES 129-136, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
191	86	ZONES 129-136, PARTITION SELECTION (Segment 1=Zone 129 thru Segment 8=Zone 136)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
192	87	ZONES 137-144, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
193	87	ZONES 137-144, PARTITION SELECTION (Segment 1=Zone 137 thru Segment 8=Zone 144)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
194	87	ZONES 145-152, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
195	87	ZONES 145-152, PARTITION SELECTION (Segment 1=Zone 145 thru Segment 8=Zone 152)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
196	88	ZONES 153-160, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
197	88	ZONES 153-160, PARTITION SELECTION (Segment 1=Zone 153 thru Segment 8=Zone 160)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			
198	88	ZONES 161-168, CONFIGURATION GROUPS	6-6-6-6-6-6-6								
199	88	ZONES 161-168, PARTITION SELECTION (Segment 1=Zone 161 thru Segment 8=Zone 168)									
		Segments	1	2	3	4	5	6	7	8	
		Partition 1	1	1	1	1	1	1	1	1	
		Partition 2	2	2	2	2	2	2	2	2	
		Partition 3	3	3	3	3	3	3	3	3	
		Partition 4	4	4	4	4	4	4	4	4	
		Partition 5	5	5	5	5	5	5	5	5	
		Partition 6	6	6	6	6	6	6	6	6	
		Partition 7	7	7	7	7	7	7	7	7	
Partition 8	8	8	8	8	8	8	8	8			

200	89	ZONES 169-176, CONFIGURATION GROUPS	6-6-6-6-6-6-6-6							
201	89	ZONES 169-176, PARTITION SELECTION (Segment 1=Zone 169 thru Segment 8=Zone 176)								
		Segments	1	2	3	4	5	6	7	8
		Partition 1	1	1	1	1	1	1	1	1
		Partition 2	2	2	2	2	2	2	2	2
		Partition 3	3	3	3	3	3	3	3	3
		Partition 4	4	4	4	4	4	4	4	4
		Partition 5	5	5	5	5	5	5	5	5
		Partition 6	6	6	6	6	6	6	6	6
		Partition 7	7	7	7	7	7	7	7	7
Partition 8	8	8	8	8	8	8	8	8		
202	89	ZONES 177-184, CONFIGURATION GROUPS	6-6-6-6-6-6-6-6							
203	89	ZONES 177-184, PARTITION SELECTION (Segment 1=Zone 177 thru Segment 8=Zone 184)								
		Segments	1	2	3	4	5	6	7	8
		Partition 1	1	1	1	1	1	1	1	1
		Partition 2	2	2	2	2	2	2	2	2
		Partition 3	3	3	3	3	3	3	3	3
		Partition 4	4	4	4	4	4	4	4	4
		Partition 5	5	5	5	5	5	5	5	5
		Partition 6	6	6	6	6	6	6	6	6
		Partition 7	7	7	7	7	7	7	7	7
Partition 8	8	8	8	8	8	8	8	8		
204	90	ZONES 185-192, CONFIGURATION GROUPS	6-6-6-6-6-6-6-6							
205	90	ZONES 185-192, PARTITION SELECTION (Segment 1=Zone 185 thru Segment 8=Zone 192)								
		Segments	1	2	3	4	5	6	7	8
		Partition 1	1	1	1	1	1	1	1	1
		Partition 2	2	2	2	2	2	2	2	2
		Partition 3	3	3	3	3	3	3	3	3
		Partition 4	4	4	4	4	4	4	4	4
		Partition 5	5	5	5	5	5	5	5	5
		Partition 6	6	6	6	6	6	6	6	6
		Partition 7	7	7	7	7	7	7	7	7
Partition 8	8	8	8	8	8	8	8	8		

206	90	DAYS OF THE WEEK WHEN "AUTO DISARMING" WILL OCCUR IN PARTITIONS 1-8								
		Segments	1	2	3	4	5	6	7	8
		Sunday	1	1	1	1	1	1	1	1
		Monday	2	2	2	2	2	2	2	2
		Tuesday	3	3	3	3	3	3	3	3
		Wednesday	4	4	4	4	4	4	4	4
		Thursday	5	5	5	5	5	5	5	5
		Saturday	6	6	6	6	6	6	6	6
		Sunday	7	7	7	7	7	7	7	7
Reserved	8	8	8	8	8	8	8	8		

207	90	SERIAL PORT ENABLE							0		
		0 = disabled									
		1 = Home automation protocol enabled									
		2 = Serial printer interface									
208	91	SERIAL PORT BAUD RATE							2		
		0 = 2400 (2.4K)			3 = 19200 (19.2K)						
		1 = 4800 (4.8K)			4 = 38400 (38.4K)						
		2 = 9600 (9.6K)			5-7 = Reserved						
209	91	HOME AUTOMATION PROTOCOL							Off		
		OFF = Binary									
		ON = ASCII									
210	91	NX-8E TRANSITION-BASED BROADCASTS									
		Segment 1 (Circle Numbers To Program)					Segment 2 (Circle Numbers To Program)				
		1	Reserved				1	System status message			
		2	Interface configuration				2	X-10 message received			
		3	Reserved				3	Log event message			
		4	Reserved				4	Keypad message received			
		5	Zone status message				5	Reserved			
		6	Zones snapshot message				6	Reserved			
		7	Partition status message				7	Reserved			
		8	Partitions snapshot message				8	Reserved			
211	92	NX-584 COMMAND/REQUEST ENABLE									
		Segment 1 (Circle Numbers To Program)					Segment 2 (Circle Numbers To Program)				
		1	Reserved				1	System status request			
		2	Interface configuration				2	Send X-10 message			
		3	Reserved				3	Log event request			
		4	Zone name request				4	Send keypad text message			
		5	Zone status request				5	Keypad terminal mode request			
		6	Zones snapshot request				6	Reserved			
		7	Partition status request				7	Reserved			
		8	Partitions snapshot request				8	Reserved			
		Segment 3 (Circle Numbers To Program)					Segment 4 (Circle Numbers To Program)				
		1	Program data request				1	Reserved			
		2	Program data command				2	Reserved			
		3	User information request with PIN				3	Store communication event command			
		4	User information request without PIN				4	Set clock / calendar command			
		5	Set user code command with PIN				5	Primary keypad function with PIN			
		6	Set user code command without PIN				6	Primary keypad function without PIN			
		7	Set user authorisation comm with PIN				7	Secondary keypad function			
		8	Set user authorisation comm without PIN				8	Zone bypass toggle			
		212	93	LCD KEYPAD ADDRESS FOR NX-584							
KP	PART 1			PART 2	PART 3	PART 4	PART 5	PART 6	PART 7	PART 8	192
1	192			193	194	195	196	197	198	199	
2	200			201	202	203	204	205	206	207	
3	208			209	210	211	212	213	214	215	
4	216			217	218	219	220	221	222	223	
5	224			225	226	227	228	229	230	231	
6	232			233	234	235	236	237	238	239	
7	240			241	242	243	244	245	246	247	
8	248			249	250	251	252	253	254	255	
213		Reserved									


BOARD INSTALLATION

Inside the can, several 2-holed insertion points have been constructed. This allows for either vertical or horizontal placement of the modules. Notice that each insertion point has two sizes of holes - a larger hole and a smaller hole.


Diagram 1: The black plastic PCB guides are grooved on one edge where the PC board will be seated. The end with the half-moon protrusion fits into the larger hole. The smaller hole is for the screw.

Diagram 2: Place the *first* black plastic PCB guide in the top insertion point, grooved edge downward. The half-moon protrusion will be in the large hole. It does not require force. Insert one of the provided screw into the smaller hole (from inside the can) to secure it in place. A screwdriver should reach through the notch that runs the length of the guide to tighten the screw. The *second* PBC guide should be positioned opposite the first (grooved edge up) and placed in the lower insertion point, using the same procedures described above. Once mounted, screw it in securely.

Diagram 3: The PC Board should slide freely in the grooves of both guides.

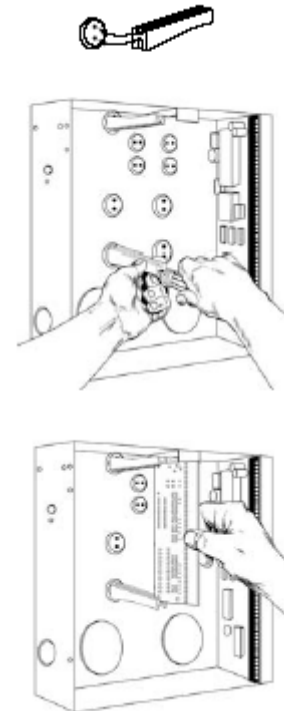

NX-8E WIRING DIAGRAM

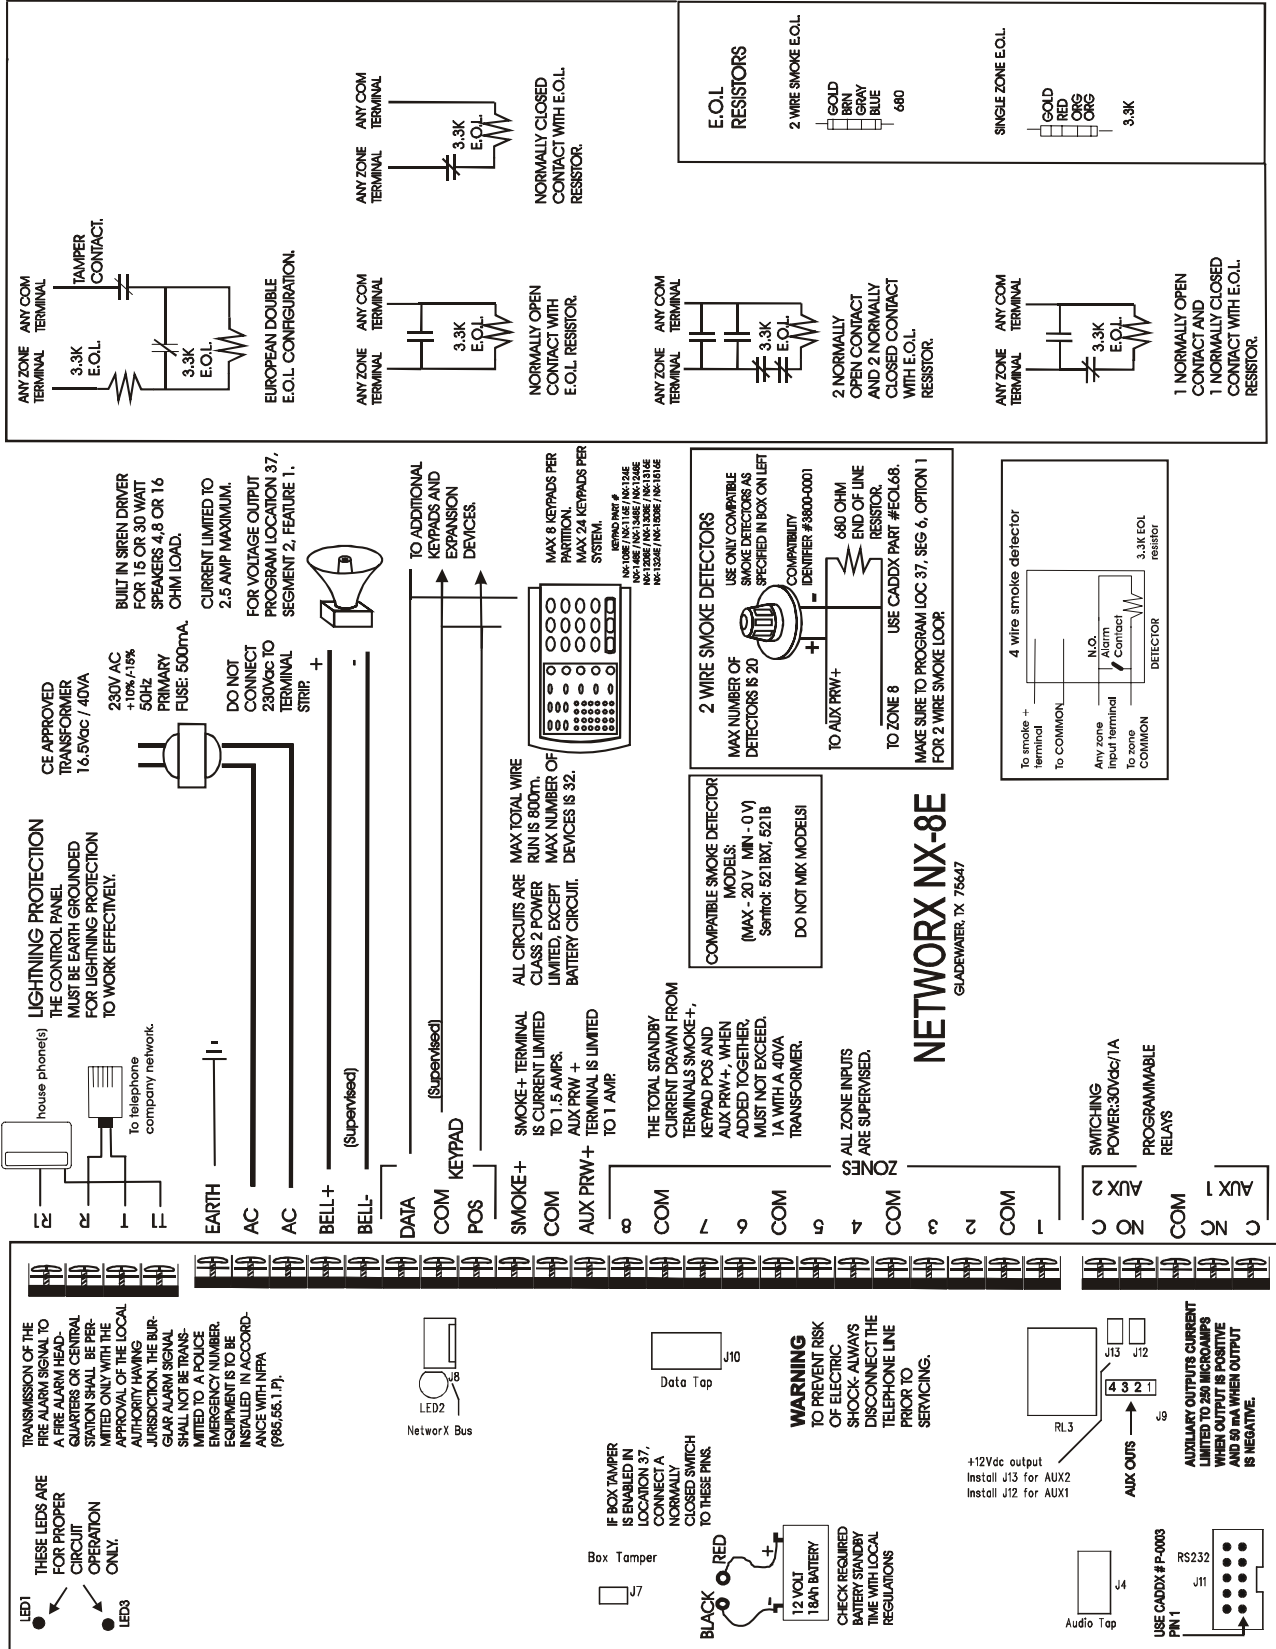

TERMINAL DESCRIPTION

TERMINAL	DESCRIPTION	
R1	House Telephone Ring.	
R	Telephone Ring.	
T	Telephone Tip.	
T1	House Telephone Tip.	
EARTH	Earth Ground.	
AC	AC input. Connect to a 16.5Vac 40VA CE approved transformer.	
BELL + & BELL -	<p>If used as a siren output (default), the speaker rating should be 15 watt at 8 or 16 ohm, or 30/40 watt at 4, 8, or 16 ohms. If voltage output is selected in location 37, this output becomes voltage output, 12VDC, 1 Amp maximum load.</p> <p>NOTE: A 3.3KW resistor may be required across the bell terminals when a 12 VDC siren is used. If no resistor is used, you may experience voltage leakage into the siren, which will cause these devices to output a small signal.</p>	
KP DATA	Connect to the data terminal on the keypads and the expanders. Maximum wire run is 800 m with 2 mm ² wire. The minimum wire sizes at 75, 150, 300 and 600 m are 0.12, 0.33, 0.83 and 1.3 mm ² respectively. These numbers are for one keypad at the end of the wire and a voltage drop of max. 2 Volts. When connecting more than one keypad to the end of the wire, a higher gauge wire will be required. The maximum number of devices (keypads + expanders) is 32.	
KP COM	Connect to the Common terminal on the keypads and the expanders.	
KP POS	Connect to the positive terminal on the keypads and the expanders. This terminal is limited to 1 Amp. Combined, this terminal and AUX PWR + are limited to 2 Amps total current.	
SMOKE+	Smoke detector power 12VDC, 1.5 Amps maximum (For those jurisdictions which allow the Priority zone to be used with smoke detectors.)	
COM	Connect the negative wire of powered devices such as motion and smoke detectors.	
AUX PWR+	Connect the positive wire of all powered devices except smoke detectors and keypads. Individually, this terminal is limited to 1 Amp. Combined, this terminal and KP POS are limited to 2 Amps total current.	
ZONE 8	Connect to one side of zone 8 loop. Connect the other side to the com. terminal. Open or short causes alarm. Zone 8 may be used for a two-wire smoke detector, using a 680W E.O.L. resistor. Connect one side to AUX PWR+ ONLY if using 2-wire smoke. Refer to wiring diagram, Program location 37, segment 6, option 1.	
COM	Common (-) terminal for zones 7 & 8. (See the wiring diagram for examples)	
ZONE 7	Connect to one side of zone 7 loop. Connect the other side to COM terminal. Open or short causes alarm.	
ZONE 6 - ZONE 1	Connect as described for zones 7 & 8. Only zone 8 can be a two-wire zone. (See the wiring diagram for examples)	
Relay 2 NO/C	Normally open dry contact rated 1 Amp at 30 Volts.	Note: These terminals can be set for 12Vdc. Close J12 for Aux1 and J13 for Aux2.
COM	Common used to ground any devices connected to relays	
Relay 1 NC/C	Normally closed dry contact rated 1 Amp at 30 Volts.	
J9 Aux1 – Aux4	Connect negative lead of low current device (relay, LED, ...). Connect positive lead of device to AUX PWR+. Current is limited to 50mA when output is negative, 250uA when output is positive.	

TECHNICAL SPECIFICATIONS

Technical specifications NX-8E

Operating power	
- Nominal	16.5Vac, 50/60Hz, 40VA
Current consumption	60mA
Battery	max. 12V/18 Ah
Auxiliary Power Supply	EN50131-6 Grade 2 Type A
- Minimum	11.00 Vdc
- Nominal	13.85 Vdc
- Maximum	14.00 Vdc
Max. ripple	< 5%
Operating temperature	0 - 50° C
Loop resistance	
- Standard loop	300 Ohms maximum
- 2-wire fire loop	30 Ohms maximum
Built-in siren driver	112 dB, 2 tones (steady or yelp)
Loop response	selectable: 50 ms or 500 ms
Dimensions (PCB board only)	280 x 90 mm
Weight (PCB board only)	285 g
Classifications	Security Grade 2 Environmental Grade 1

Technical specifications NX-108, NX-116, NX-124

Operating power			
- Nominal		12 Vdc	
- Minimum/maximum		9 Vdc - 14 Vdc	
Operating temperature		0 - 50° C	
Dimensions		163 x 102 x 26 mm	
Current consumption		NX-108	NX-116
- Minimum (quiescent, no lighting)		10 mA	10 mA
- Nominal (quiescent, lighting ON)		29 mA	29 mA
Current consumption in alarm			NX-124
- 1 zone in alarm, sounder/lighting ON		42 mA	42 mA
- Maximum (all LED's ON, sounder ON)		90 mA	110 mA
Weight		228 g	230 g
			232 g

Technical specifications NX-1308, NX-1316, NX-1324

Operating power			
- Nominal	12 Vdc		
- Minimum/maximum	9 Vdc - 14 Vdc		
Operating temperature	0 - 50° C		
Dimensions	158 x 135x 30 mm		
Current consumption	NX-1308	NX-1316	NX-1324
- Minimum (quiescent, no lighting)	23 mA	23 mA	23 mA
- Nominal (quiescent, lighting ON)	29 mA	29 mA	29 mA
Current consumption in alarm			
- 1 zone in alarm, sounder/lighting ON	55 mA	47 mA	55 mA
- Maximum (all LED's ON, sounder ON)	90 mA	110 mA	130 mA
Weight	264 g	264 g	270 g

Technical specifications NX-148

Operating power	
- Nominal	12 Vdc
- Minimum/maximum	9 Vdc - 14 Vdc
Operating temperature	0 - 50° C
Dimensions	158 x 135 x 30 mm
Current consumption	
- Minimum (quiescent, no lighting)	20 mA
- Nominal (quiescent, minimum lighting)	25 mA
- Nominal (quiescent, maximum lighting)	48 mA
Current consumption in alarm	
- 1 zone in alarm, sounder/lighting ON	65 mA
- Maximum (all LED's ON, sounder ON)	110 mA
Weight	290 g

APPENDIX 1: REPORTING FIXED CODES IN CONTACT-ID AND SIA

The table below lists the event codes sent for the following reports (if enabled) when using CONTACT ID or SIA formats.

REPORT	CONTACT ID	SIA
MANUAL TEST	601	RX
AUTOTEST	602	RP
OPEN (User Number)	401	OP
CLOSE (User Number)	401	CL
CANCEL (User Number)	406	OC
DOWNLOAD COMPLETE	412	RS
START PROGRAM	627	LB
END PROGRAM	628	LX
RECENT CLOSE (User Number)	401	CR
EXIT ERROR (User Number)	457	EE
EVENT LOG FULL	605	JL
FAIL TO COMMUNICATE	354	RT
EXPANDER TROUBLE (device number)	333	ET
EXPANDER RESTORE (device number)	333	ER
TELEPHONE FAULT	351	LT
TELEPHONE RESTORE	351	LR
SIREN TAMPER	321	YA
SIREN RESTORE	321	YH
AUX POWER OVERCURRENT (device number)	312	YP
AUX POWER RESTORE (device number)	312	YQ
LOW BATTERY (device number)	309	YT
LOW BATTERY RESTORE (device number)	309	YR
AC FAIL (device number)	301	AT
AC RESTORE (device number)	301	AR
BOX TAMPER (device number)	137	TA
BOX TAMPER RESTORE (device number)	137	TR
KEYPAD TAMPER	137	TA
KEYPAD PANIC (audible)	120	PA
KEYPAD PANIC (silent)	121	HA
DURESS	121	HA
KEYPAD AUXILIARY 1	110	FA
KEYPAD AUXILIARY 2	100	MA
RF SENSOR LOST (zone number)	381	*T
RF SENSOR RESTORE (zone number)	381	*R
SENSOR LOW BATTERY (zone number)	384	XT
SENSOR BATTERY RESTORE (zone number)	384	XR
ZONE TROUBLE (zone number)	380	*T
ZONE TROUBLE RESTORE (zone number)	380	*R
ZONE TAMPER (zone number)	137	TA
ZONE TAMPER RESTORE (zone number)	137	TR
ZONE BYPASS (zone number)	570	*B
BYPASS RESTORE (zone number)	570	*U
EARLY OPEN / LATE CLOSE	451	OK
FAIL TO CLOSE	454	CI
ZONE ACTIVITY FAULT	391	NA
ZONE ACTIVITY RESTORE	391	NS
FREEZE ALARM	159	ZA
HEAT ALARM RESTORE	158	KH
MANUAL FIRE ALARM (pull station)	115	FA

THE NUMBER IN PARENTHESES FOLLOWING THE EVENT IS THE NUMBER THAT WILL BE REPORTED AS THE ZONE NUMBER. IF THERE ARE NO PARENTHESES, THE ZONE WILL BE "0". SEE APPENDIX 3 FOR THE DEVICE NUMBERS. * The character transmitted in this slot will be the first character from the event code of the zone that is bypassed or in trouble (see locations 110 - 169).

APPENDIX 2: REPORTING ZONE CODES IN SIA OR CONTACT ID

The NX-8E has the ability to report SIA level 1 transmissions to either or both phone numbers. Each report in SIA consists of an Event Code and a Zone or User ID. The Zone ID will be the zone number that is in alarm. The event code will come from the chart below, and it will be programmed in the configuration group event code.

Programmed Event Code	SIA Code	Description
0	HA	Holdup Alarm
1	FA	Fire Alarm
2	PA	Panic alarm
3	BA	Burglary Alarm
4	BA	Burglary Alarm
5	BA	Burglary Alarm
6	UA	Untyped Alarm
7	BA	Burglary Alarm
8	BA	Burglary Alarm
9	UA	Untyped Alarm
10	HA	Holdup Alarm
11	MA	Medical Alarm
12	PA	Panic alarm
13	TA	Tamper Alarm
14	RP	Periodic Test
15	GA	Gas Alarm
16	KA	Heat Alarm
17	WA	Water Alarm
18	QA	Emergency Alarm
19	SA	Sprinkler Alarm
20	ZA	Freeze Alarm
21	KH	Heat Alarm Restore
22	FA	Manual Fire Alarm

The NX-8E can report Ademco Contact ID transmissions. Each report in Contact ID consists of an Event Code and a Zone ID. The zone ID is the zone that generated the alarm. The event code will come from the chart below, and it will be programmed in the configuration group event code.

Programmed Event Code	CONTACT-ID	Description
0	122	Silent Panic
1	110	Fire Alarm
2	120	Panic alarm
3	130	Burglary Alarm
4	131	Perimeter Alarm
5	132	Interior Alarm
6	133	24 Hour Burglary
7	134	Entry Alarm
8	135	Day/Night Alarm
9	150	Non Burglary 24 Hour
10	121	Duress Alarm
11	100	Medical Alarm
12	123	Audible Panic Alarm
13	137	Tamper Alarm
14	602	Periodic Test
15	151	Gas Detected
16	158	High Temp
17	154	Water Leakage
18	140	General Alarm
19	140	General Alarm
20	159	Low Temp
21	158	Heat Alarm Restore
22	115	Manual Fire Alarm

APPENDIX 3: EXPANDER NUMBERS FOR REPORTING EXPANDER TROUBLE

The tables below list the device numbers that will be reported for each expander/keypad where a trouble condition is present. For trouble conditions relating to the control panel, the device number is "0".

Keypads

KEYPAD	PART 1	PART 2	PART 3	PART 4	PART 5	PART 6	PART 7	PART 8
1	192	193	194	195	196	197	198	199
2	200	201	202	203	204	205	206	207
3	208	209	210	211	212	213	214	215
4	216	217	218	219	220	221	222	223
5	224	225	226	227	228	229	230	231
6	232	233	234	235	236	237	238	239
7	240	241	242	243	244	245	246	247
8	248	249	250	251	252	253	254	255

Remote power supply NX-320E

Power supply	DIP 1	DIP 2	DIP 3	Expander number reported
1	OFF	OFF	OFF	84
2	ON	OFF	OFF	85
3	OFF	ON	OFF	86
4	ON	ON	OFF	87
5	OFF	OFF	ON	88
6	ON	OFF	ON	89
7	OFF	ON	ON	90
8	ON	ON	ON	91

Wireless receiver NX-448E

Wireless receiver	DIP 1	DIP 2	DIP 3	Expander number reported
1	OFF	OFF	OFF	35
2	ON	OFF	OFF	36
3	OFF	ON	OFF	37
4	ON	ON	OFF	38
5	OFF	OFF	ON	39
6	ON	OFF	ON	32
7	OFF	ON	ON	33
8	ON	ON	ON	34

Output module NX-507E or NX-508E

Output module	DIP 1	DIP 2	DIP 3	Expander number reported
1	ON	ON	OFF	24
2	OFF	OFF	ON	25
3	ON	OFF	ON	26
4	OFF	ON	ON	27
5	ON	ON	ON	28
6	OFF	OFF	OFF	29
7	ON	OFF	OFF	30
8	OFF	ON	OFF	31

Hardwired expander NX-216E

Starting zone number	DIP 1	DIP 2	DIP 3	DIP 4	DIP 5	DIP 6	Expander number reported
Zone 9	ON	OFF	OFF	OFF	OFF	N/A	23
Zone 17	OFF	ON	OFF	OFF	OFF	N/A	16
Zone 25	ON	ON	OFF	OFF	OFF	N/A	17
Zone 33	OFF	OFF	ON	OFF	OFF	N/A	18
Zone 41	ON	OFF	ON	OFF	OFF	N/A	19
Zone 49	OFF	ON	ON	OFF	OFF	N/A	20
Zone 57	ON	ON	ON	OFF	OFF	N/A	21
Zone 65	OFF	OFF	OFF	ON	OFF	N/A	96
Zone 73	ON	OFF	OFF	ON	OFF	N/A	97
Zone 81	OFF	ON	OFF	ON	OFF	N/A	98
Zone 89	ON	ON	OFF	ON	OFF	N/A	99
Zone 97	OFF	OFF	ON	ON	OFF	N/A	100
Zone 105	ON	OFF	ON	ON	OFF	N/A	101
Zone 113	OFF	ON	ON	ON	OFF	N/A	102
Zone 121	ON	ON	ON	ON	OFF	N/A	103
Zone 129	OFF	OFF	OFF	OFF	ON	N/A	104
Zone 137	ON	OFF	OFF	OFF	ON	N/A	105
Zone 145	OFF	ON	OFF	OFF	ON	N/A	106
Zone 153	ON	ON	OFF	OFF	ON	N/A	107
Zone 161	OFF	OFF	ON	OFF	ON	N/A	108
Zone 169	ON	OFF	ON	OFF	ON	N/A	109
Zone 177	OFF	ON	ON	OFF	ON	N/A	110
Zone 185	ON	ON	ON	OFF	ON	N/A	111

CE DECLARATION



GE Interlogix

SECURITY LIFESAFETY COMMUNICATIONS



MANUFACTURERS DECLARATION OF CONFORMITY For

Product identification:

Model/type : See Model Listing BOM rev. level See Model Listing
 Category (description) : NX Alarm Control System
 Brand : GE-InterlogiX - Aritech/ITI/Caddx

Manufacturer: GE Interlogix/Caddx
 1420 N. Main, Gladewater
 Texas 75647, USA

EU Representative: GE Interlogix B.V.
 Kelvinstraat 7
 6003 DH Weert, The Netherlands

Concerning	RTTE		
	EMC	Safety	Telecom
A sample of the product has been tested by:	Compliance Engineering Ireland Ltd. RAYSTOWN, RATOATH ROAD, ASHBOURNE, CO. MEATH, IRELAND & GE Security Ireland Ltd. Unit 2008, Orchard Ave, City West Business Campus. Naas Road Dublin 24, Ireland	GE Security Ireland Ltd. Unit 2008, Orchard Ave, City West Business Campus. Naas Road Dublin 24, Ireland	Belcomlab
Test report reference	CE Qualification Plan: 04DRQP003 04DREMC001/006/007/008/009/010/0 11/012/013 & 04E1244-2	01DR575LVD-1	BCL/00-04
Applied standards	EN50130-4/A2(2003) EN55022/A2(2003) EN61000-3-2(2000) EN61000-3-3(1995) +A1(2001) EN61000-6-3(2001)	EN60950-1(2001)	CTR21(1998) +EG201121(1998)

Equipment class identifier (RF products falling under the scope of R&TTE)

Not Applicable None (class 1 product) (class 2 product)

Means of conformity

We declare under our sole responsibility that this product is in conformity with Directive 93/68/EEC (Marking) and/or complies to the essential requirements and all other relevant provisions of the 1999/5/EC (R&TTE) based on test results using harmonized standards in accordance with the Directives mentioned.

Signature of representative/manufacturer: Raoul van Bergen
 Manager Control & Communications GE Interlogix B.V.
 Kelvinstraat 7
 6003 DH Weert
 The Netherlands

Place : Weert
Date : 29 April 2004

Model Listing:

Product	Product Description	BOM Revision Date
NX-216-AL	16 Zone Expander Module	December 2003
NX-216-FR	16 Zone Expander Module	December 2003
NX-216-UK	16 Zone Expander Module	December 2003
NX-216E	16 Zone Expander Module	December 2003
NX-216E-AL	16 Zone Expander Module	December 2003
NX-216E-FR	16 Zone Expander Module	December 2003
NX-320F	Auxiliary Power Supply	December 2003
NX-507-AL	Seven Port Relay Module	December 2003
NX-507-FR	Seven Port Relay Module	December 2003
NX-507E	Seven Port Relay Module	December 2003
NX-507E-AL	Seven Port Relay Module	December 2003
NX-507E-FR	Seven Port Relay Module	December 2003
NX-508-AL	Eight Port Output Module	December 2003
NX-508-FR	Eight Port Output Module	December 2003
NX-508-PL	Eight Port Output Module	December 2003
NX-508E-AL	Eight Port Output Module	December 2003
NX-508E-FR	Eight Port Output Module	December 2003
NX-508E-PL	Eight Port Output Module	December 2003
NX-534-AL	Two Way Listen-In Module	December 2003
NX-534-FR	Two Way Listen-In Module	December 2003
NX-534-WH	Two Way Listen-In Module	December 2003
NX-534E	Two Way Listen-In Module	December 2003
NX-534F-AL	Two Way Listen-In Module	December 2003
NX-534F-FR	Two Way Listen-In Module	December 2003
NX-584	Home Automation Module	December 2003
NX-540-ES	Operator Telephone Interface Module	December 2003
NX-540E	Operator Telephone Interface Module	December 2003
NX540E-ES	Operator Telephone Interface Module	December 2003
NX-4	4 Zone Security Alarm Panel	December 2003
NX-4-BE	4 Zone Security Alarm Panel	December 2003
NX-4-BO-FG-BE	4 Zone Security Alarm Panel	December 2003
NX-4-BO-FG-IL	4 Zone Security Alarm Panel	December 2003
NX-4-BO-FG-NL	4 Zone Security Alarm Panel	December 2003
NX-4-BO-FG-PL	4 Zone Security Alarm Panel	December 2003
NX-4-BO-FG-SE	4 Zone Security Alarm Panel	December 2003
NX-4-CZ	4 Zone Security Alarm Panel	December 2003
NX-4-DK	4 Zone Security Alarm Panel	December 2003
NX-4-ES	4 Zone Security Alarm Panel	December 2003
NX-4-FR	4 Zone Security Alarm Panel	December 2003
NX-4-GR	4 Zone Security Alarm Panel	December 2003
NX-4-IL	4 Zone Security Alarm Panel	December 2003
NX-4-IT	4 Zone Security Alarm Panel	December 2003
NX-4-LX	4 Zone Security Alarm Panel	December 2003
NX-4-LX-IL	4 Zone Security Alarm Panel	December 2003
NX-4-LXT-ES	4 Zone Security Alarm Panel	December 2003
NX-4-LXT-GR	4 Zone Security Alarm Panel	December 2003
NX-4-LXT-IL	4 Zone Security Alarm Panel	December 2003
NX-4-LXT-TR	4 Zone Security Alarm Panel	December 2003
NX-4-LXT-UK	4 Zone Security Alarm Panel	December 2003
NX-4-NL	4 Zone Security Alarm Panel	December 2003
NX-4-NO	4 Zone Security Alarm Panel	December 2003
NX-4-PL	4 Zone Security Alarm Panel	December 2003
NX-4-PT	4 Zone Security Alarm Panel	December 2003
NX-4-RU	4 Zone Security Alarm Panel	December 2003
NX-4-SE	4 Zone Security Alarm Panel	December 2003
NX-4-TR	4 Zone Security Alarm Panel	December 2003
NX-4-UK	4 Zone Security Alarm Panel	December 2003
NX-4-LX-ZA	4 Zone Security Alarm Panel	December 2003
NX-6-BE	6 Zone Security Alarm Panel	December 2003
NX-6-BO-FG-BE	6 Zone Security Alarm Panel	December 2003
NX-6-BO-FG-GR	6 Zone Security Alarm Panel	December 2003
NX-6-BO-FG-IT	6 Zone Security Alarm Panel	December 2003
NX-6-BO-FG-NL	6 Zone Security Alarm Panel	December 2003
NX-6-BO-FG-PL	6 Zone Security Alarm Panel	December 2003
NX-6-BO-FG-RU	6 Zone Security Alarm Panel	December 2003
NX-6-BO-FG-UK	6 Zone Security Alarm Panel	December 2003
NX-6-CZ	6 Zone Security Alarm Panel	December 2003
NX-6-DK	6 Zone Security Alarm Panel	December 2003

Signature of representative/manufacturer:



Raoul van Bergen
 Manager Control & Communications GE Interlogix B.V.
 Kelvinstraat 7
 6003 DH Weert
 The Netherlands

Place : Weert
 Date : 29 April 2004

Product	Product Description	BOM Revision Date
NX-6-FR	6 Zone Security Alarm Panel	December 2003
NX-6-GR	6 Zone Security Alarm Panel	December 2003
NX-6-IL	6 Zone Security Alarm Panel	December 2003
NX-6-IT	6 Zone Security Alarm Panel	December 2003
NX-6-LX	6 Zone Security Alarm Panel	December 2003
NX-6-LX-CZ	6 Zone Security Alarm Panel	December 2003
NX-6-LXT-ES	6 Zone Security Alarm Panel	December 2003
NX-6-LXT-GB	6 Zone Security Alarm Panel	December 2003
NX-6-LXT-GR	6 Zone Security Alarm Panel	December 2003
NX-6-LXT-IL	6 Zone Security Alarm Panel	December 2003
NX-6-LXT-TR	6 Zone Security Alarm Panel	December 2003
NX-6-LXT-UK	6 Zone Security Alarm Panel	December 2003
NX-6-NL	6 Zone Security Alarm Panel	December 2003
NX-6-NO	6 Zone Security Alarm Panel	December 2003
NX-6-PL	6 Zone Security Alarm Panel	December 2003
NX-6-PT	6 Zone Security Alarm Panel	December 2003
NX-6-RU	6 Zone Security Alarm Panel	December 2003
NX-6-SE	6 Zone Security Alarm Panel	December 2003
NX-6-TR	6 Zone Security Alarm Panel	December 2003
NX-6-UK	6 Zone Security Alarm Panel	December 2003
NX-6-MAG	6 Zone Security Alarm Panel	December 2003
NX-6-LX-ZA	6 Zone Security Alarm Panel	December 2003
NX-8-BE	8 Zone Security Alarm Panel	December 2003
NX-8-BO-FG-BE	8 Zone Security Alarm Panel	December 2003
NX-8-BO-FG-GR	8 Zone Security Alarm Panel	December 2003
NX-8-BO-FG-IT	8 Zone Security Alarm Panel	December 2003
NX-8-BO-FG-NL	8 Zone Security Alarm Panel	December 2003
NX-8-BO-FG-PL	8 Zone Security Alarm Panel	December 2003
NX-8-BO-FG-RIJ	8 Zone Security Alarm Panel	December 2003
NX-8-BO-FG-SE	8 Zone Security Alarm Panel	December 2003
NX-8-BO-IR-FG	8 Zone Security Alarm Panel	December 2003
NX-8-BO-IR-FG-RU	8 Zone Security Alarm Panel	December 2003
NX-8-CB-BE	8 Zone Security Alarm Panel	December 2003
NX-8-CB-CZ	8 Zone Security Alarm Panel	December 2003
NX-8-CB-DK	8 Zone Security Alarm Panel	December 2003
NX-8-CB-ES	8 Zone Security Alarm Panel	December 2003
NX-8-CB-FR	8 Zone Security Alarm Panel	December 2003
NX-8-CB-GR	8 Zone Security Alarm Panel	December 2003
NX-8-CB-IL	8 Zone Security Alarm Panel	December 2003
NX-8-CB-IT	8 Zone Security Alarm Panel	December 2003
NX-8-CB-LX	8 Zone Security Alarm Panel	December 2003
NX-8-CB-LX-IT	8 Zone Security Alarm Panel	December 2003
NX-8-CB-LXR	8 Zone Security Alarm Panel	December 2003
NX-8-CB-LXTR	8 Zone Security Alarm Panel	December 2003
NX-8-CB-NL	8 Zone Security Alarm Panel	December 2003
NX-8-CB-NO	8 Zone Security Alarm Panel	December 2003
NX-8-CB-OT-DK	8 Zone Security Alarm Panel	December 2003
NX-8-CB-PL	8 Zone Security Alarm Panel	December 2003
NX-8-CB-PT	8 Zone Security Alarm Panel	December 2003
NX-8-CB-RU	8 Zone Security Alarm Panel	December 2003
NX-8-CB-SE	8 Zone Security Alarm Panel	December 2003
NX-8-CB-TR	8 Zone Security Alarm Panel	December 2003
NX-8-CZ	8 Zone Security Alarm Panel	December 2003
NX-8-DK	8 Zone Security Alarm Panel	December 2003
NX-8E	8 Zone Security Alarm Panel	December 2003
NX-8E-BE	8 Zone Security Alarm Panel	December 2003
NX-8E-BO-FG-BE	8 Zone Security Alarm Panel	December 2003
NX-8E-BO-FG-IL	8 Zone Security Alarm Panel	December 2003
NX-8E-BO-FG-NL	8 Zone Security Alarm Panel	December 2003
NX-8E-BO-FG-PI	8 Zone Security Alarm Panel	December 2003
NX-8E-BO-FG-SE	8 Zone Security Alarm Panel	December 2003
NX-8E-CB	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-BE	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-CZ	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-DK	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-ES	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-FR	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-GR	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-IL	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-IT	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-LX	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-LXT	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-NL	8 Zone Security Alarm Panel	December 2003

Signature of representative/manufacturer:



Raoul van Bergen
 Manager Control & Communications GE Interlogix B.V.
 Kelvinstraat 7
 6003 DH Weert
 The Netherlands

Place : Weert
 Date : 29 April 2004

Product	Product Description	BOM Revision Date
NX-8E-CB-NO	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-PL	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-PT	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-RU	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-SE	8 Zone Security Alarm Panel	December 2003
NX-8E-CB-TR	8 Zone Security Alarm Panel	December 2003
NX-8E-CZ	8 Zone Security Alarm Panel	December 2003
NX-8E-DK	8 Zone Security Alarm Panel	December 2003
NX-8E-ES	8 Zone Security Alarm Panel	December 2003
NX-8E-FR	8 Zone Security Alarm Panel	December 2003
NX-8E-GR	8 Zone Security Alarm Panel	December 2003
NX-8E-IL	8 Zone Security Alarm Panel	December 2003
NX-8E-IT	8 Zone Security Alarm Panel	December 2003
NX-8E-IX	8 Zone Security Alarm Panel	December 2003
NX-8E-LX-IL	8 Zone Security Alarm Panel	December 2003
NX-8E-LXT	8 Zone Security Alarm Panel	December 2003
NX-8E-LXT-ES	8 Zone Security Alarm Panel	December 2003
NX-8E-LXT-SE	8 Zone Security Alarm Panel	December 2003
NX-8E-NL	8 Zone Security Alarm Panel	December 2003
NX-8E-NO	8 Zone Security Alarm Panel	December 2003
NX-8E-PL	8 Zone Security Alarm Panel	December 2003
NX-8E-PT	8 Zone Security Alarm Panel	December 2003
NX-8E-RU	8 Zone Security Alarm Panel	December 2003
NX-8-ES	8 Zone Security Alarm Panel	December 2003
NX-8E-SF	8 Zone Security Alarm Panel	December 2003
NX-8E-TR	8 Zone Security Alarm Panel	December 2003
NX-8-FR	8 Zone Security Alarm Panel	December 2003
NX-8-GR	8 Zone Security Alarm Panel	December 2003
NX-8-IL	8 Zone Security Alarm Panel	December 2003
NX-8-IT	8 Zone Security Alarm Panel	December 2003
NX-8-LR-ES	8 Zone Security Alarm Panel	December 2003
NX-8-LX	8 Zone Security Alarm Panel	December 2003
NX-8-LX-CZ	8 Zone Security Alarm Panel	December 2003
NX-8-LX-IL	8 Zone Security Alarm Panel	December 2003
NX-8-LX-IT	8 Zone Security Alarm Panel	December 2003
NX-8-LXR	8 Zone Security Alarm Panel	December 2003
NX-8-LXTR-FS	8 Zone Security Alarm Panel	December 2003
NX-8-LXTR-GR	8 Zone Security Alarm Panel	December 2003
NX-8-LXTR-IL	8 Zone Security Alarm Panel	December 2003
NX-8-LXTR-TR	8 Zone Security Alarm Panel	December 2003
NX-8-LXTR-UK	8 Zone Security Alarm Panel	December 2003
NX-8-LXT-UK	8 Zone Security Alarm Panel	December 2003
NX-8-NL	8 Zone Security Alarm Panel	December 2003
NX-8-NO	8 Zone Security Alarm Panel	December 2003
NX-8-OT-DK	8 Zone Security Alarm Panel	December 2003
NX-8-PL	8 Zone Security Alarm Panel	December 2003
NX-8-PT	8 Zone Security Alarm Panel	December 2003
NX-8-RU	8 Zone Security Alarm Panel	December 2003
NX-8-SE	8 Zone Security Alarm Panel	December 2003
NX-8-TR	8 Zone Security Alarm Panel	December 2003
NX-8-UK	8 Zone Security Alarm Panel	December 2003
NX-8-CB-IXR-GR	8 Zone Security Alarm Panel	December 2003
NX-8-LX-ZA	8 Zone Security Alarm Panel	December 2003
NX-8E-LX-ZA	8 Zone Security Alarm Panel	December 2003
TD300-E101D	35VA Altair Transformer	December 2003

Signature of representative/manufacturer:



Raoul van Bergen
 Manager Control & Communications GE Interlogix B.V.
 Kelvinstraat 7
 6003 DH Weert
 The Netherlands

Place : weert
 Date : 29 April 2004

www.gesecurity.net

EMEA Distribution is a division of GE Security EMEA bvba

COPYRIGHT ©2006

© GE Security EMEA bvba. All rights reserved. GE Security EMEA bvba grants the right to reprint this manual for internal use only. GE Security EMEA bvba reserves the right to change information without notice.